



bestchoiceproducts



INSTRUCTION MANUAL

Deluxe Cottage

! NOTICE

Please retain these instructions for future reference.

- Make sure to remove all packaging material and from included parts.
- Avoid extended exposure to direct sunlight and excessive heat.
- Follow all instructions carefully.
- Adult assembly is required.
- Do not alter this product in any way as it may result in product failure.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is for children ages 3 and up.

! WARNING

- This product contains small parts, please assemble out of the reach of small children to avoid choking hazard.
- Do not immerse this product in water.
- Do not store this item near an open flame.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



2 AAA BATTERIES
(NOT PROVIDED)






1 PERSON
ASSEMBLY














UP TO 30 MIN.
ASSEMBLY

PARTS

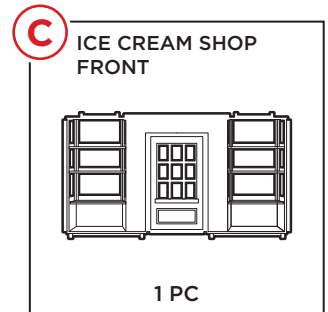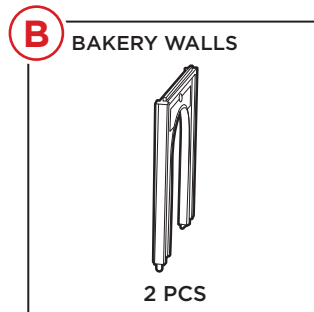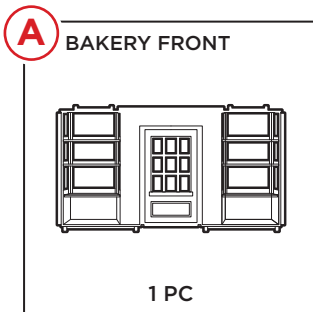


PARTS

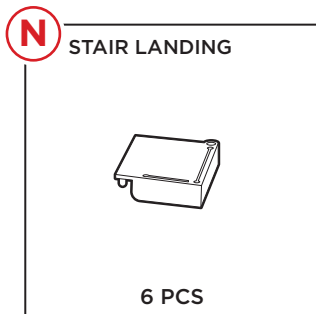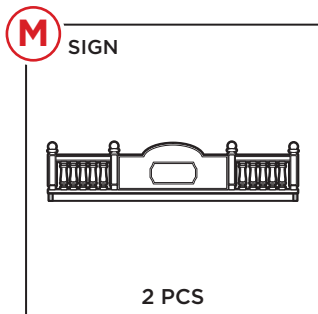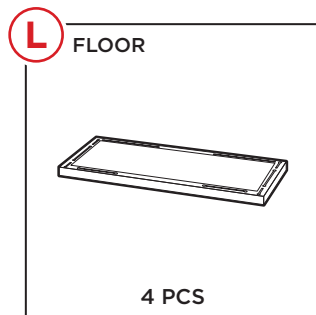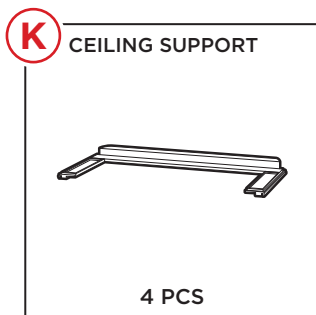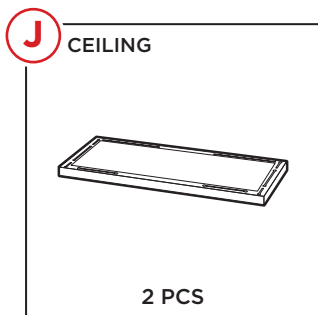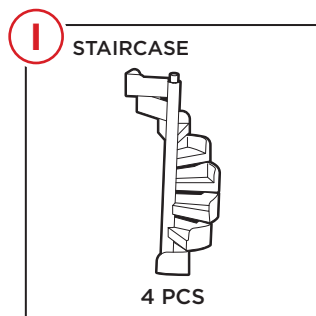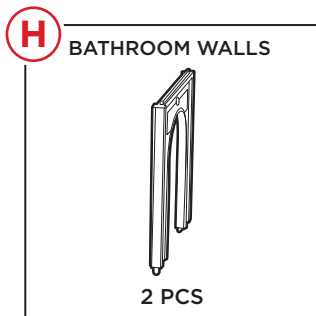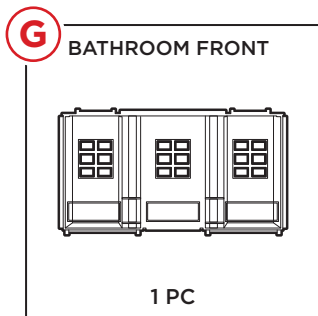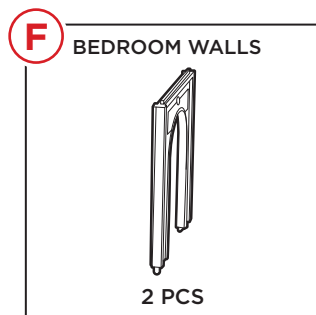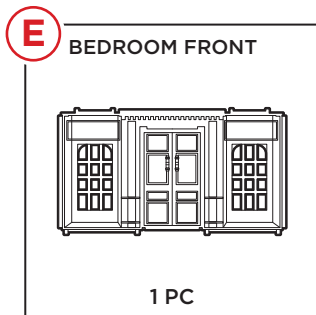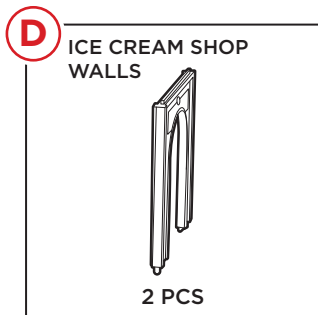

PRODUCT ASSEMBLY

1

Locate the part E bedroom front and connect two part F bedroom walls.
Connect the front and wall assembly to one part L floor.


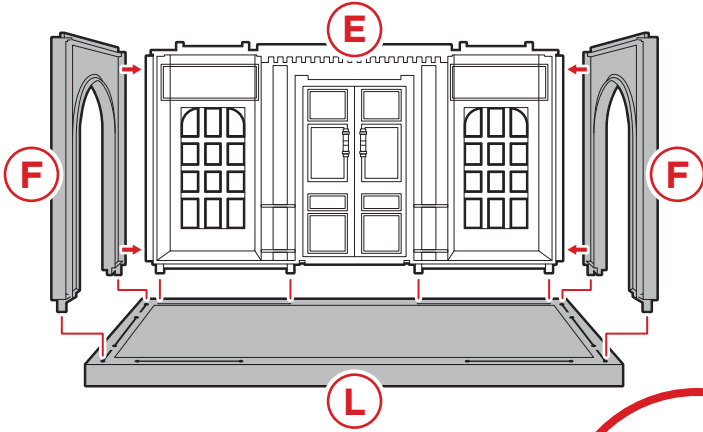


2

Place one part K ceiling support on top of the assembly and snap until secure.

Place one part J ceiling on top of the ceiling support and snap until secure.


Repeat steps 1-2 to assemble the bathroom, then set both assemblies aside.

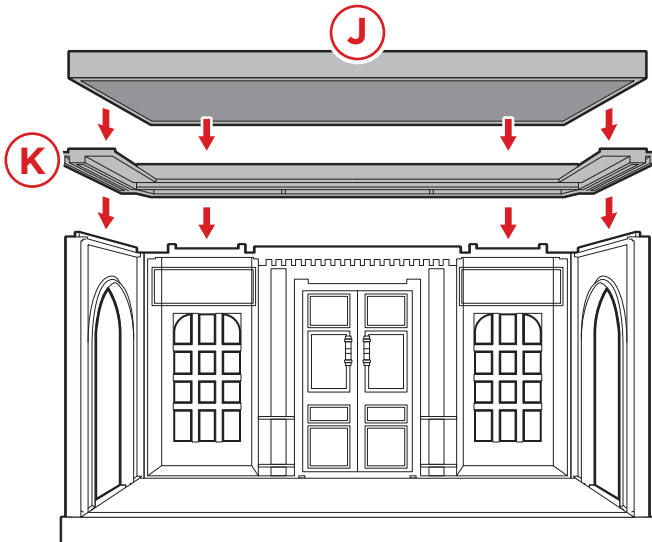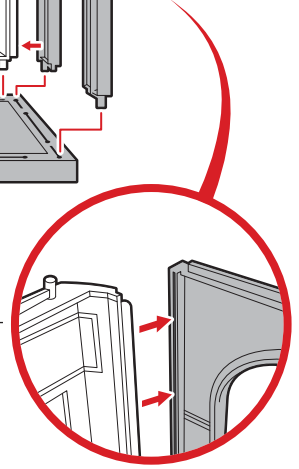

PRODUCT ASSEMBLY

3


Connect the part C ice cream shop front to two part D ice cream shop walls.
Connect the front and wall assembly to one part L floor.

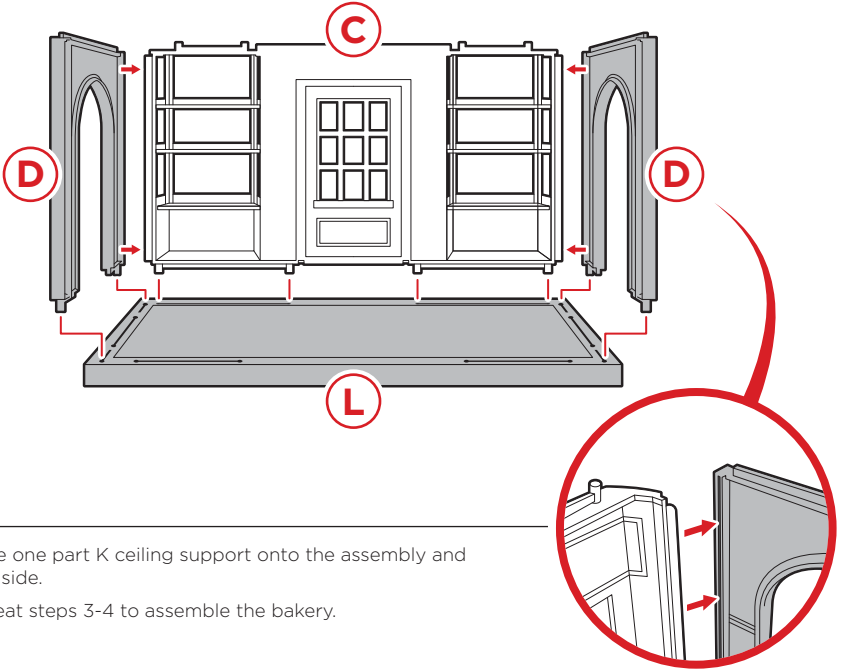

4

Place one part K ceiling support onto the assembly and set aside.


Repeat steps 3-4 to assemble the bakery.

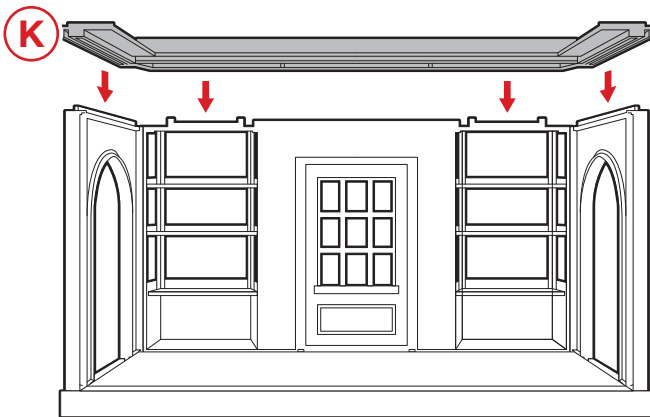

PRODUCT ASSEMBLY


5

Place the bedroom assembly onto the ice cream shop and snap until secure.
Place the bathroom assembly onto the bakery and snap until secure.
Insert two part M signs into the bedroom and bathroom fronts.

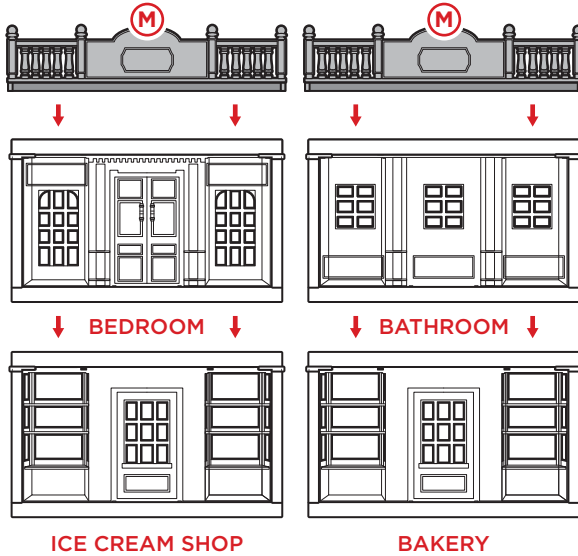

6


Attach six part N stair landings at the ground, second level, and roof level.
Attach four part I staircases between the stair landings.

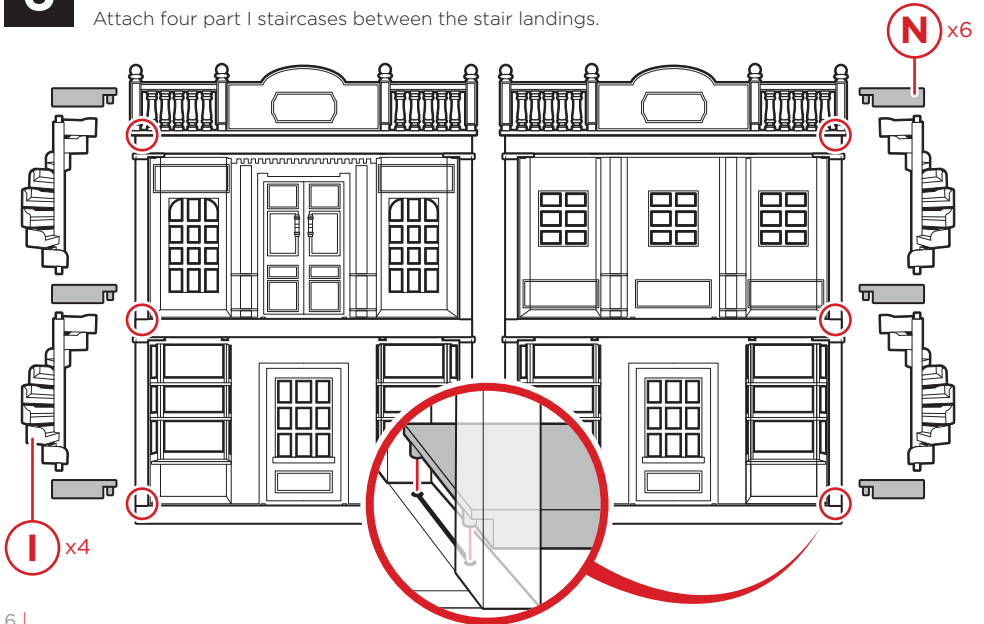

INSTALLING BATTERIES

NOTE: This item requires a total of 2 AAA Batteries.

1. Locate the battery compartment on the top of the flower cart, then remove any protective tabs.
2. Insert two AAA batteries.

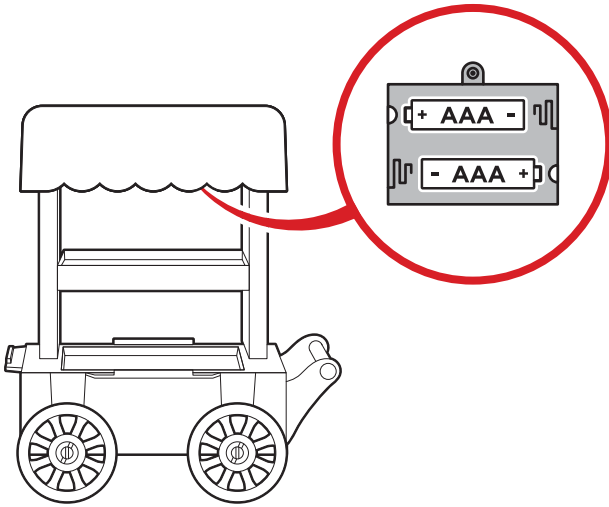

LIGHTING FEATURES

1. Locate and tap the fingerprint icon on top of the flower cart to activate the lights; tap again to turn the lights off.
2. Locate the streetlight accessories and remove the protective tabs, then gently twist counterclockwise to activate the lights; twist back to turn the lights off.
3. Locate the ceiling light accessories and remove the protective tabs, then gently twist to activate the lights; twist back to turn the lights off.



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.