



BEST CHOICE
PRODUCTS



INSTRUCTION MANUAL

Arched Storage Cabinet



134.2 LBS
TOTAL
CAPACITY



28.6 LBS
TOP SHELF
CAPACITY



24.2 LBS
UPPER SHELF
CAPACITY



28.6 LBS
MIDDLE SHELF
CAPACITY



24.2 LBS
LOWER SHELF
CAPACITY



28.6 LBS
CABINET BOTTOM
CAPACITY



2 PERSON
ASSEMBLY



UP TO 60 MIN.
ASSEMBLY

! NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- To prevent swelling or warping, wipe away any excess water on the surfaces of the product
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for indoor use only.
- This product is intended for residential use only.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



 
ALLEN WRENCH
(PROVIDED)



POWER DRILL
(RECOMMENDED)

HARDWARE

1 CAM BOLT



35 PCS

2 CAM LOCK



35 PCS

3 M6 x 30mm DOWEL



35 PCS

4 M4 x 35mm WOOD SCREW



24 PCS

5 M3.5 x 12mm SCREW



 
24 PCS

6 SHELF SUPPORT




8 PCS

7 HINGE











4 PCS

 8 CABINET DOOR HANDLE & SCREWS



2 SETS

        HARDWARE

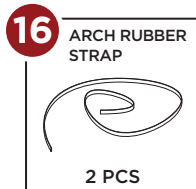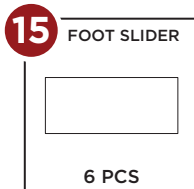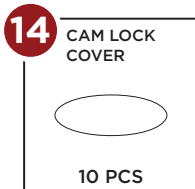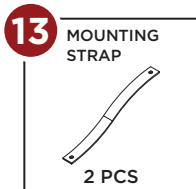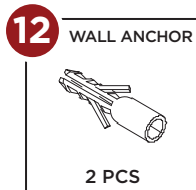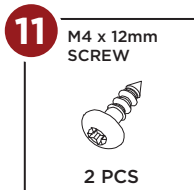
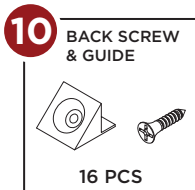
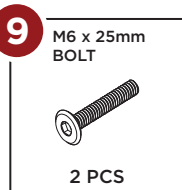


(SKY9403 ONLY)



(SKY9403 ONLY)

   
PARTS

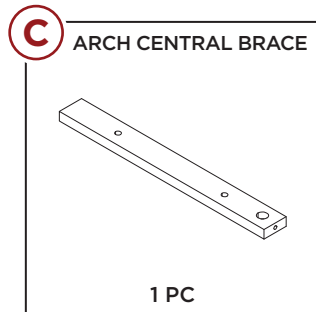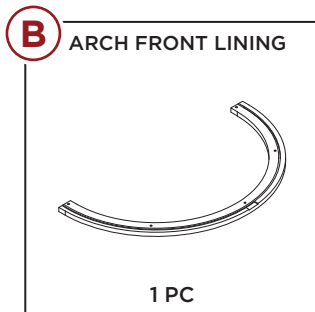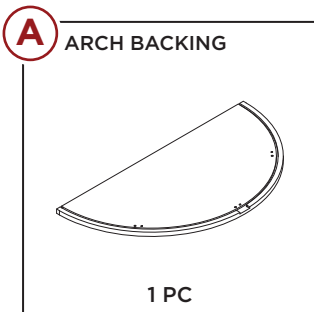

PARTS

D

 
ARCH TOP BRACE

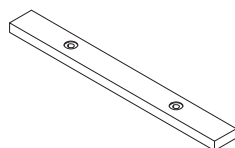

1 PC

E

 
ARCH SIDE BRACE

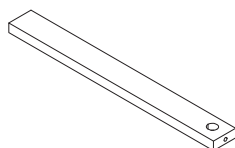

2 PCS

F

 
TOP SHELF

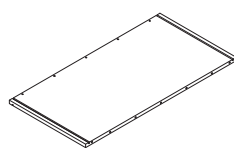

1 PC

G

 
CABINET LEFT SIDE

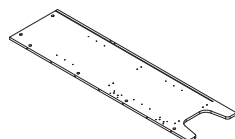

1 PC

H

 
CABINET RIGHT SIDE

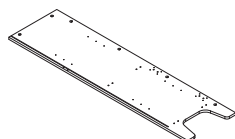

1 PC

I

 
SHELF FRONT

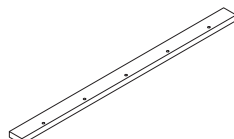

2 PCS

J

 
UPPER SHELF

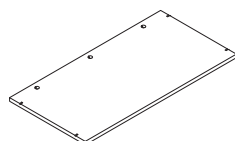

1 PC

K

 
MIDDLE SHELF

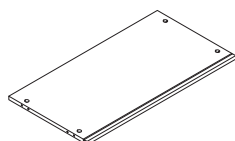

1 PC

L

 
BOTTOM SHELF

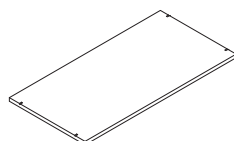

1 PC

M

 
CABINET BOTTOM

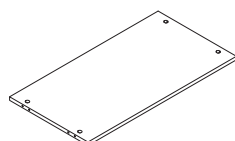

1 PC

N

 
TOP DIVIDER

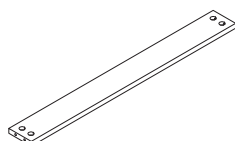

1 PC

O

 RIGHT FRONT FRAME SIDE

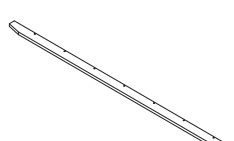


1 PC

PARTS

P

 
LEFT FRONT FRAME
SIDE

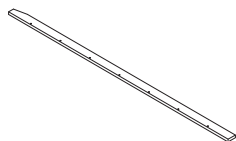

1 PC

Q

 
DOOR

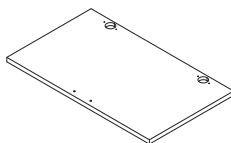

2 PCS

R

 
MOUNTING BLOCK



4 PCS

S

 
BOTTOM BACK BOARD

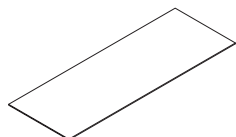

2 PCS

T

 
UPPER BACK BOARD

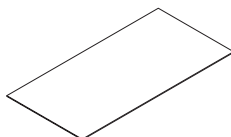

2 PCS

U

 ARCH COVER BOARD

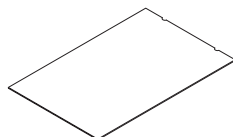

2 PCS

V

BACK BOARD DIVIDER



 
2 PCS

PRODUCT ASSEMBLY

1

Locate the **part B arch front lining** and insert five **part 1 cam bolts**.


Locate two **part I shelf front** and insert six **part 1 cam bolts**, three bolts per base frame.

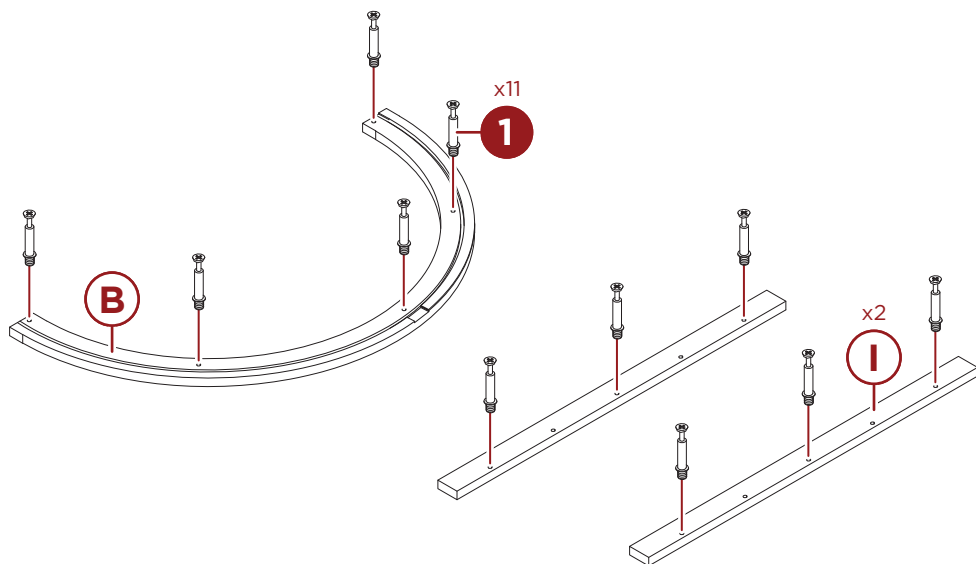

2

Locate the **part A arch backing** and attach the **part C arch central brace** with one **part 4 wood screw** and one **part 3 dowel**.

 
Attach two **part E arch side braces** with two **part 4 screws** and two **part 3 dowels**, one screw and one dowel per brace.

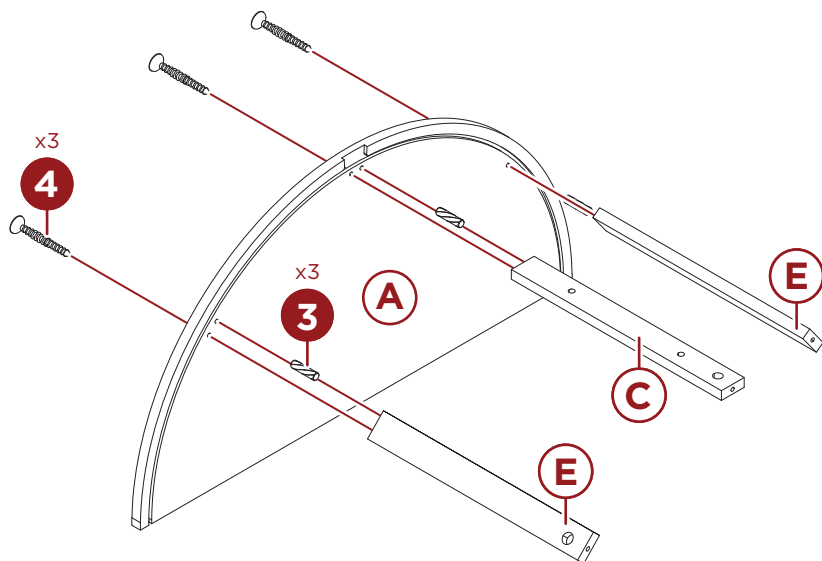

PRODUCT ASSEMBLY



3

 Insert two **part 3 dowels** into the bottom of the **part A arch backing**.
Attach the **part F top shelf** to the **part A arch backing** with three **part 4 screws**.

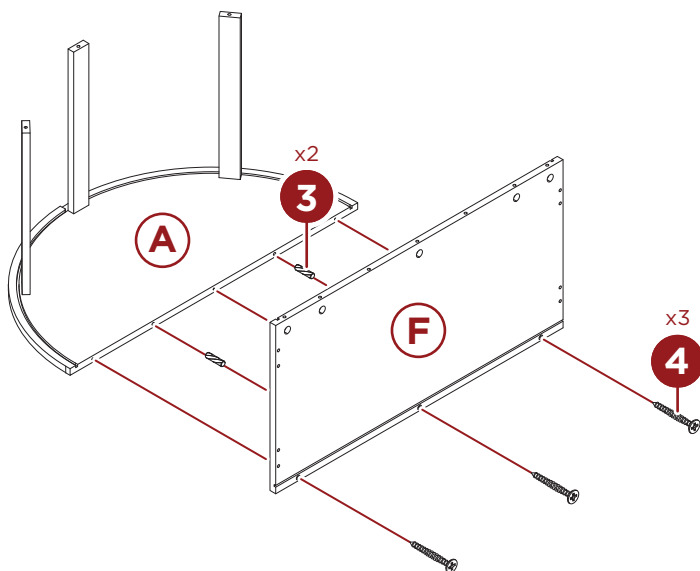

4

  Insert two **part 2 cam locks** into the bottom of the **part F top shelf**.
Insert one **part 2 cam lock** into the **part C arch central brace** and **part E arch side braces**, three locks total.
Attach the **part B arch front lining** to the **part C & E arch braces** and the **part F top shelf**. Turn the cam locks to secure.

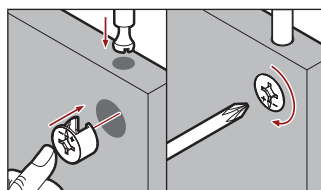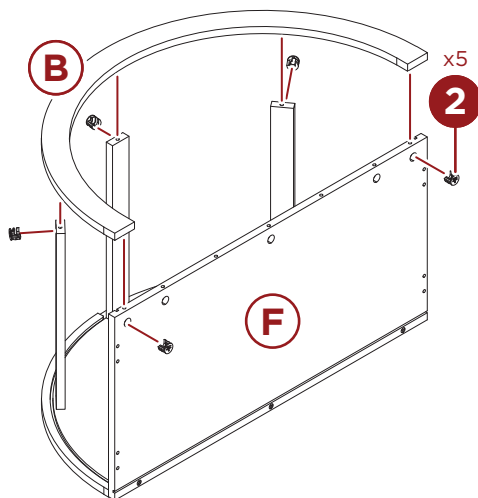


Use a screwdriver to turn the cam lock to secure the cam bolt.

PRODUCT ASSEMBLY

5

Slide two **part U arch cover boards** into their designated grooves between the **part A & B arch front/backing**, taking care to insert cover boards so the fastener hole notches sit at the top of the arch.

 Attach the **part D arch top brace** to the **part C arch central brace** through the **part U arch cover boards** with two **part 9 bolts**.

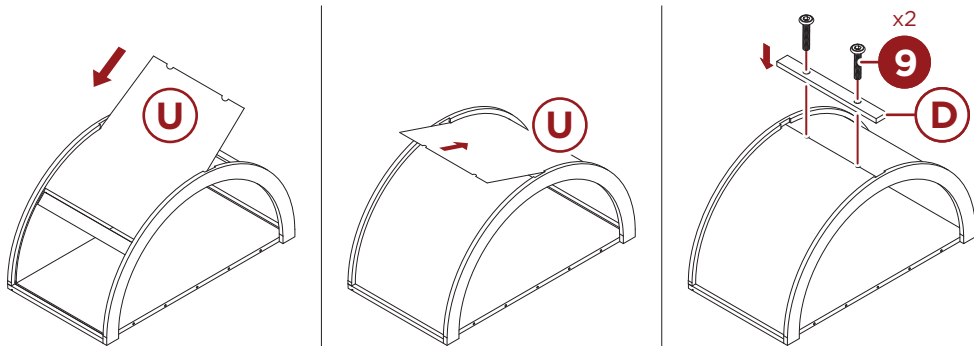


6




Insert four **part 1 cam bolts** into the bottom of the **part F top shelf**.

Attach the **part I arch base frame** to the **part F top shelf** with two **part 3 dowels**.

 Insert three **part B cam locks** into the bottom of the **part F top shelf**. Turn the cam locks to secure.

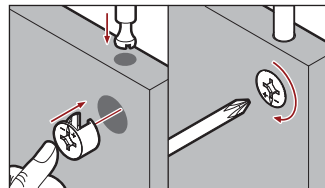

   
Use a screwdriver to turn the cam lock to secure the cam bolt.

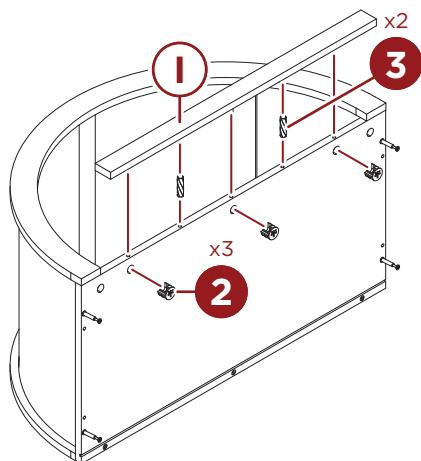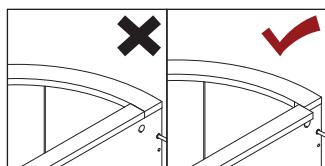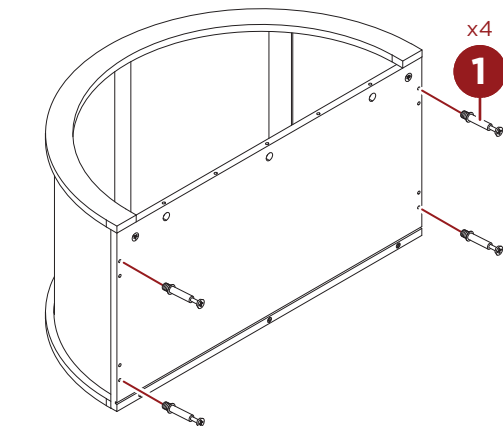

PRODUCT ASSEMBLY

7

 
Insert six **part 1 cam bolts** each into the **part G** and **H cabinet sides**, twelve cam bolts total.

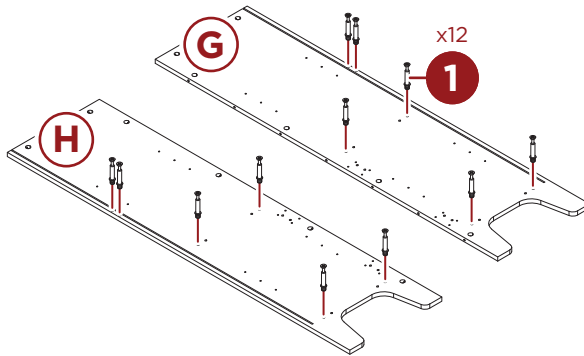


8

Locate the **part N top divider** and insert two **part 2 cam locks**. Attach it to the **part H cabinet right side**. Turn the cam locks to secure.

 Locate the **part K middle shelf** and **part M cabinet bottom**, then insert four **part 2 cam locks** and four **part 3 dowels**. Attach both shelves to the **part H cabinet right side**. Turn the cam locks to secure.

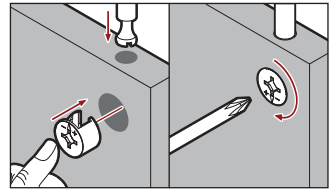

 Use a screwdriver to turn the cam lock to secure the cam bolt.

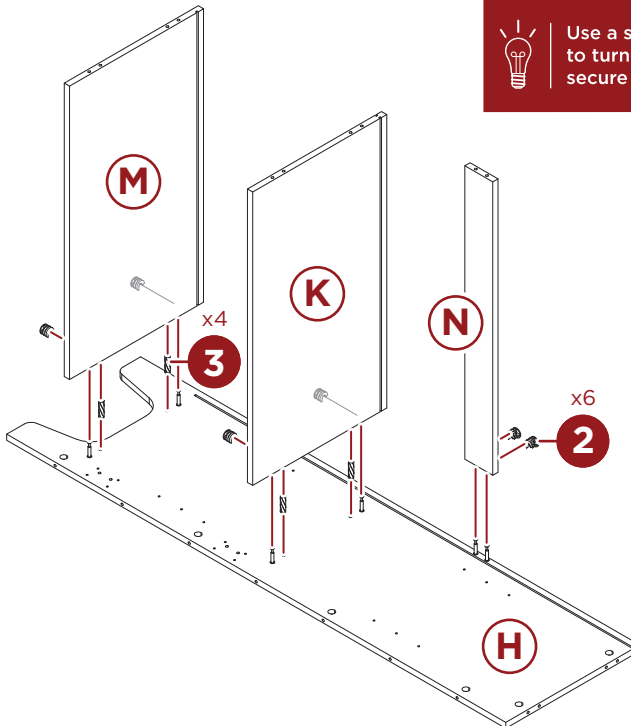


PRODUCT ASSEMBLY

9

Slide one **part S bottom back board** into the grooves on the **part M cabinet bottom** and the **part H cabinet right side**.

Slide one **part V back board divider** on the top edge of the **part S bottom back board**.

 Slide one **part S bottom back board** between the **part V back board divider** and the **part K middle shelf**.

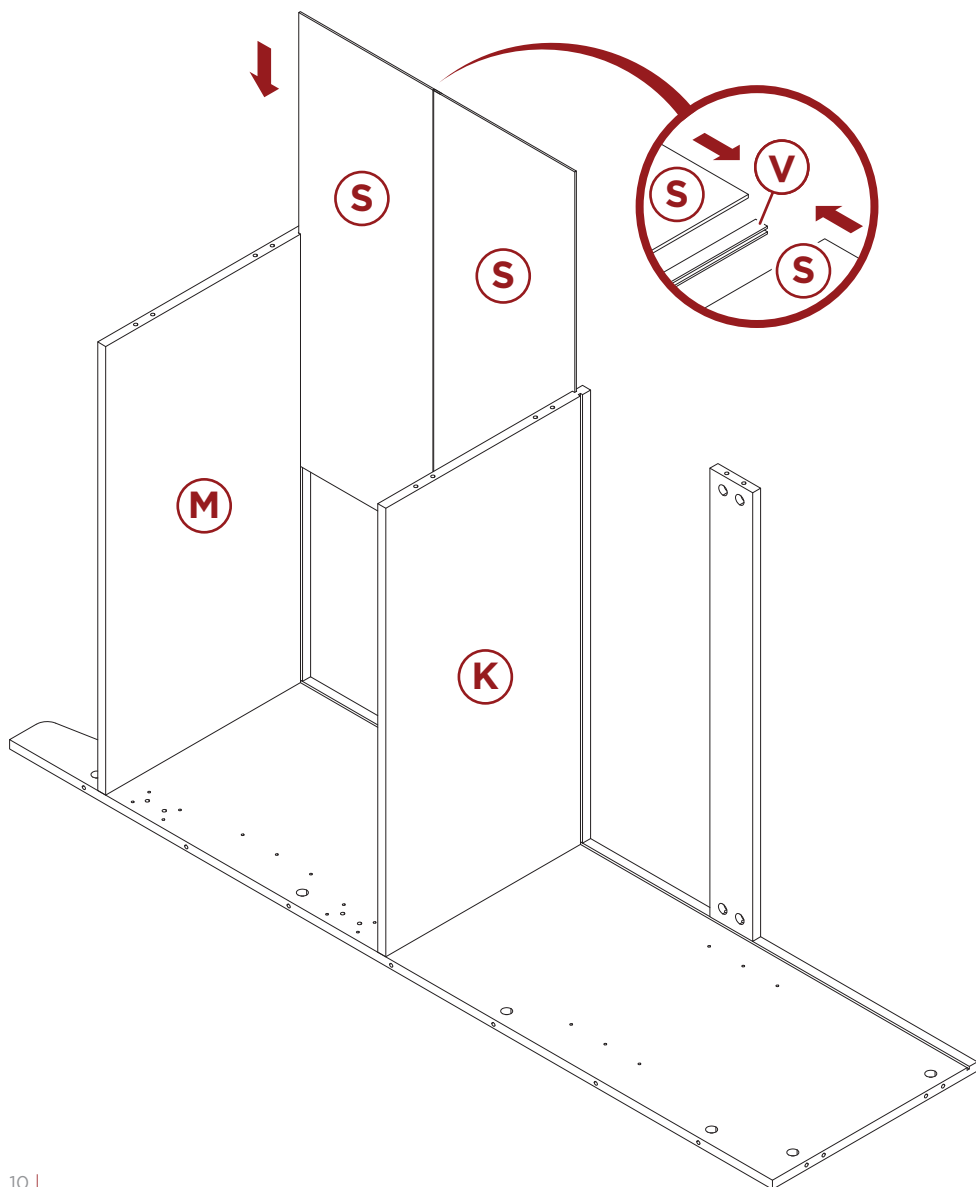


PRODUCT ASSEMBLY

10


Insert two **part 2** cam locks into the **part N** top divider.

Insert two **part 2** cam locks and two **part 3** dowels each into the **part K** middle shelf and **part M** cabinet bottom.

 Attach the **part G** cabinet left side to the **part N** top divider, **part K** middle shelf, and **part M** cabinet bottom. Turn the cam locks to secure.

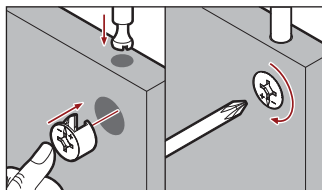

 Use a screwdriver to turn the cam lock to secure the cam bolt.

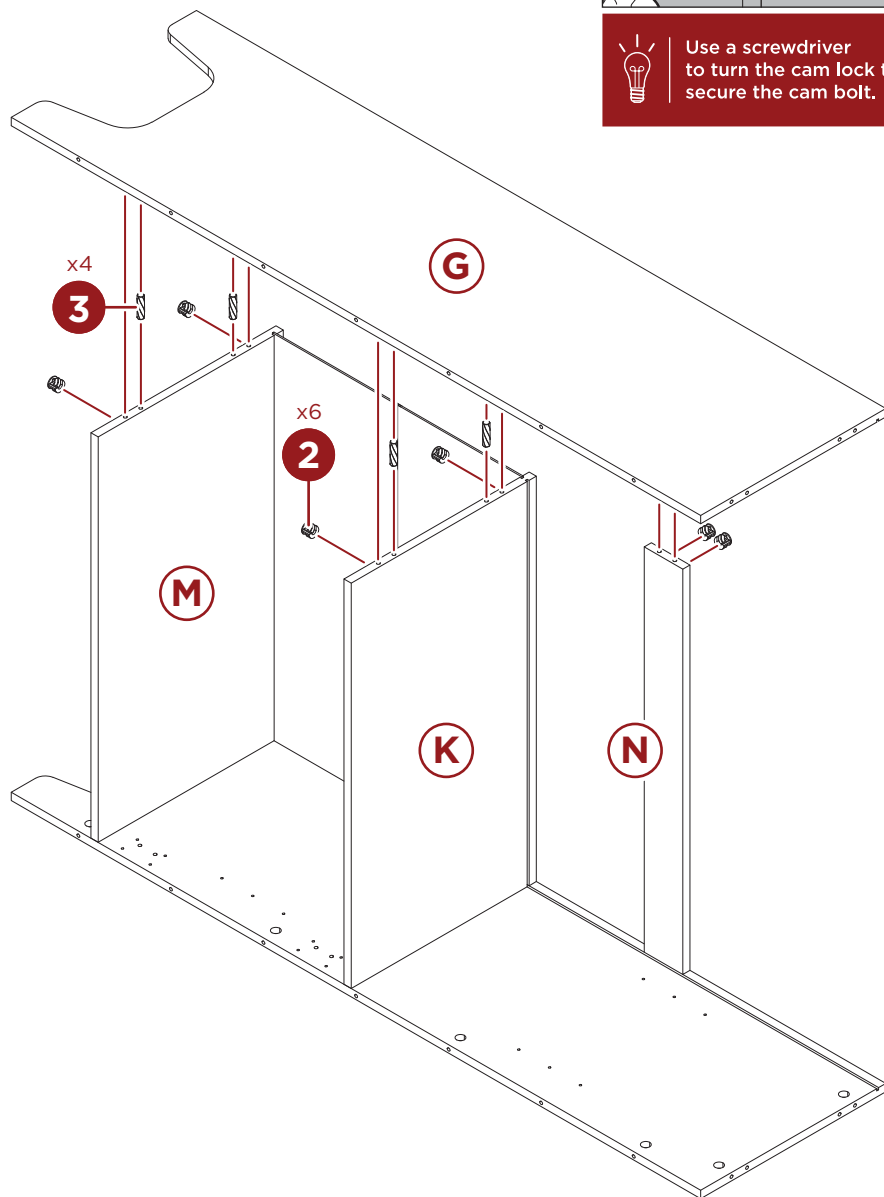


PRODUCT ASSEMBLY

11

Stand the cabinet assembly upright then insert one **part T upper back board** between the **part H & G cabinet sides**.

 
Slide the one **part V back board divider** onto the top edge of the upper back board, then slide a second **part T upper back board** between the **part H & G cabinet sides**.

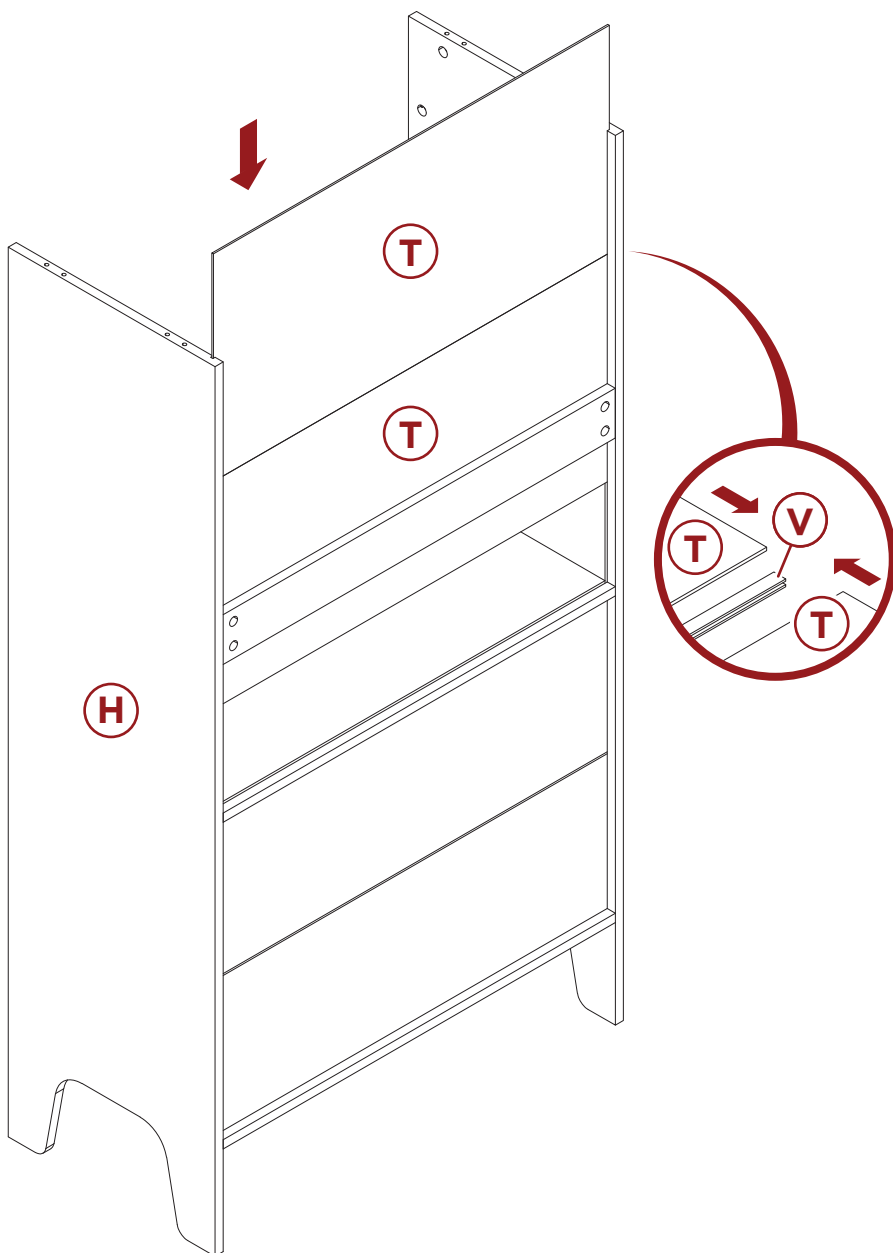

PRODUCT ASSEMBLY

12

 
Locate the **part O** and **part P** front frames and insert eight **part 1** cam bolts, four bolts per frame.

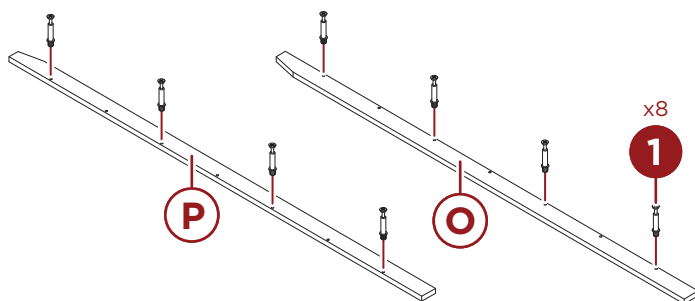


13

Insert four **part 2** cam locks and three **part C** dowels each into the **part H** and **part G** cabinet sides, eight cam locks and six dowels total.

 Attach the **part O** and **part P** front frames to the **part H** and **part G** cabinet sides, then turn the cam locks to secure.

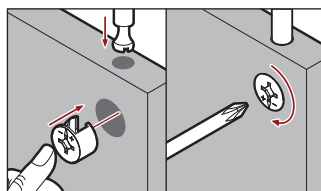

 Use a screwdriver to turn the cam lock to secure the cam bolt.

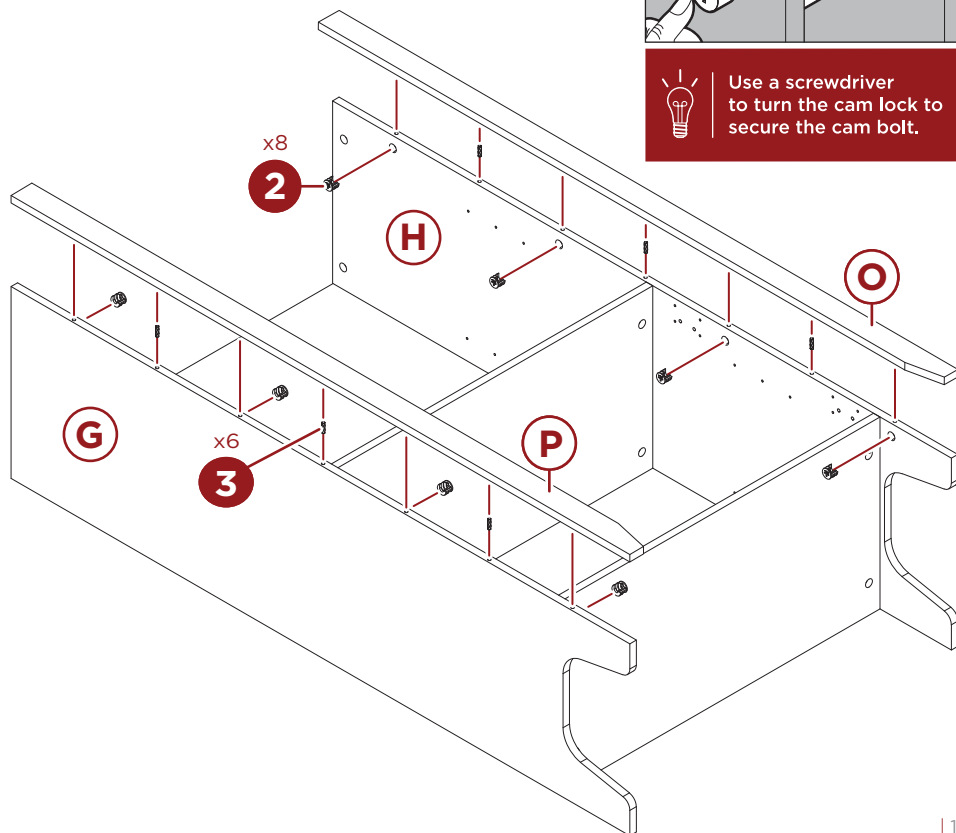


PRODUCT ASSEMBLY

14

Place one **part 14 cam lock cover** over the top three cam locks on each side of the cabinet assembly, six covers total.

 Place four **part 15 foot sliders** onto the bottom of the **part H** and **part G cabinet sides**, then place two foot sliders on the bottom of each **part O** and **part P front frame**, six foot sliders total.

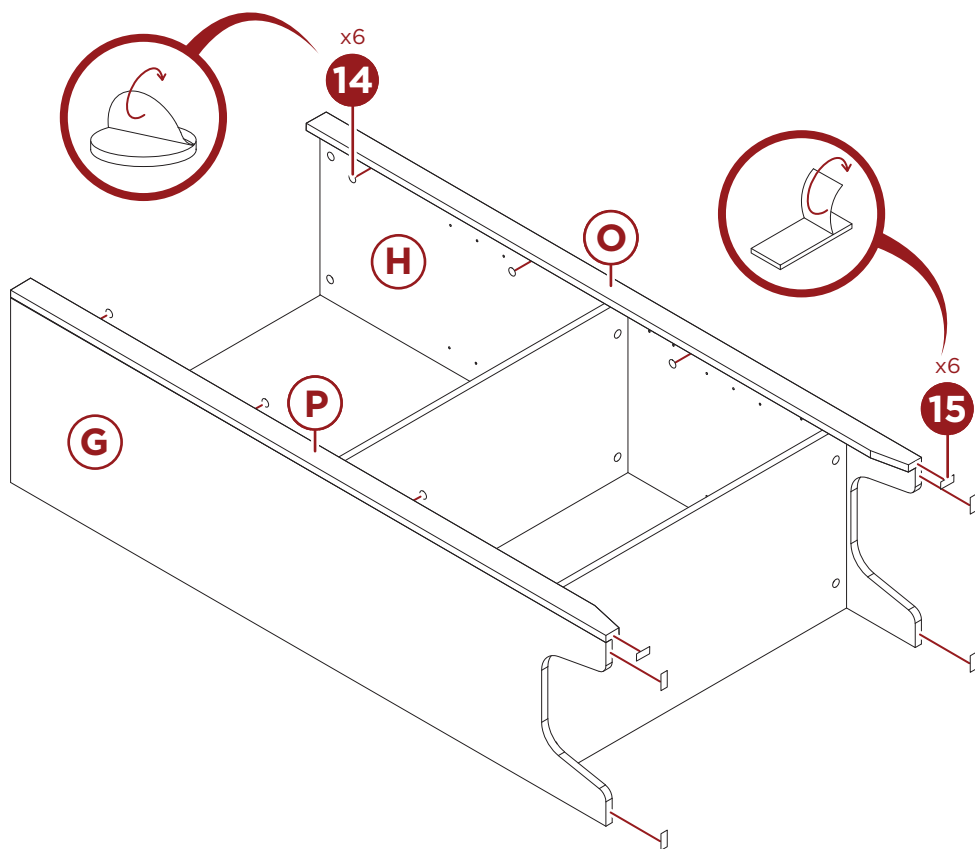


PRODUCT ASSEMBLY

15

Insert two **part 2 cam locks** and two **part 3 dowels** each into the top of the **part H** and **part G cabinet sides**, four cam locks and four dowels total.

 
Attach the **part F top shelf** to the **part H** and **part G cabinet sides**. Turn the cam locks to secure, then cover each cam lock with one **part 14 cam lock cover**, four covers total.

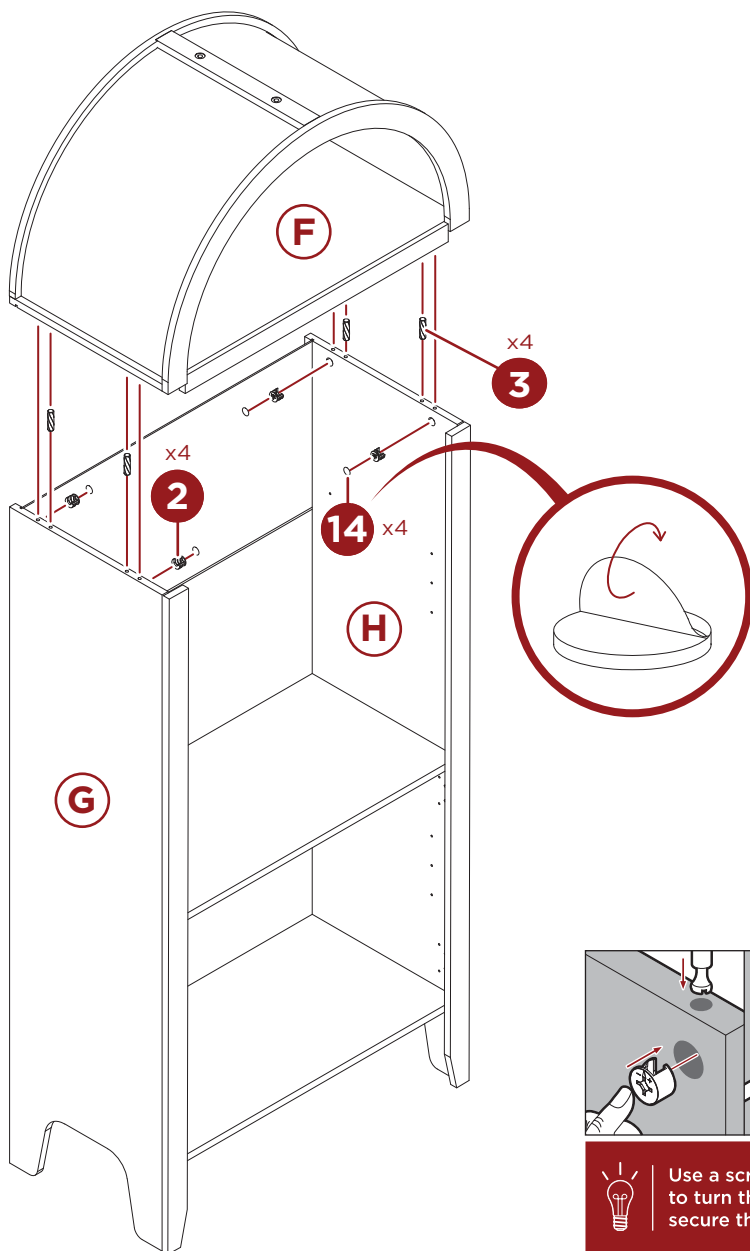

PRODUCT ASSEMBLY

16

 
Locate the **part J upper shelf** and insert three **part 2 cam locks** and two **part 3 dowels**.
Attach one **part I shelf front** to the **part J upper shelf**.

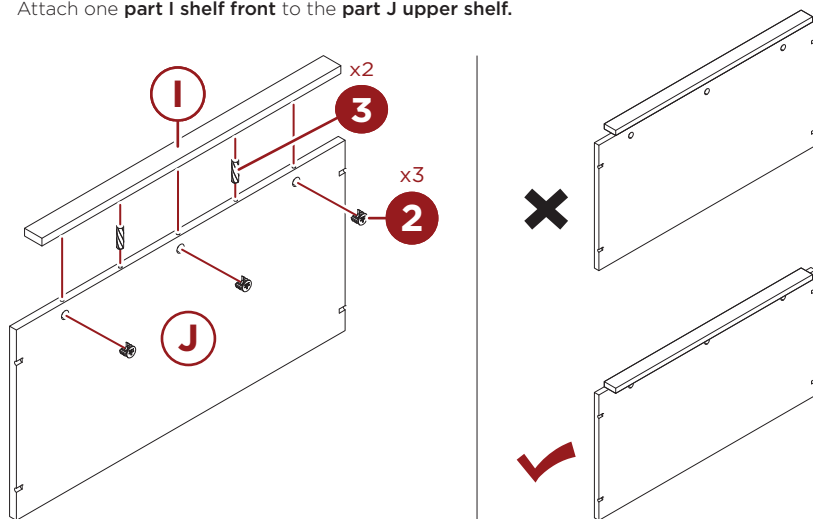

17

Insert eight **part 6 shelf supports** into the **part H** and **part G cabinet sides** as desired.

 
NOTE: To ensure the shelves sit level, be sure the shelf supports in either cabinet side are mounted parallel to each other.

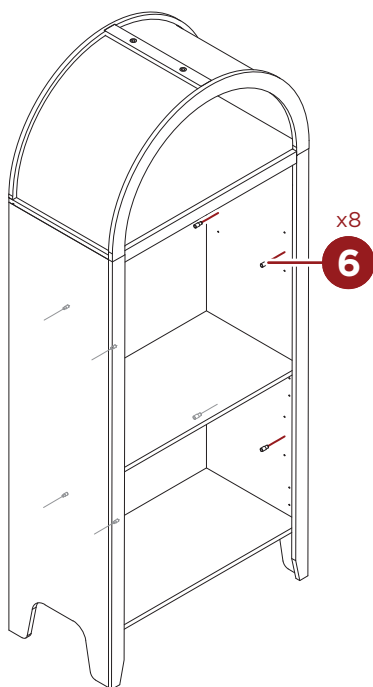

PRODUCT ASSEMBLY


18

 Slide the **part J upper shelf** and **part L bottom shelf** onto the **part 6 shelf supports**.

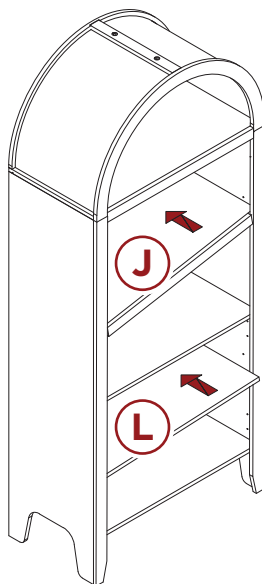

19

 
Locate one **part Q door** and attach two **part 7 hinges** with four **part 5 screws**, two screws per hinge. Repeat to assemble a second door.

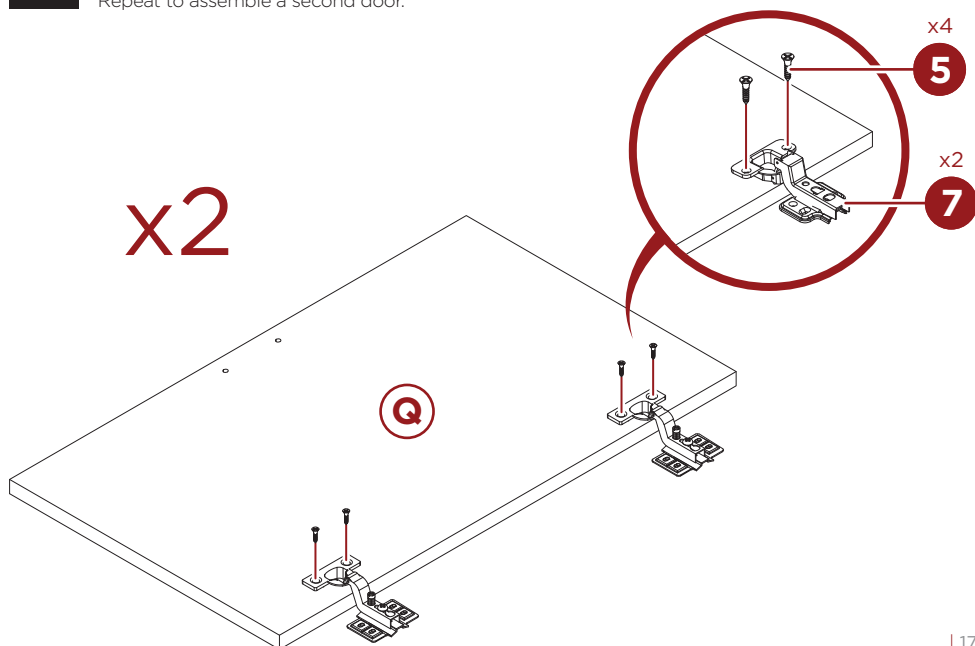

PRODUCT ASSEMBLY

20

 Locate four **part R mounting blocks** and insert two **part 3 dowels** into each, eight dowels total. Attach the two **part R mounting blocks** each to the **part H** and **part G cabinet sides** with sixteen **part 4 screws**, four screws per mounting block.

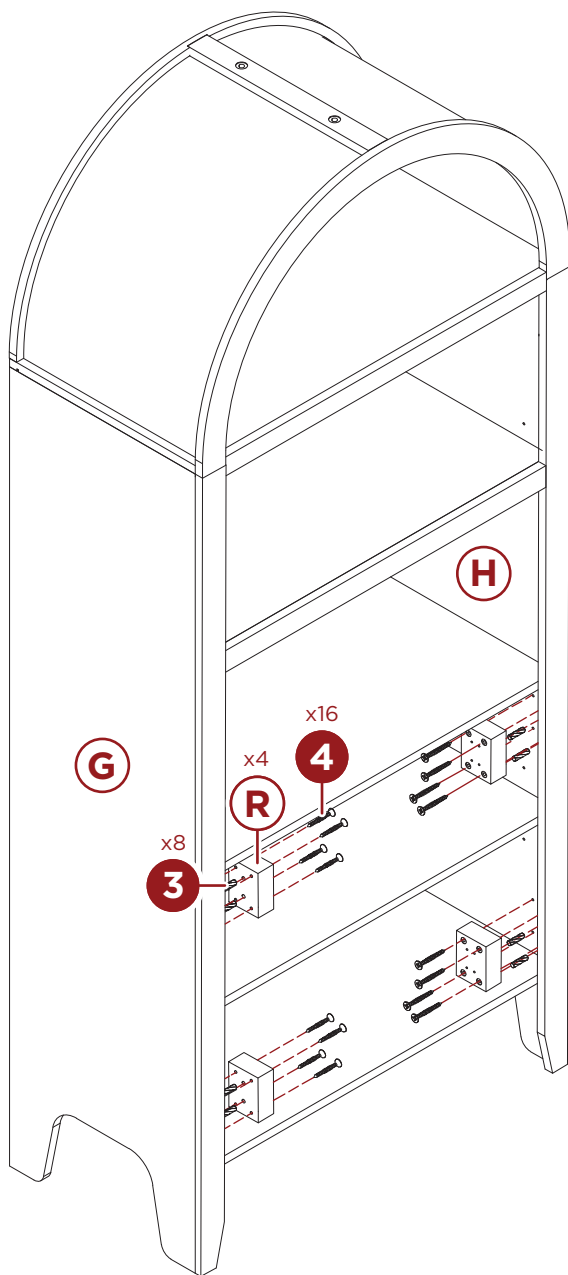


PRODUCT ASSEMBLY

21

Attach the doors by securing the **part 7 hinges** to the **part R mounting blocks** with sixteen **part 5 screws**, four screws per hinge.

 Attach one **part 8 cabinet door handle** to one **part Q door** with the two included screws, repeat to attach the second handle to the other door.

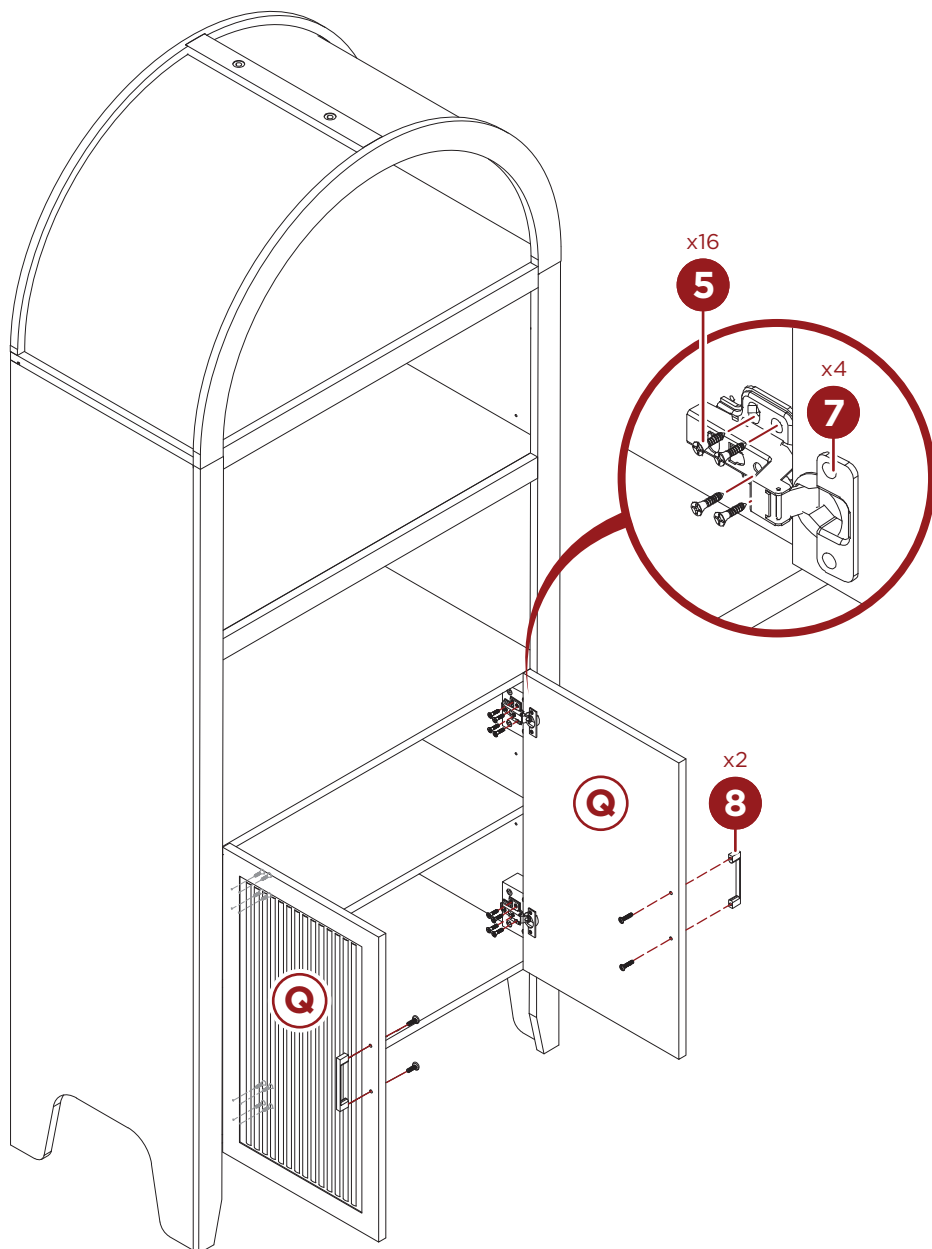


PRODUCT ASSEMBLY

22

Attach two **part 13 mounting straps** to the back of the **part A arch backing** with two **part 11 screws**.

 Attach sixteen **part 10 back screw & guides** to the back of cabinet assembly as shown.

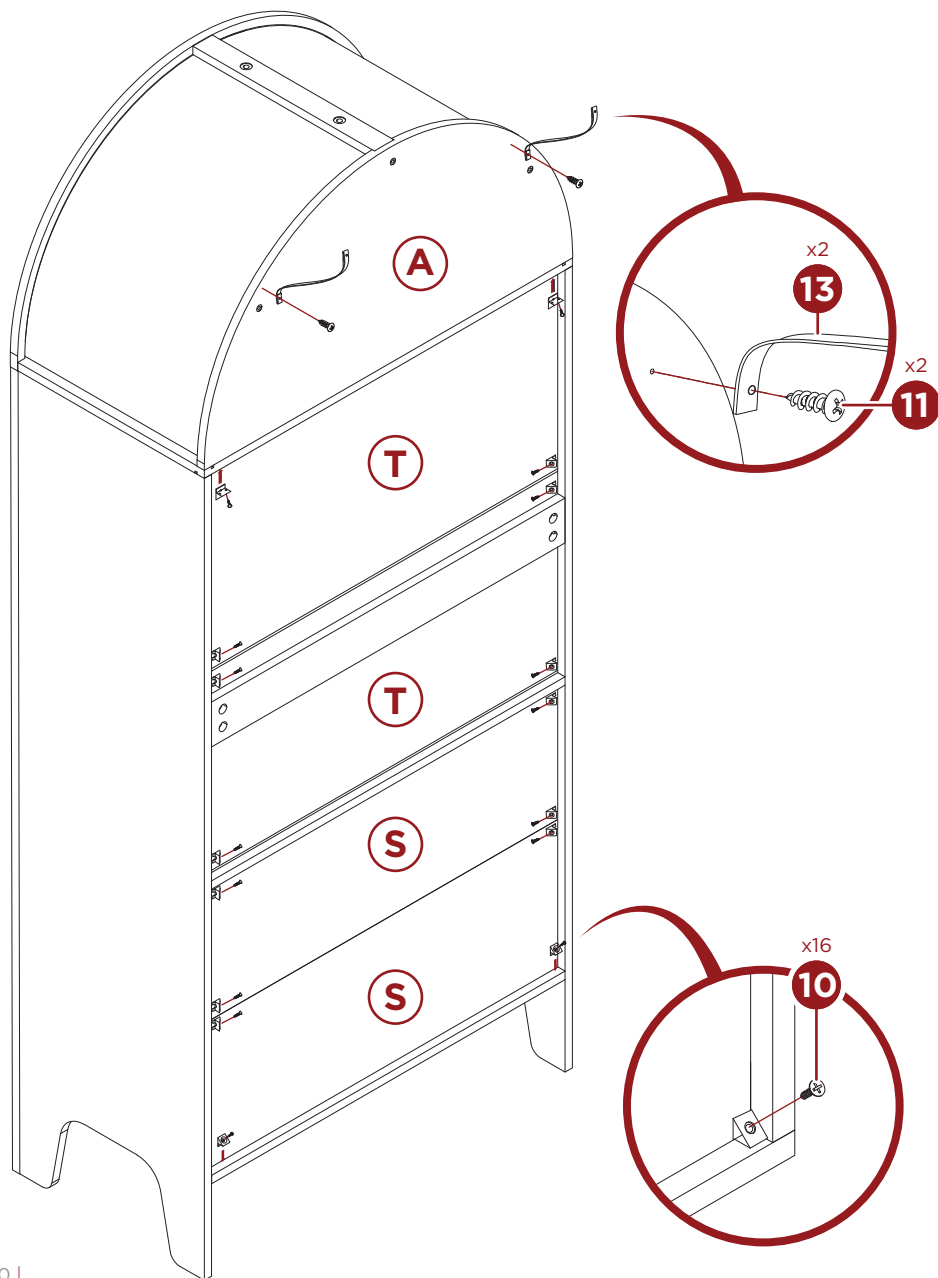


PRODUCT ASSEMBLY

23



SKY9403 ONLY: Place two **part 16** rubber straps onto **part A** arch backing.

 Place two **part 17** rubber straps onto **part F** top shelf.

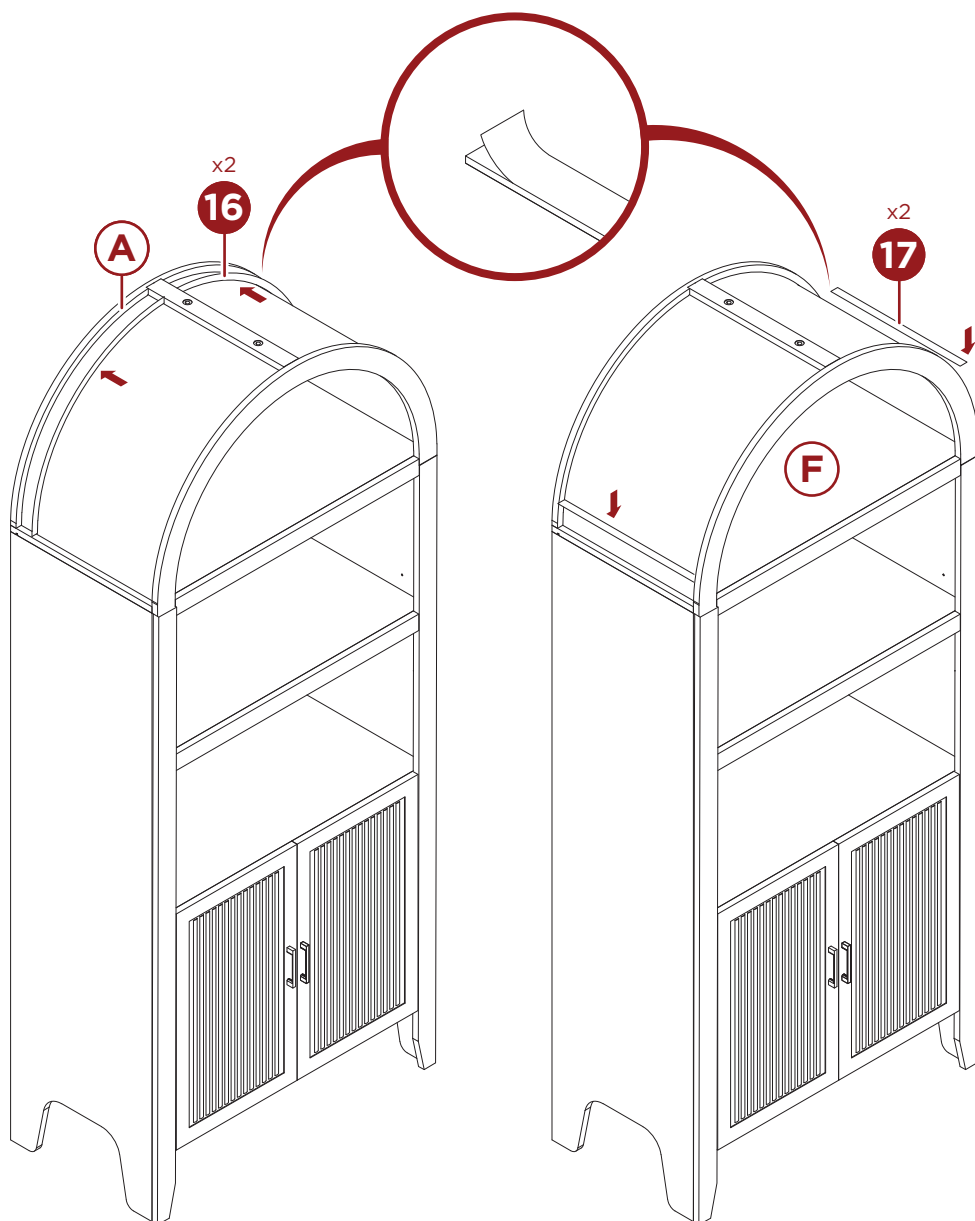


WALL MOUNTING

  1. Select an appropriate location, then mark two spaces on the wall using the **part 13 mounting straps** as guides. Use a drill on the marked spaces.
2. Insert two **part 12 wall anchors** into the new holes in the wall. Overlap the holes with the mounting straps, then attach the cabinet to the wall by drilling two **part 4 wood screws** through the **part 13 mounting straps** and into the wall anchors.

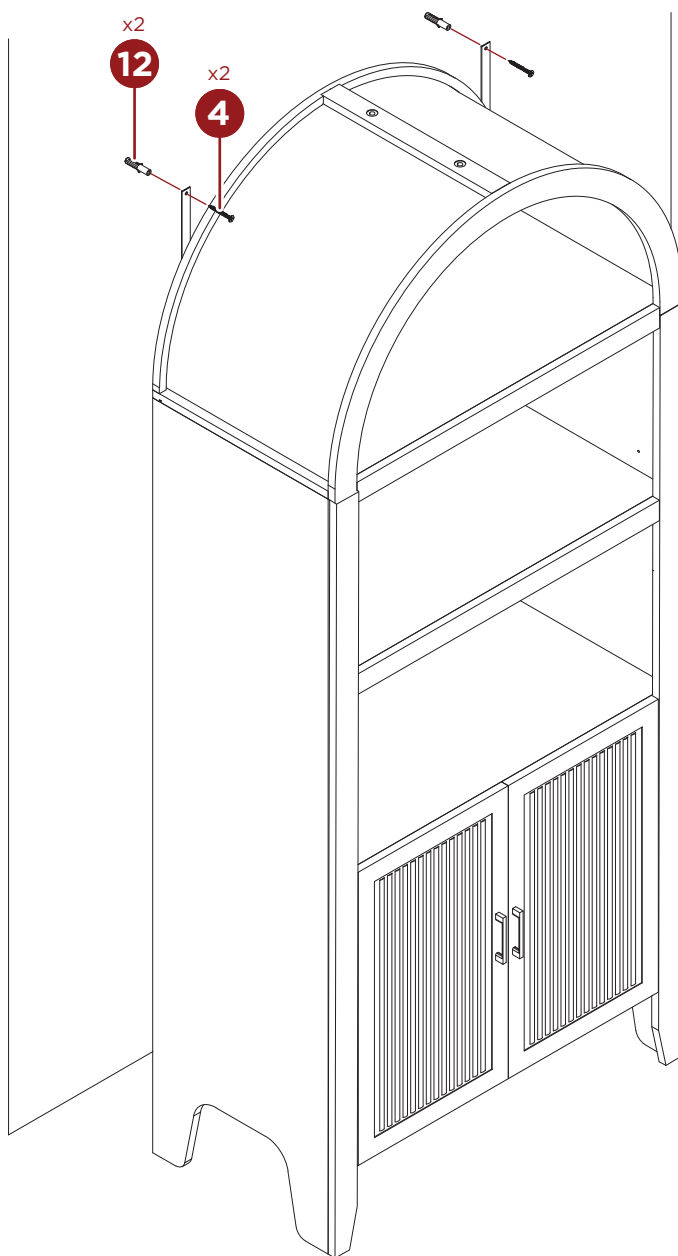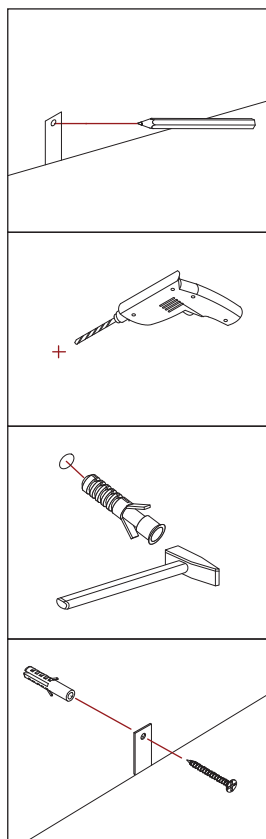


DOOR ALIGNMENT

 If your door is too low or too high...

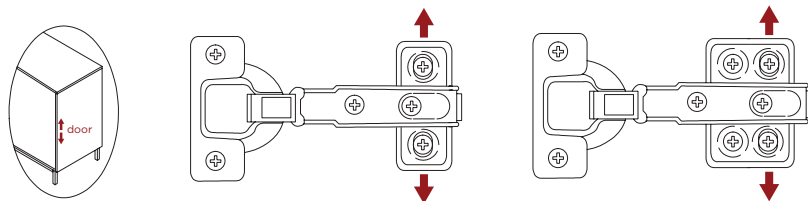


Loosen the height screws, then move the door up or down to make it level.

 If you need to adjust the depth of the doors...

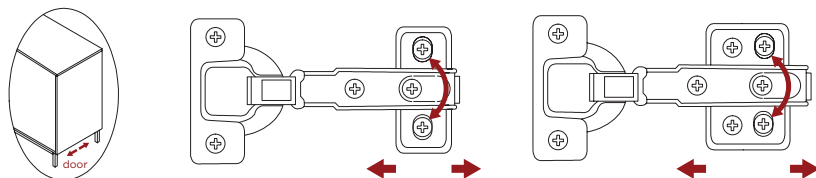

Adjust the in-and-out screws until the door is aligned with the side of cabinet.

 If the space between your doors is off...

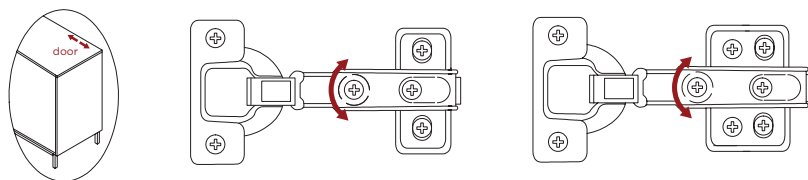

Loosen the side-to-side screws, then screw counter-clockwise to make the gap wider or clockwise to close any gaps.



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660



WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.