


Zuo®

ITEM NAME/NOM D'ITEM: RADER ARMLESS DINING CHAIR

ITEM# /NO. ITEM: 704270


PARTS LIST/LISTE DES PIÈCES

(1)

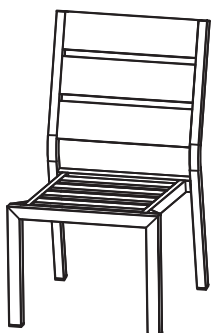

x1


(2)

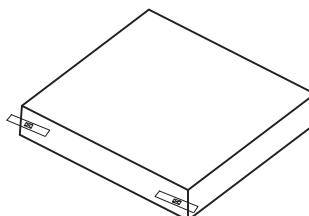


x1

ASSEMBLY INSTRUCTIONS/INSTRUCTIONS D'ASSEMBLAGE

I

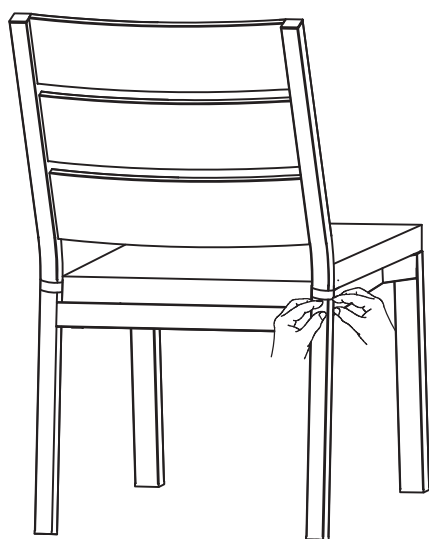

II

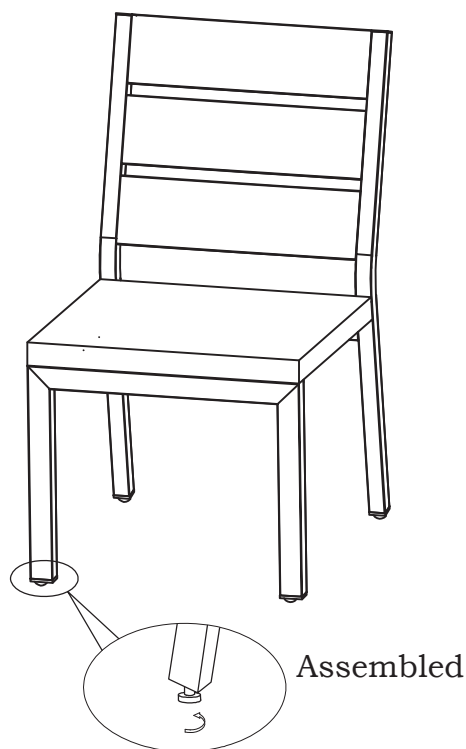

Please use the attached adjustable footglides to level the chair on an uneven surface.

For missing parts or damaged parts, please call /
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico:(866) 798-6663

AI-V1-B008-251114