



BEST CHOICE  
PRODUCTS



# INSTRUCTION MANUAL

---

10ft 5-Year Fade Resistant Cantilever  
Patio Umbrella



Do not use without  
umbrella base weights.

Recommended Weight:  
**>200 lbs.**

 
 
## ! NOTICE | Please retain these instructions for future reference.

- Umbrella base weights are not included. Do not use without umbrella base weights (recommended weight: >200 lbs.)
- Place umbrella on a stable and level surface.
- Umbrella is suitable for rain showers and light wind.
- Do not use umbrella in inclement weather, such as snow, heavy rain, thunderstorms, or strong wind.
- Firmly secure all bolts, screws and knobs before use.
- This product is intended for outdoor use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.




## TOOLS REQUIRED










## HARDWARE

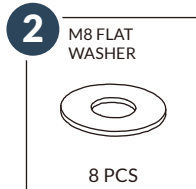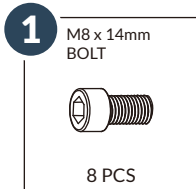


## PARTS

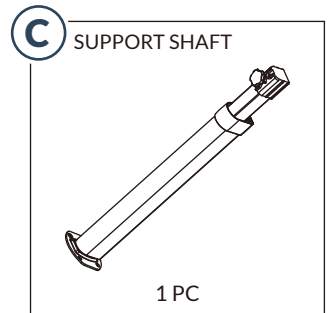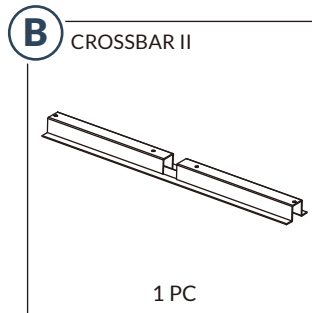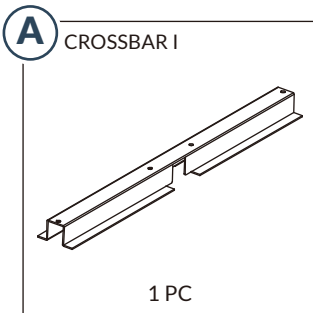   

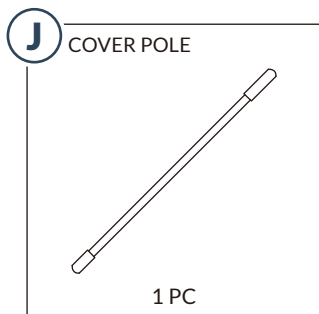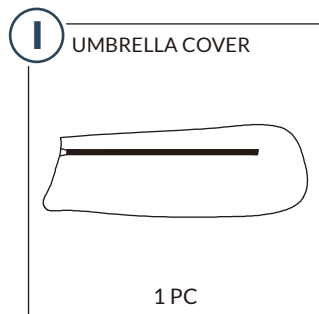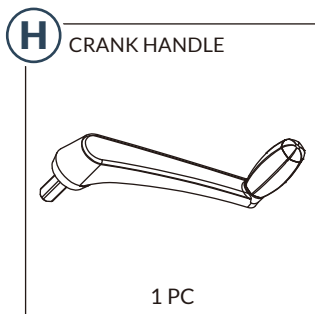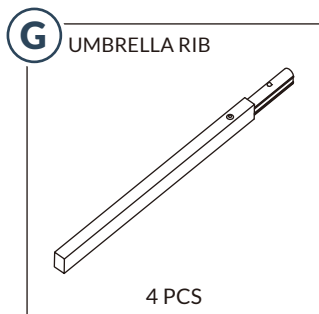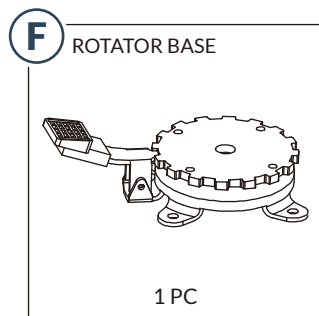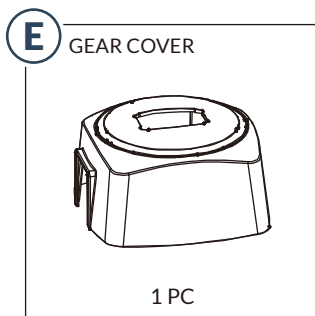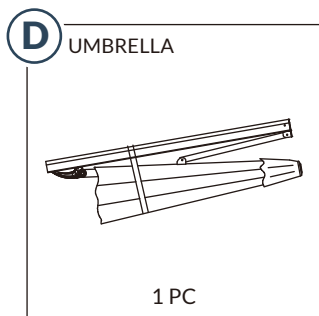       


## PRODUCT ASSEMBLY

 
- 1** Insert the **part A** crossbar I into the **part B** crossbar II.

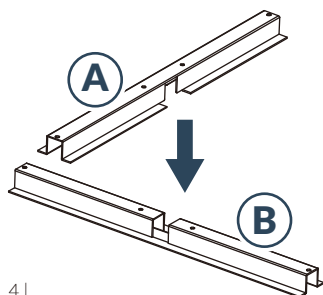

 
- 2** Attach the **part F** rotator base to the **part A & B** crossbars with four **part 1** bolts and four **part 2** washers.

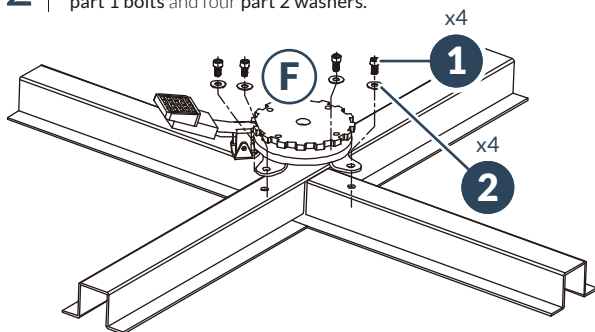


### 3 | Remove the knob and bushing from the **part C** support shaft.

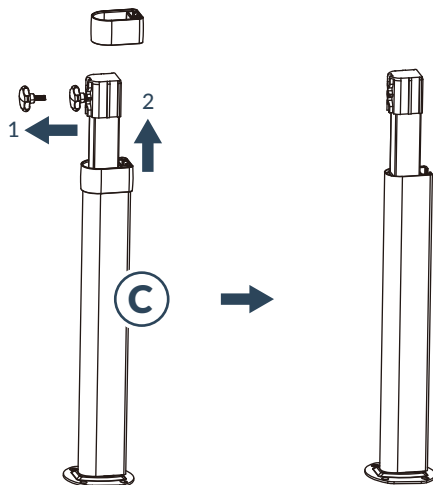 


### 4 | Attach the **part C** support shaft to the **part F** rotator base with four **part 1** bolts and four **part 2** washers. Slide the **part E** gear cover onto the **part C** support shaft and cover the **part F** rotator base.

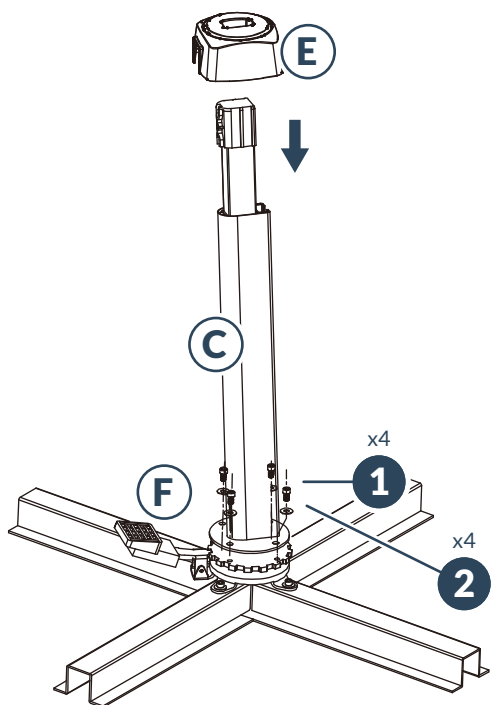 


### 5 | Reattach the bushing to the **part C** support shaft.

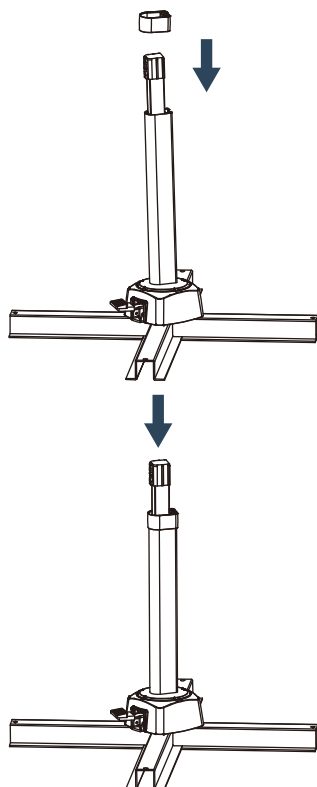 

- 6** | Attach the **part D umbrella** to the **part C support shaft**, then secure with the knob.

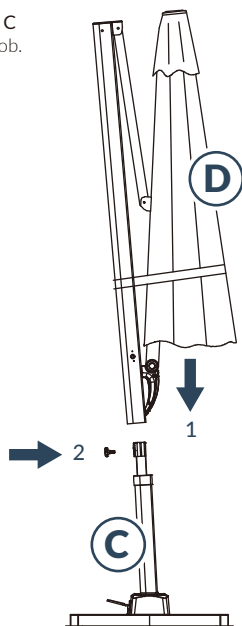 


- 7** | Insert four **part G umbrella ribs** into the designated opening slots on the underside of the umbrella canopy. Ensure each rib is fully seated and securely attached.

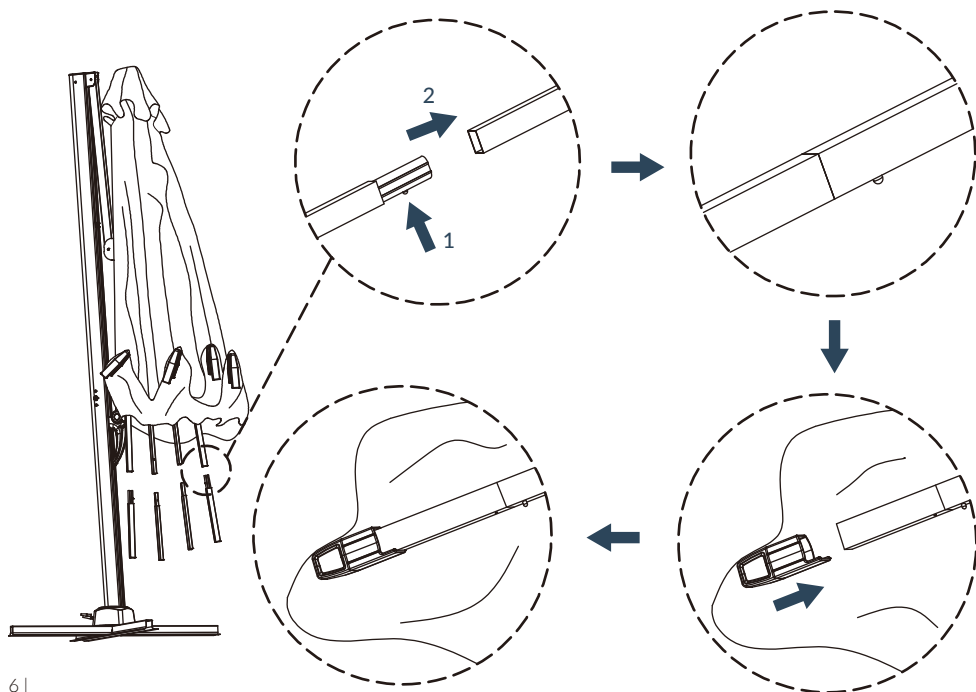 


8

 Squeeze the adjustment handle and move it upward, then attach the **part H crank**.

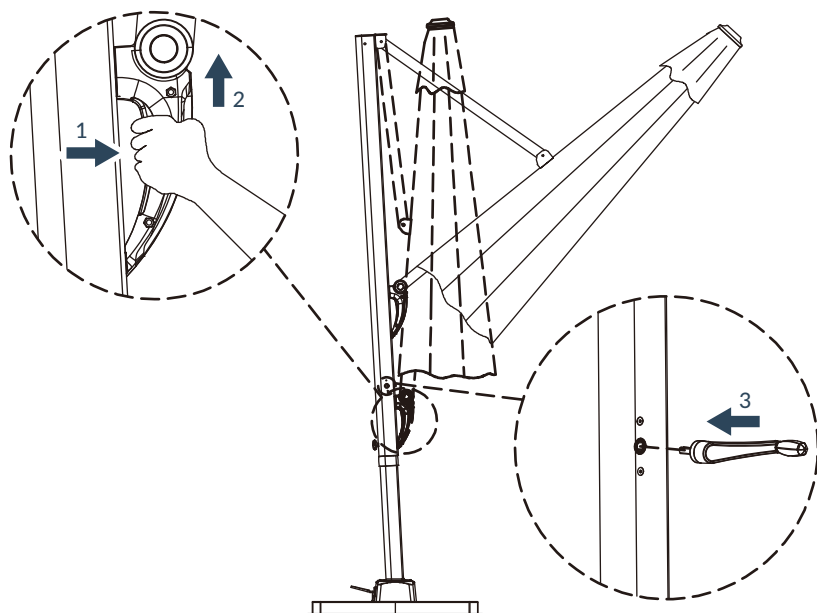


9

 Turn the **part H crank** clockwise to open the canopy, then squeeze the adjustment handle and move it upward. Release the handle to lock the canopy in your desired position.

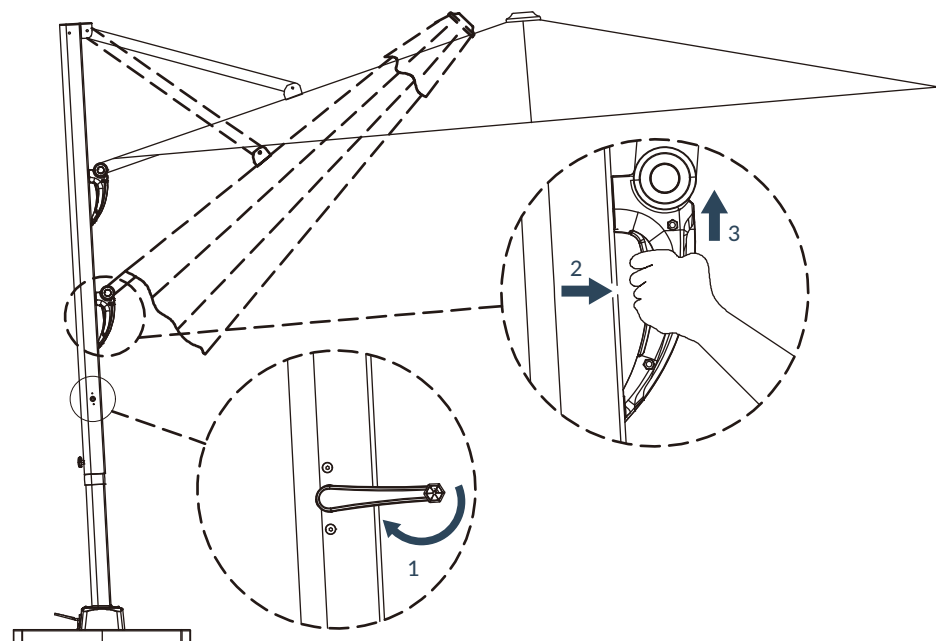


10

 **TILT CANOPY:** Squeeze the adjustment handle and move it downward.  
Release the handle to lock the canopy in your desired position.

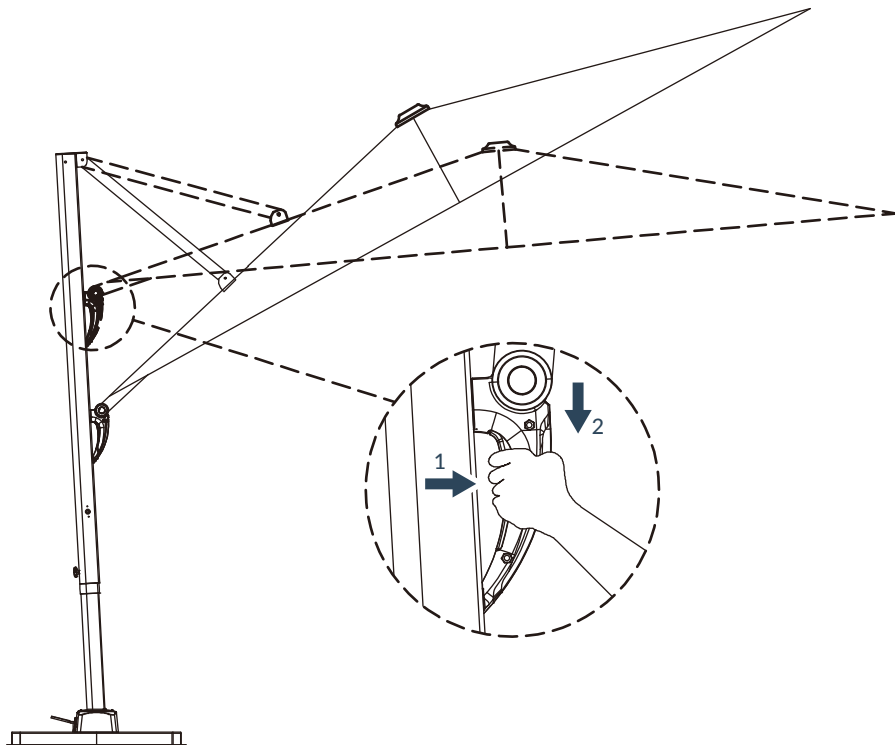


11

 **ROTATE CANOPY:** Use your foot to compress the pedal on the rotating base to rotate the canopy.

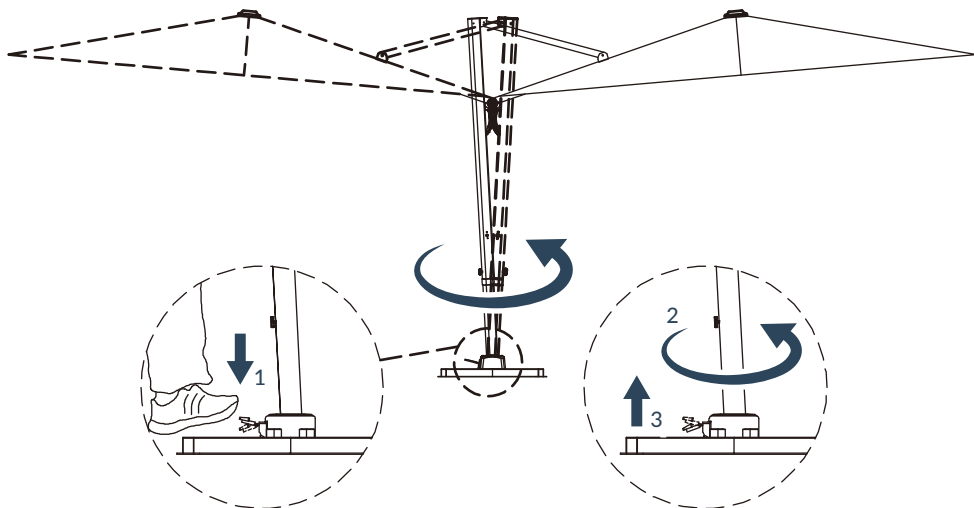


## STORING THE CANOPY

 - 1 Turn the **part H crank** counter clockwise to close the canopy, then squeeze the adjustment handle and move it downward. Release the handle to lock the canopy.

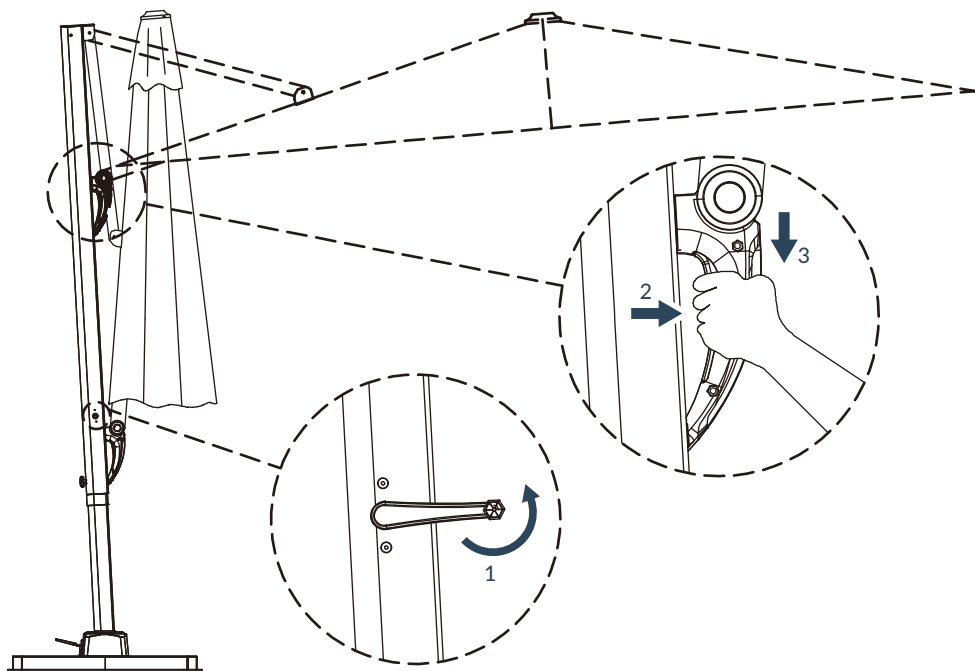


- 2 Fasten the strap around the canopy.

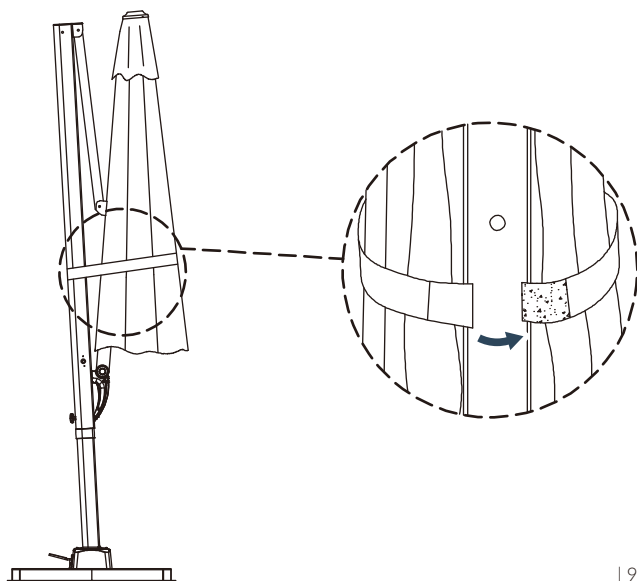 

# 3

 
Slide the **part J cover pole** into the **part I umbrella cover**, then unzip the cover.

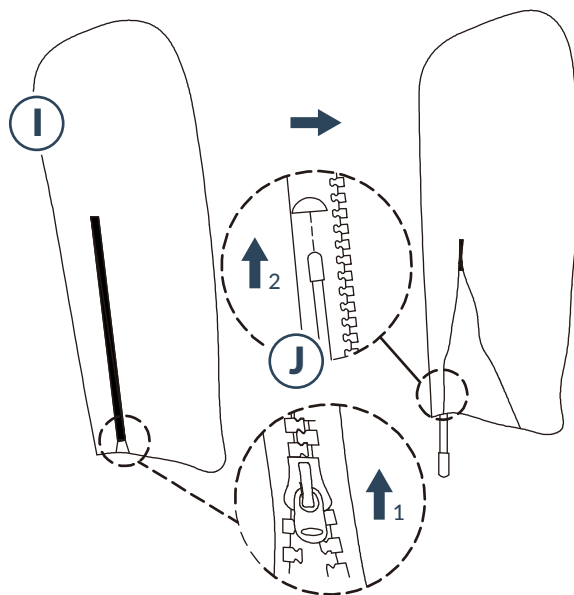

# 4

Slide the **part I umbrella cover** over the umbrella canopy.

 
Remove the **part J cover pole** and zip down the cover.

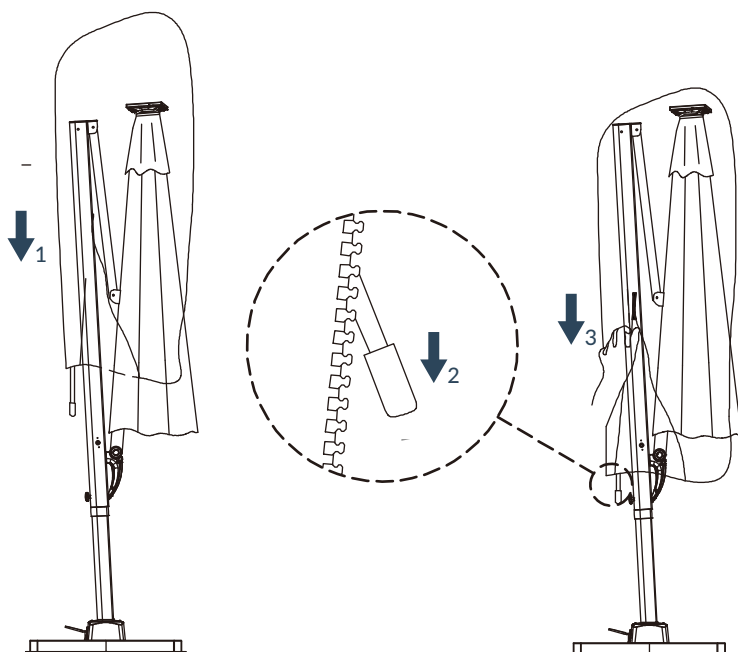

5

REMOVING THE COVER: Unzip the **part I umbrella cover** and insert the **part J cover pole**.

 Push the pole up to remove the cover from the umbrella canopy..

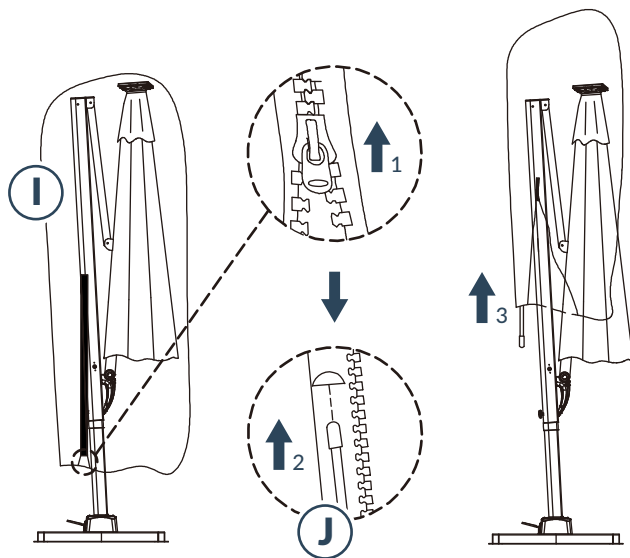

## CLEANING AND STORAGE

- Wipe clean with mild detergent, warm water, and a soft cloth.
- Do not use abrasive materials or cleaners.
- Store in a dry area shielded from the weather.



# HELP CENTER

Question about your product? We're here to help. Visit us at:

[bestchoiceproducts.com/pages/help](https://bestchoiceproducts.com/pages/help)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.