 


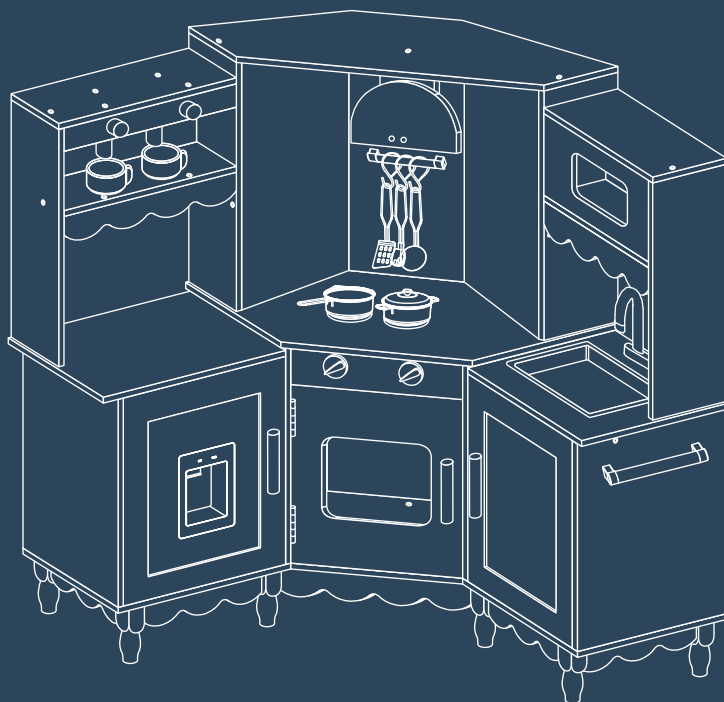

BEST CHOICE
PRODUCTS



INSTRUCTION MANUAL

Cottage Corner Kitchen

Ver. 1

SKY11764 + SKY11765

⚠ WARNING
ADULT ASSEMBLY REQUIRED

⚠ WARNING
CHOKING HAZARD - Small parts.
Not for children under 3 years old.

ⓘ NOTICE | Please retain these instructions for future reference.

- This product requires adult assembly and supervision when in use.
- This product is intended for indoor use only.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product contains small parts. May result in choking hazard for children under 3 years.
- To wipe down item, use a damp cloth. Then, wipe it down once more with a dry cloth.
- This product is intended for residential use only.

⚠ WARNING

- This product contains small parts. May result in choking hazard for children under 3 years.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Be aware that some parts are heavy or have sharp edges.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Strangulation Hazard – Hooks may catch on clothing or accessories.
- Do not allow children to climb or sit on the play kitchen.
- Secure the product firmly to a wall using the provided anti-tip kit.
- Intended for children ages 3 and up only.
- Keep away from cribs, cords, or other furniture that could entangle the child.
- Hooks are for toy use only. Do not hang real kitchen utensils or heavy items.

TOOLS REQUIRED



3 YEARS
OLD & UP

 
 
 
 


 
 
 
 
 
 
 
 
 
 
 
 
2 PERSON
ASSEMBLY









UP TO 150 MIN.
ASSEMBLY













HARDWARE

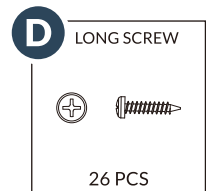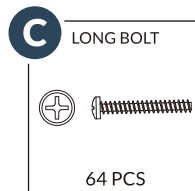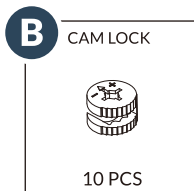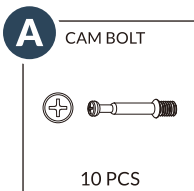

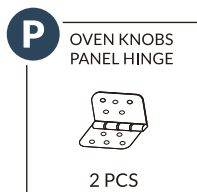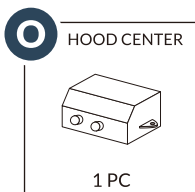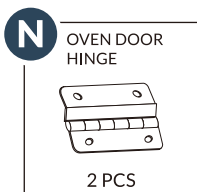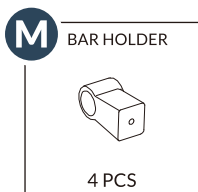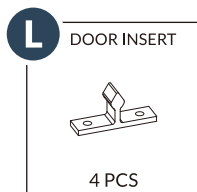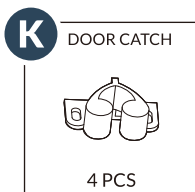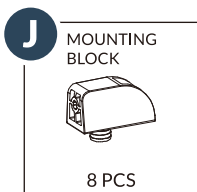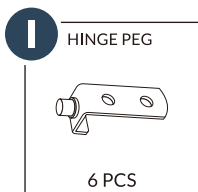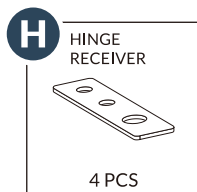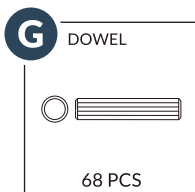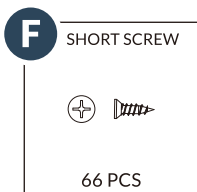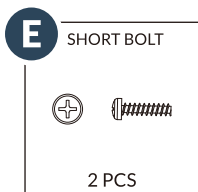


PARTS

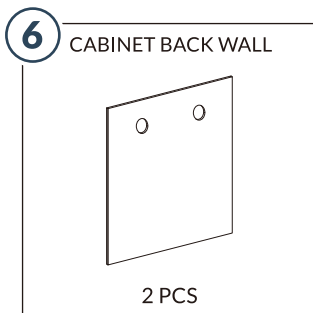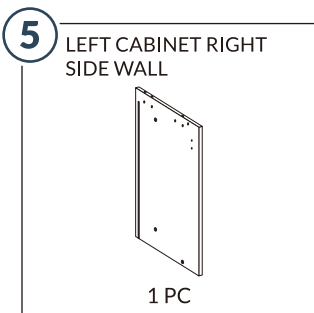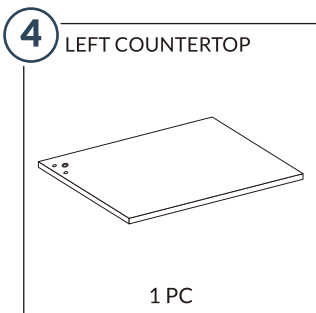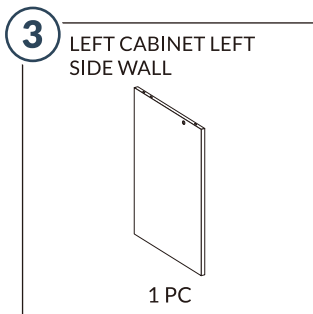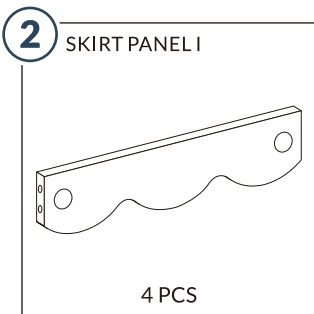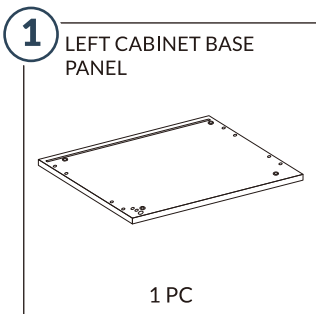      

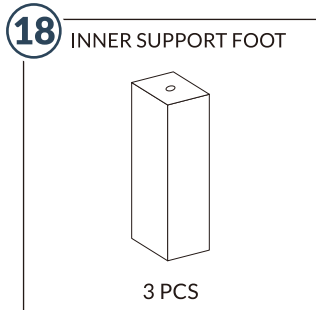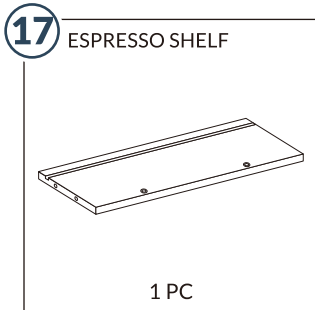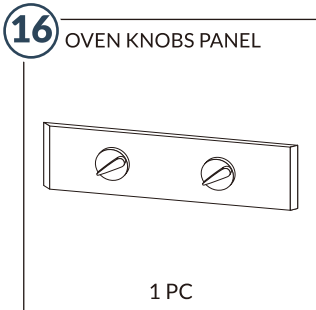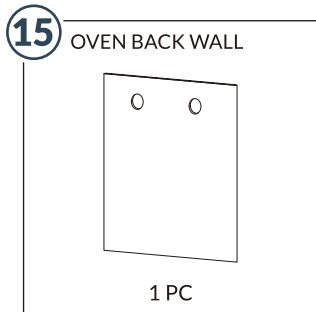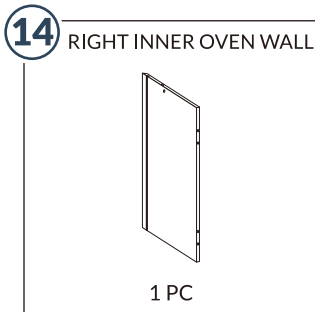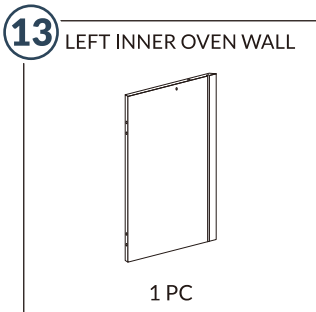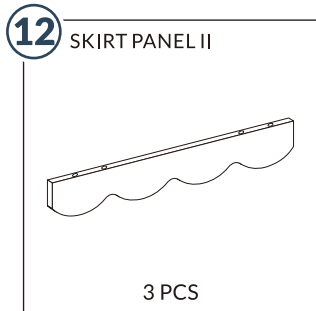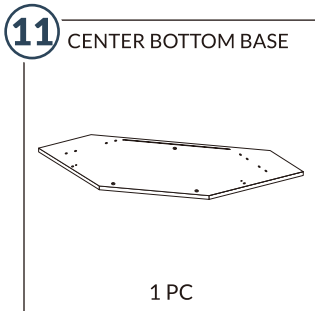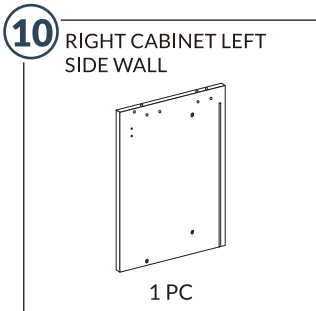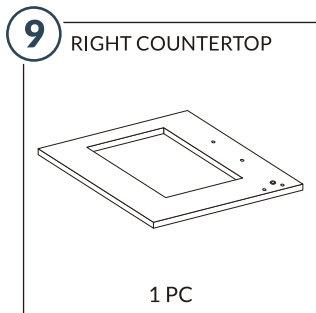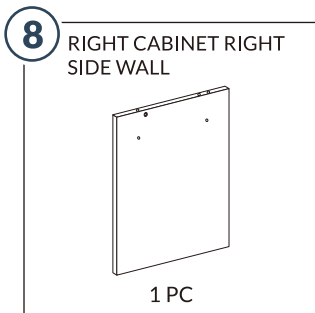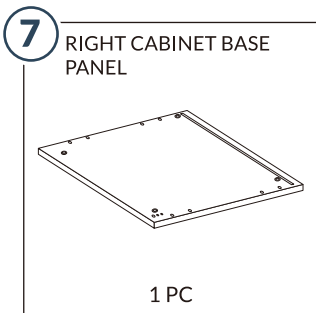            

19

 
ESPRESSO TOP PANEL



1 PC

20

 ESPRESSO KNOBS PANEL



1 PC

21

 
ESPRESSO SPOUT



2 PCS

22

ESPRESSO/MICROWAVE
BACK WALL

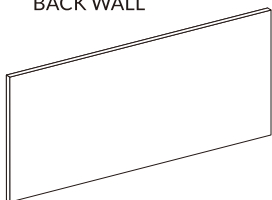

2 PCS

23

 
UPPER LEFT WALL



1 PC

24

MICROWAVE SHELF

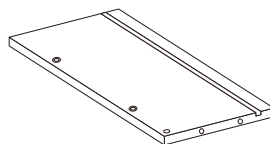

1 PC

25

 
HORIZONTAL BAR



2 PCS

26

MICROWAVE TOP PANEL

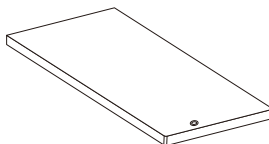

1 PC

27

UPPER RIGHT WALL



1 PC

28

STOVETOP



1 PC

29

LEFT SIDE BACKSPLASH
WALL



1 PC

30

RIGHT SIDE BACKSPLASH
WALL



1 PC

31 LEFT SIDE STOVE RANGE



1 PC

32 RIGHT SIDE STOVE RANGE



 
1 PC

33 MIDDLE BACKSPLASH WALL




1 PC

34 HOOD VENT

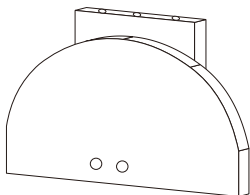

1 PC

 35 HOOD BOTTOM




1 PC

36 MIDDLE TOP PANEL




1 PC

 37 REFRIGERATOR DOOR

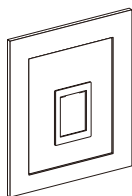


1 PC

 38 RIGHT CABINET DOOR




1 PC

 39 MICROWAVE DOOR

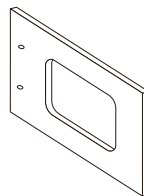

1 PC

 40 OVEN DOOR

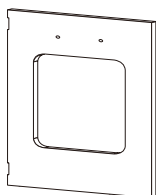

1 PC

41 CORNER FOOT



2 PCS

42 LEFT SIDE FOOT



2 PCS

43

RIGHT SIDE FOOT



2 PCS

44

 
DOOR HANDLE



4 PCS

45


BURNER

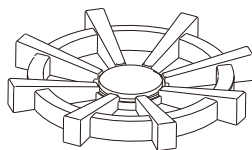

2 PCS

46

 SINK FAUCET

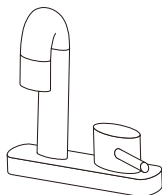

1 PC

47

SINK



1 PC

48

 
UTENSIL HOOK



3 PCS

49


ICE MAKER

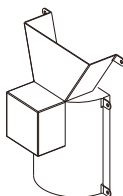

1 PC

50

 
ICE CUBE

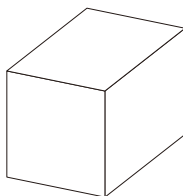

4 PCS

51

 
CUP

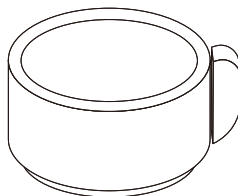

2 PCS

52

 
UTENSIL SET

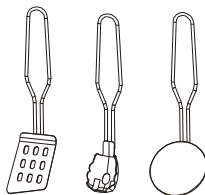

1 SET

53

 
SAUCEPAN



1 PC

54

 
DUTCH OVEN

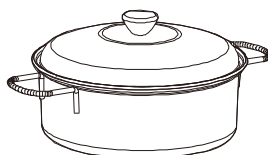


1 PC

PRODUCT ASSEMBLY


- 1** | Locate the **part 37 refrigerator door** and attach one **part L door insert** using two **part F short screws**. Then attach the **part 44 door handle** with two **part D long screws**. Attach one **part I hinge peg** to the door using two **part F screws**.

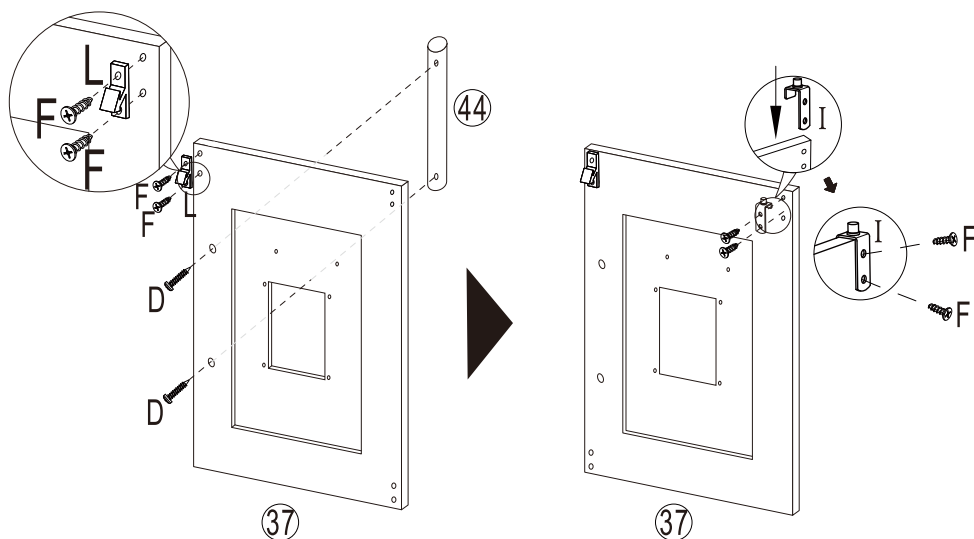 


- 2** | Attach the **part 49 icemaker** to **part 37 refrigerator door** using six **part F short screws**.

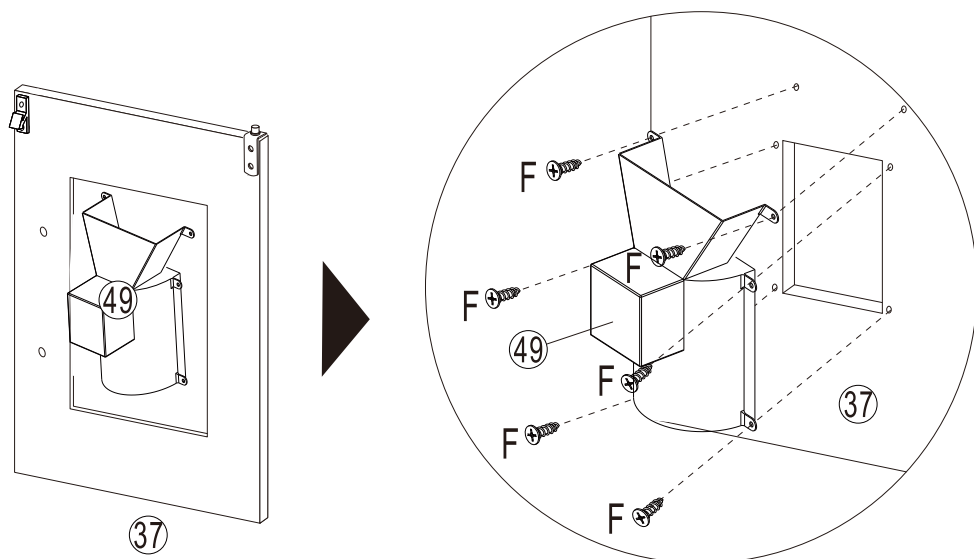 


- 3** | Locate the **part 38 right cabinet door** and attach one **part L door insert** using two **part F short screws**. Then attach the **part 44 door handle** with two **part D long screws**. Attach one **part I hinge peg** to the door using two **part F screws**.

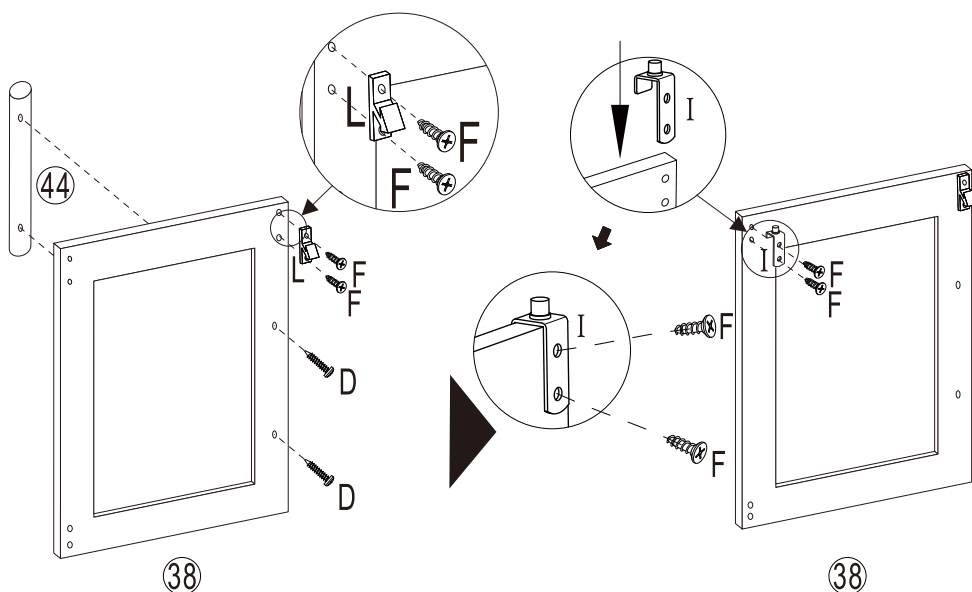


- 4** | Locate the **part 39 microwave door** and attach one **part L door insert** using two **part F short screws**. Then attach the **part 44 door handle** with two **part D long screws**. Attach one **part I hinge peg** to the door using two **part F screws**.

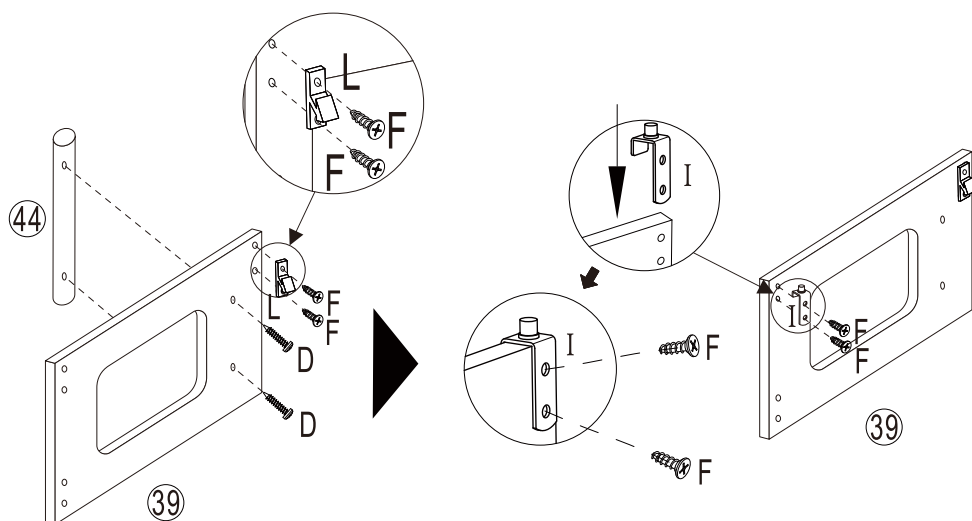

- 5** | Locate the **part 40 oven door** and attach one **part L door insert** and two **part N oven door hinges** using six **part F short screws**, two screws each.
- Flip the door, then attach the **part 44 door handle** with two **part D long screws**.

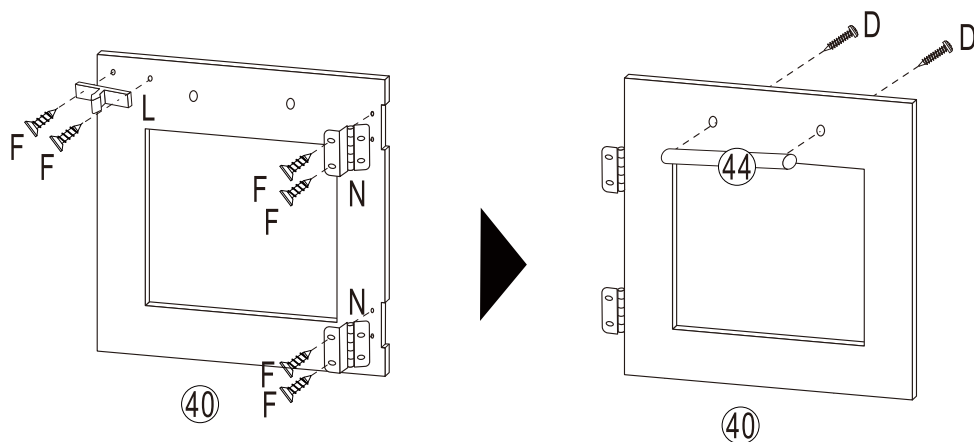


- 6** | Locate the **part 5 left cabinet right side wall** and attach one **part K door catch** using two **part F short screws**.
- Locate the **part 10 right cabinet left side wall** and attach one **part K door catch** using two **part F short screws**.

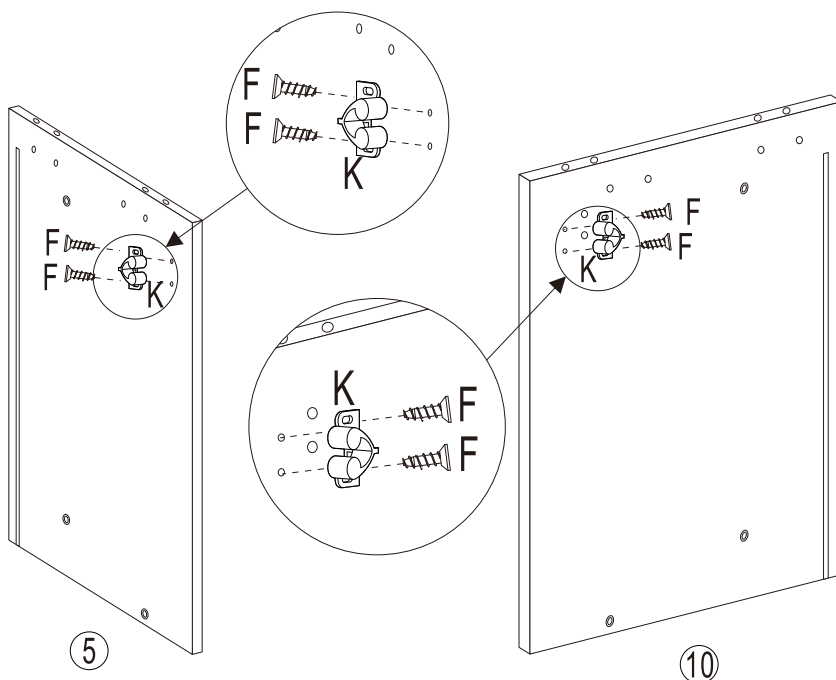


7

Locate the **part 1 left cabinet base panel** and attach one **part H hinge receiver** using two **part F short screws**.
Locate the **part 7 right cabinet base panel** and attach one **part H hinge receiver** using two **part F short screws**.

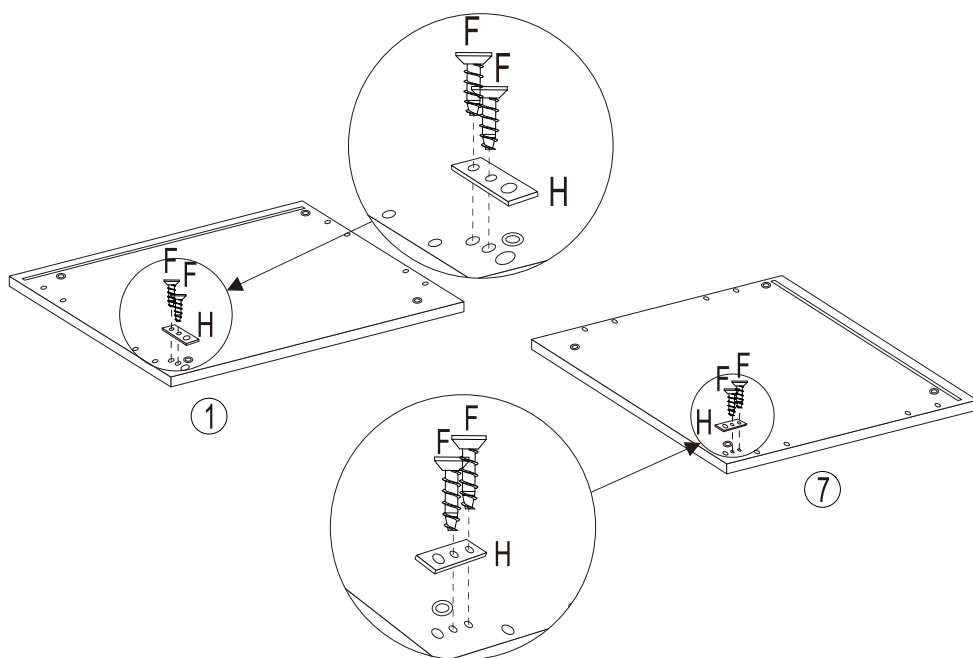


8

Locate the **part 16 oven knobs panel** and attach one **part K door catch** using two **part F short screws**.

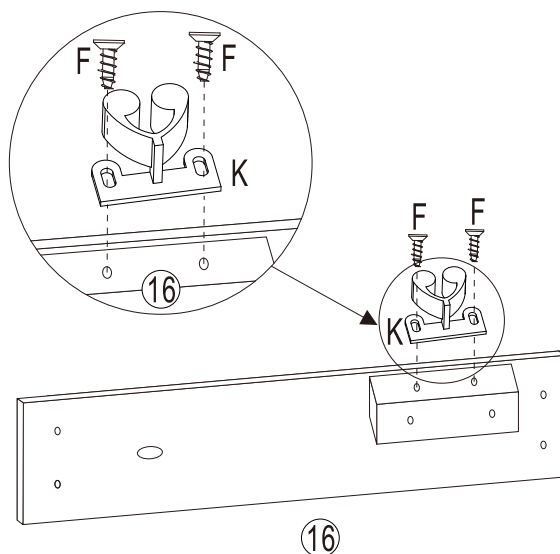


9

Attach two **part P** oven knobs panel hinges to **part 16** oven knobs panel using four **part F** short screws, two screws each.

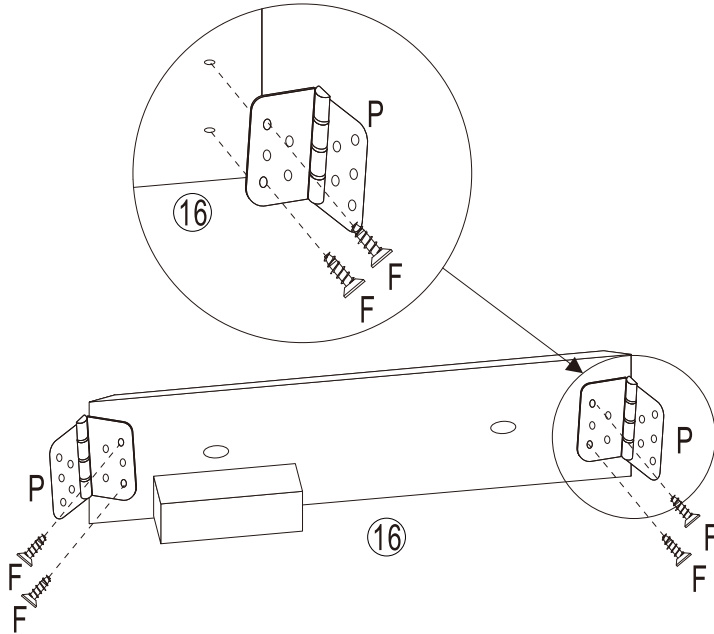


10

Locate the **part 4** left countertop and attach one **part H** hinge receiver using two **part F** short screws. Hammer one **part J** mounting block into the left countertop, then secure it by using one **part F** short screw.

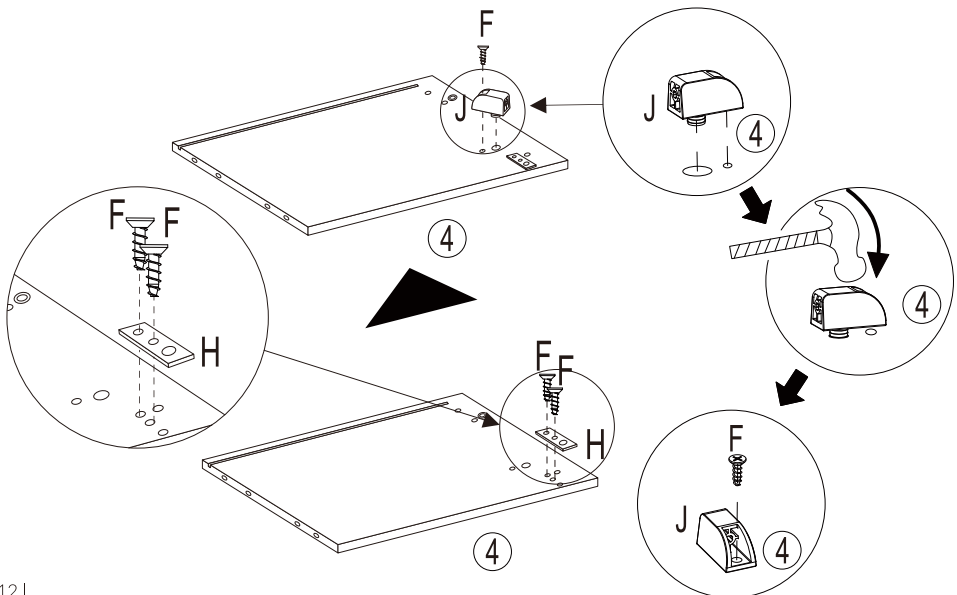

11

Locate the **part 32 right side stove range** and attach one **part K door catch** using two **part F short screws**.
Locate two **part 41 corner feet** and insert four **part A cam bolts**, two cam bolts each.

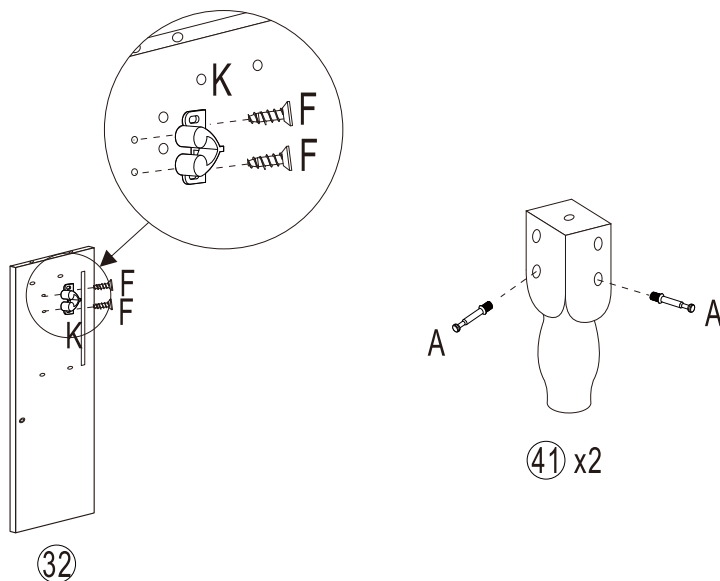

12

Locate two **part 42 left side feet** and insert two **part A cam bolts**, one cam bolt each.
Locate two **part 43 right side feet** and insert two **part A cam bolts**, one cam bolt each.



13


Insert two **part G** dowels into one **part 41** corner foot.

Insert one **part G** dowel into one **part 42** left side foot and one **part G** dowel into one **part 43** right side foot.

Connect the feet between two **part 2** skirt panel I, then secure them with four **part B** cam locks.

NOTE: Use a screwdriver to turn the cam lock to secure the cam bolt.


Repeat the step to assemble another feetframe.

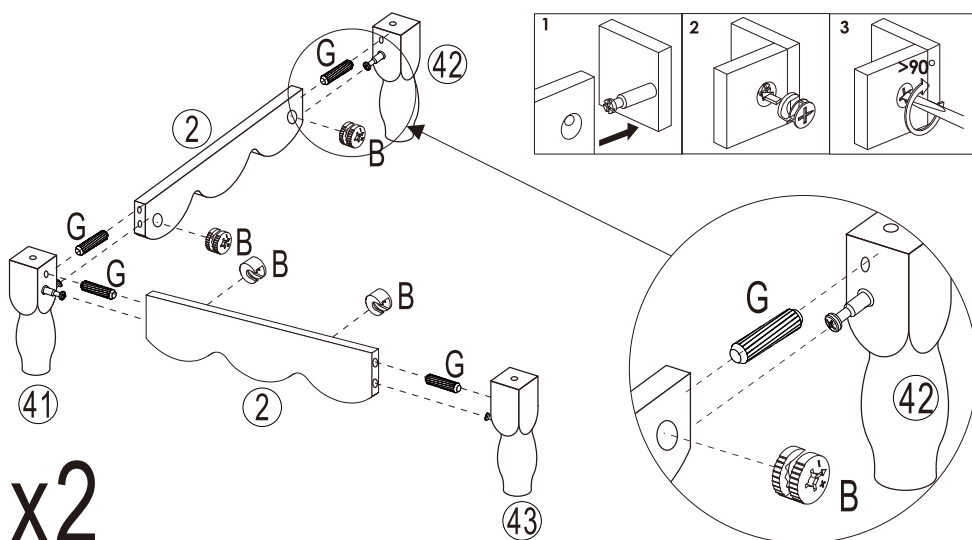

x2

14

Attach one **part 18** inner support foot and one assembled feet frame to **part 1** left cabinet base panel using four **part C** long bolts.

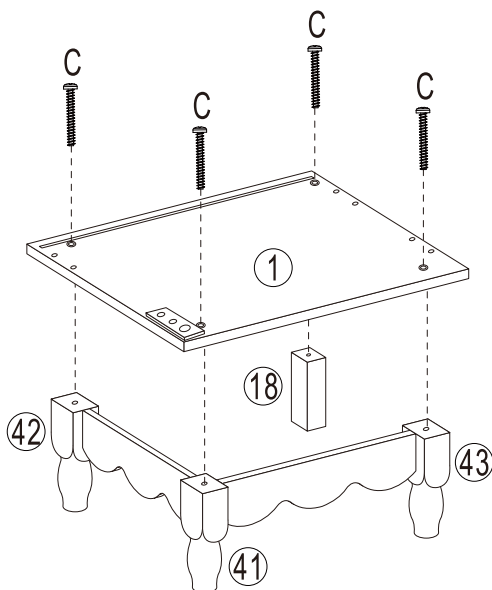


15

Insert two **part G** dowels into **part 3** left cabinet left side wall.

Attach **part 3** left cabinet left side wall to **part 4** left countertop using one **part C** long bolt.


From underneath the countertop, secure **part 3** left cabinet left side wall to **part J** mounting block using one **part D** long screw.

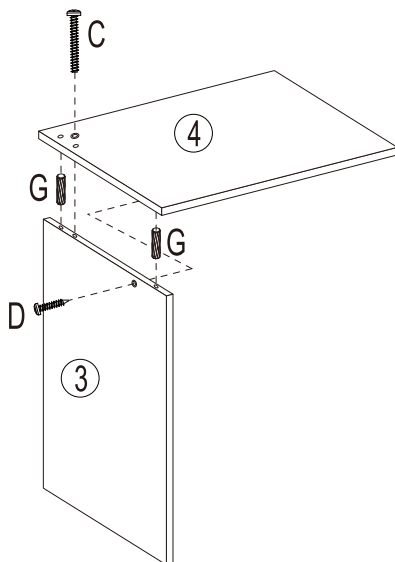

16


Insert two **part G** dowels into **part 4** left countertop.

Then attach the **part 5** left cabinet right side wall using two **part C** long bolts.

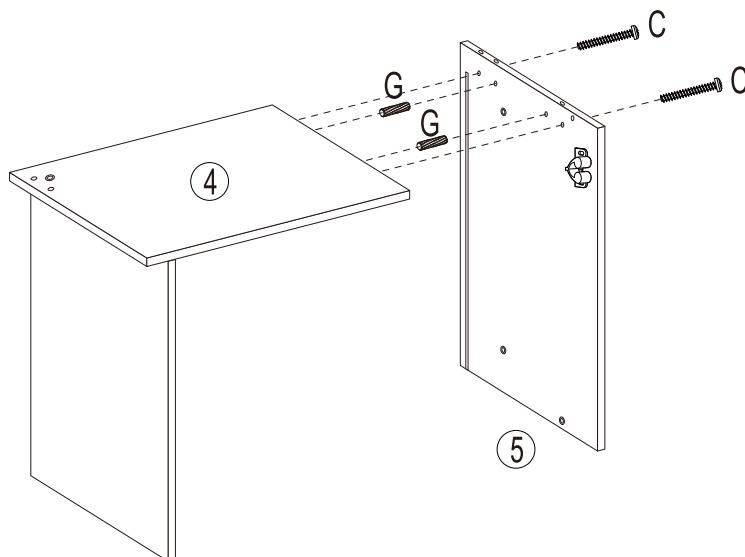

17


Slide in one **part 6**
cabinet back wall.

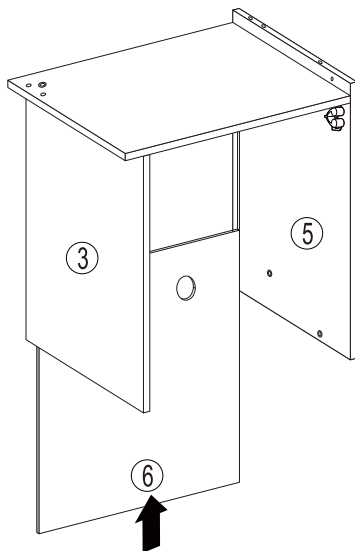


18

Insert four **part G** dowels into **part 1** left cabinet base panel.


Then attach the **part 1** left cabinet base panel to **part 3 & 5** left cabinet side walls using four **part C** long bolts.

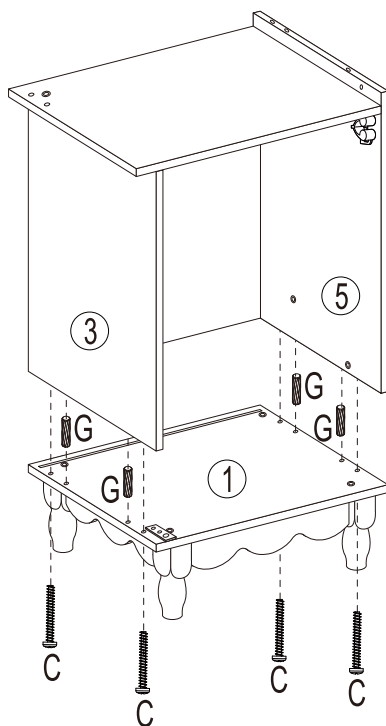

- 19** | Attach one **part 18 inner support foot** and the second assembled feet frame to **part 7 right cabinet base panel** using four **part C long bolts**.

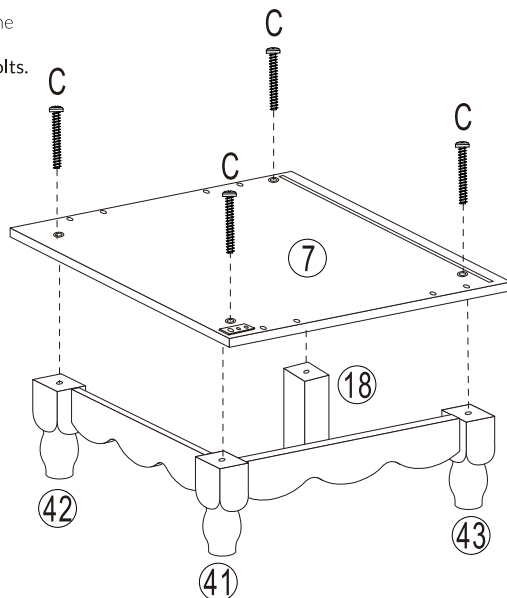

- 20** | Locate the **part 9 right countertop** and attach one **part H hinge receiver** using two **part F short screws**. Hammer one **part J mounting block** into the right countertop, then secure it by using one **part F short screw**. Flip the right countertop, then attach **part 46 sink faucet** using two **part D long screws**.

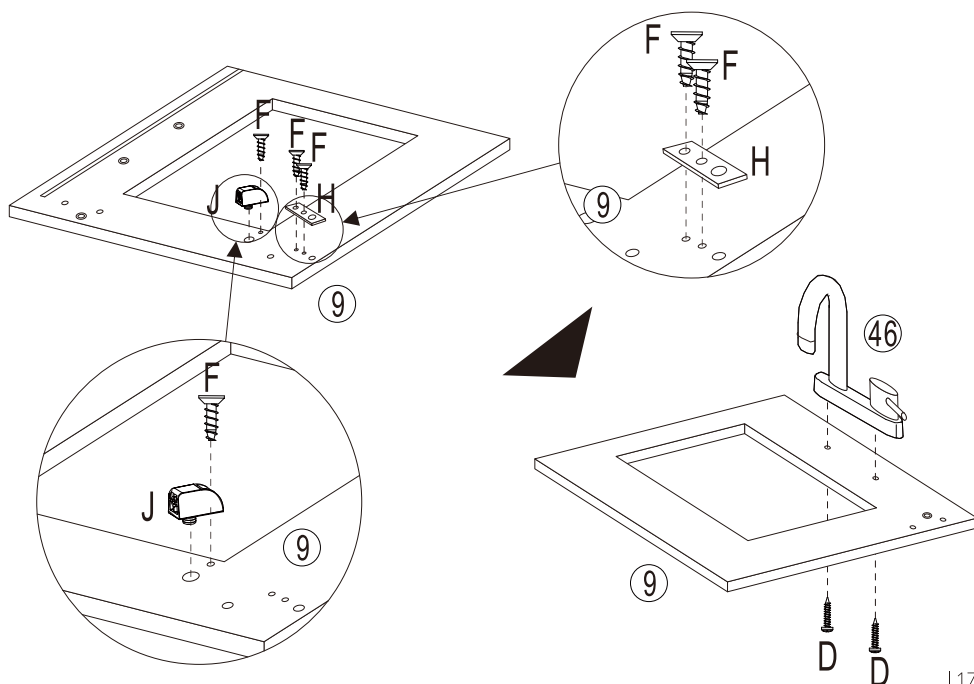


21

Insert two **part G** dowels into **part 8** right cabinet right side wall.

Attach **part 8** right cabinet right side wall to **part 9** right countertop using one **part C** long bolt.


From underneath the countertop, secure **part 8** right cabinet right side wall to **part J** mounting block using one **part D** long screw.

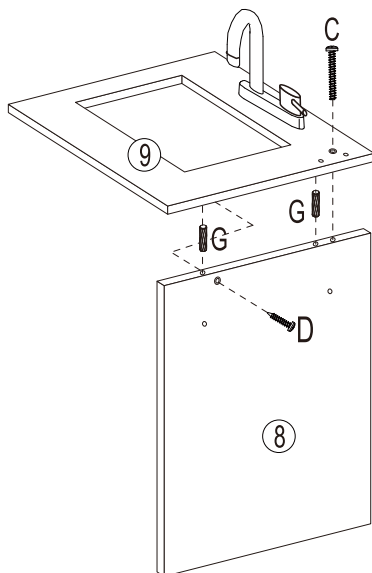

22


Insert two **part G** dowels into **part 9** right countertop.

Then attach the **part 10** right cabinet left side wall using two **part C** long bolts.

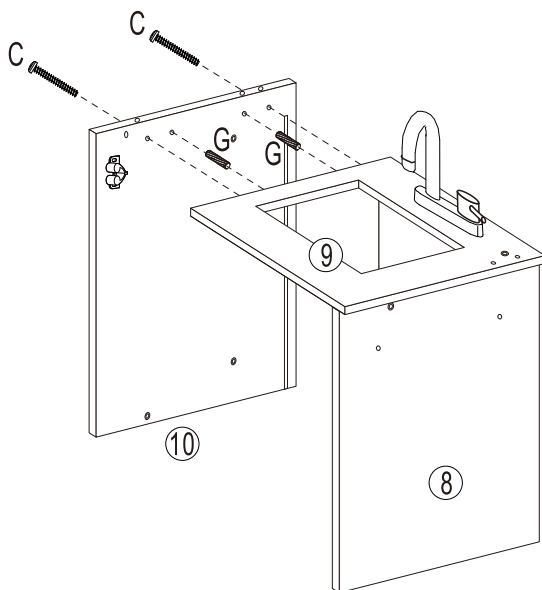

23


Slide in one **part 6** cabinet back wall.

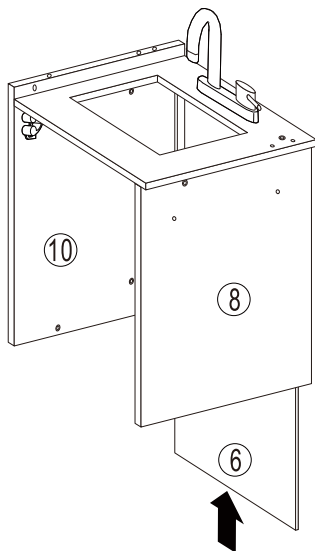

24


Insert four **part G** dowels into **part 7** right cabinet base panel.

Then attach the **part 7** right cabinet base panel to **part 8** & **10** right cabinet side walls using four **part C** long bolts.

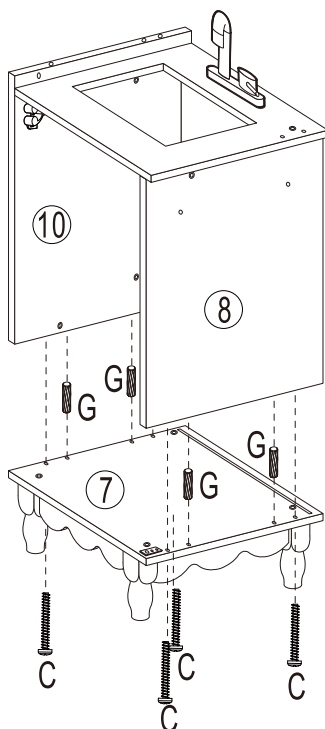

25


Hammer two **part J** mounting blocks into the **part 11** center bottom base, then secure it by using two **part F** short screws.

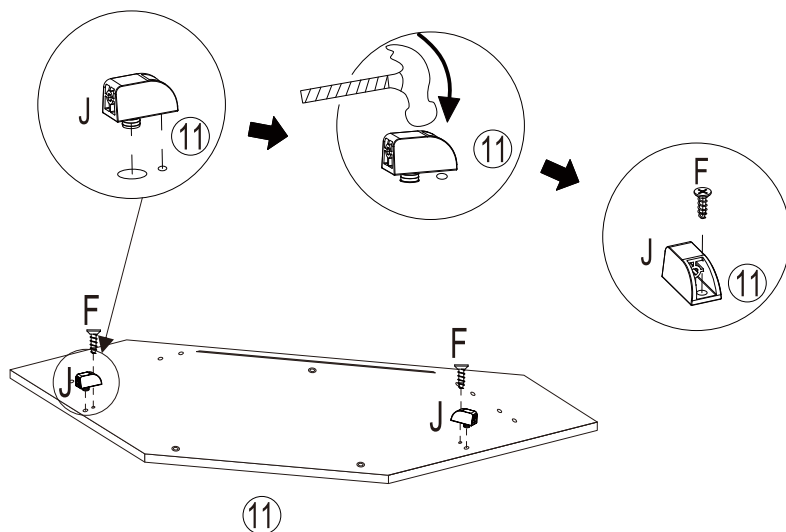

26

Insert two **part F** dowels into one **part 2** skirt panel II, then attach the panel to **part 11** center bottom base using two **part C** long bolts.


Attach one **part 18** inner support foot to **part 11** center bottom base using one **part C** long bolts.

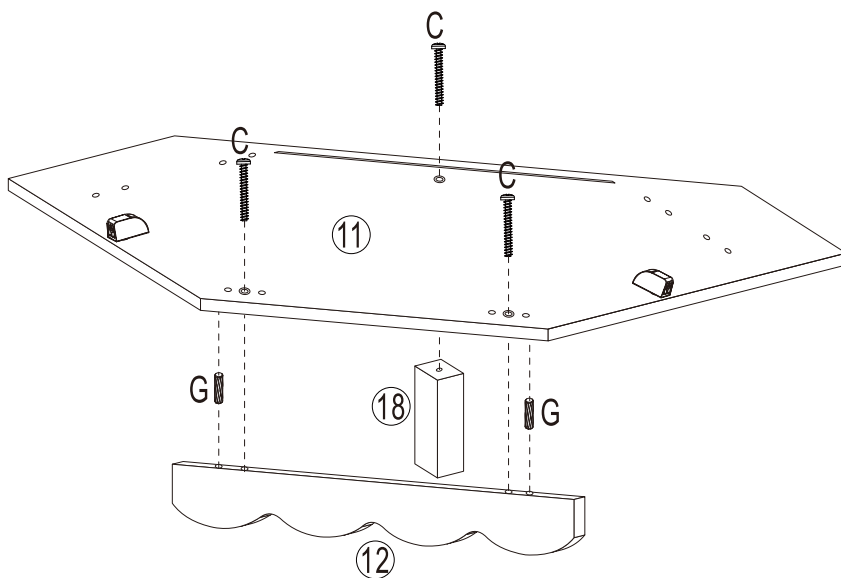

27

Insert four **part G** dowels into **part 11** center bottom base.

Then attach **part 13** left inner oven wall and **part 14** right inner oven wall to the **part 11** center bottom base using four **part C** long bolts.

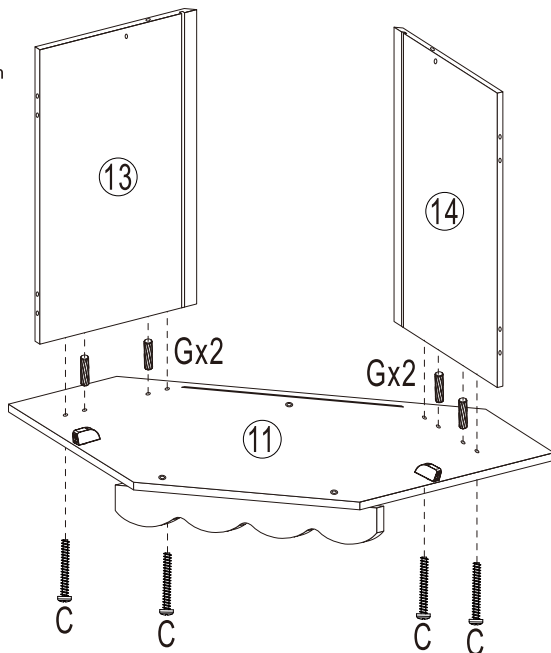


28

Attach the assembled left cabinet to **part 13** left inner oven wall using two **part C** long bolts and two **part G** dowels.


On top of **part 11** center bottom base, secure the assembled left cabinet to **part J** mounting block using one **part D** long screw.

Repeat the steps for the assembled right cabinet and **part 14** right inner oven wall.

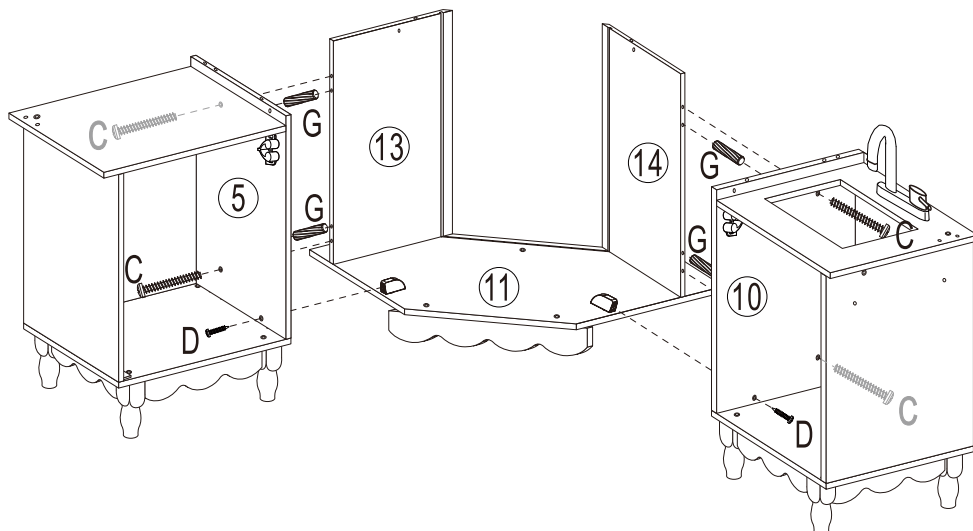


29

Slide in part 15 oven back wall.

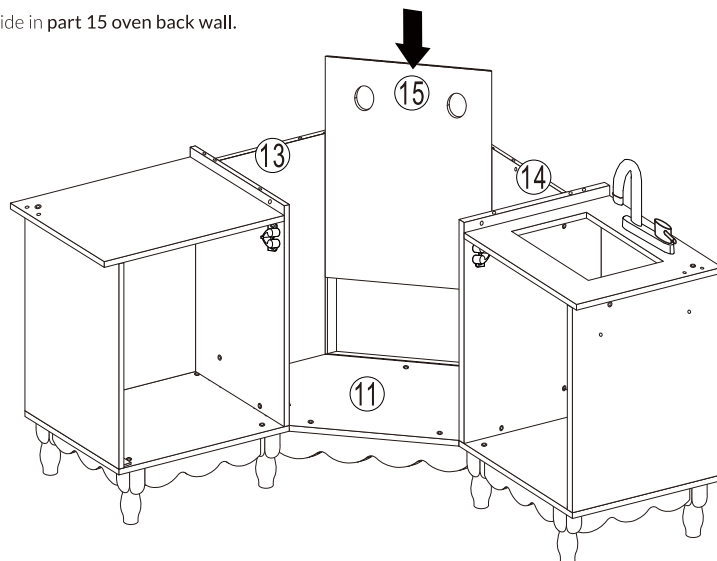


30


From behind part 16 oven knob panel, secure the two hinges to part 5 left cabinet right side wall and part 10 right cabinet left side wall using four part F short screws, two screws per hinge.

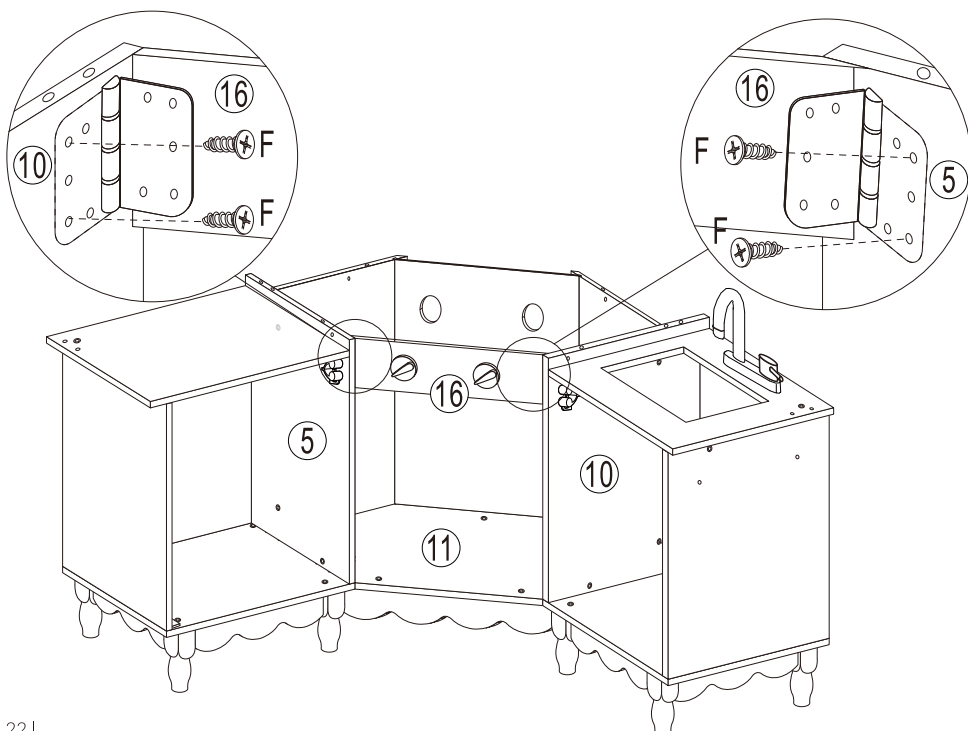


- 31** | Insert two **part G** dowels into one **part 12** skirt panel II.
Then attach **part 17** espresso shelf using two **part C** screws.

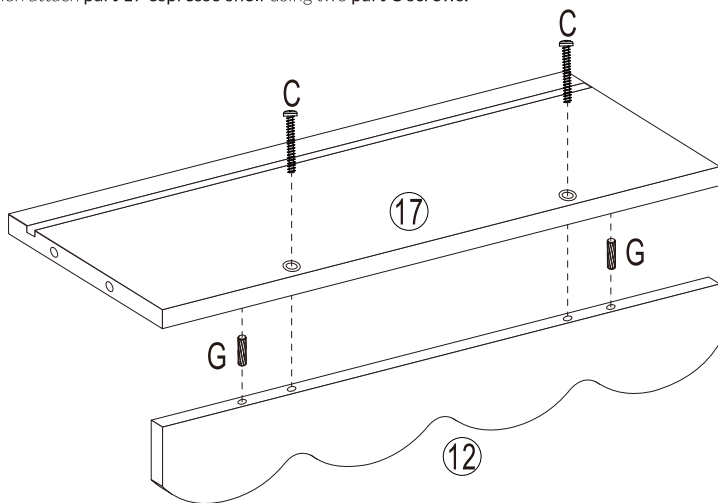


- 32** | Insert two **part G** dowels into **part 19** espresso top panel.
Then attach **part 20** espresso knobs panel and two **part 21** espresso spouts to **part 19** espresso top panel
using four **part C** long bolts.

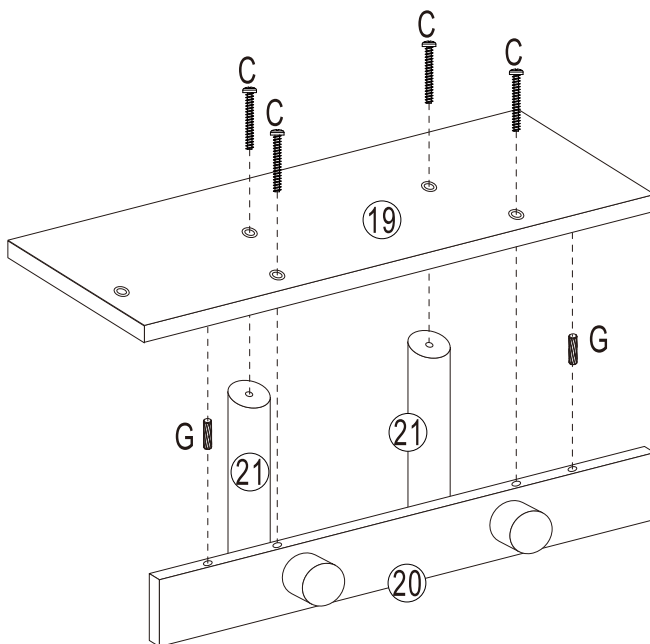

- 33** | Insert one **part G** dowel into **part 17** espresso shelf.
Then attach **part 23** upper left wall using one **part C** screw.

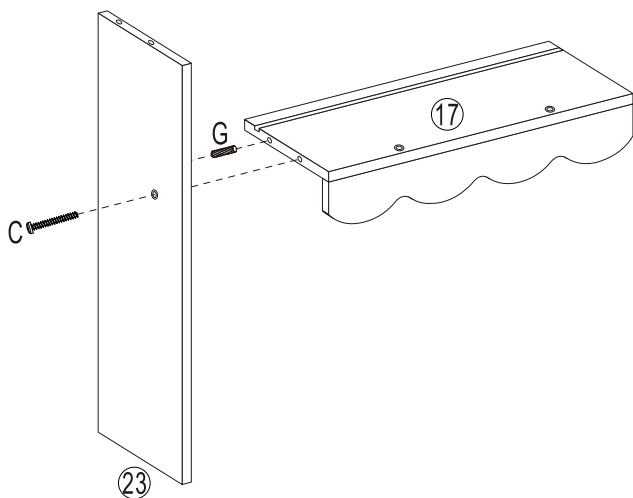


- 34** | Insert one **part G** dowel into **part 23** upper left wall.
Then attach **part 19** espresso top panel using one **part C** screw.

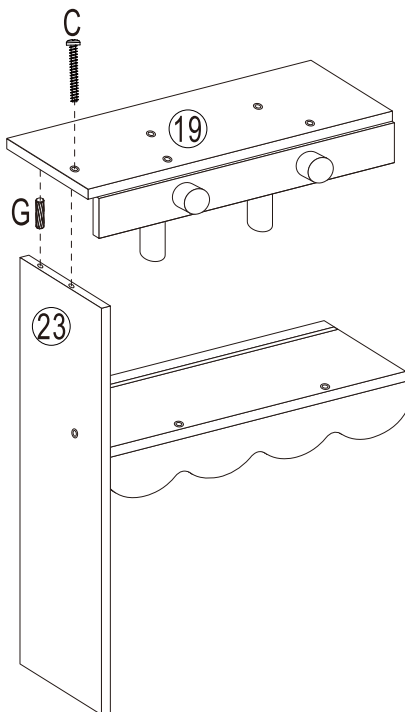


35

Slide in one **part 22** espresso/microwave back wall.

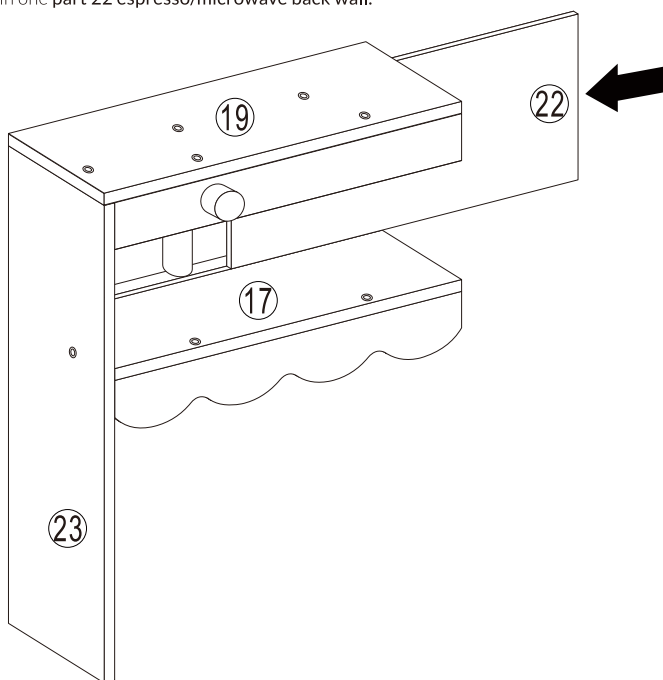


36

Insert two **part G** dowels into one **part 12** skirt panel II.
Then attach **part 24** microwave shelf using two **part C** screws.

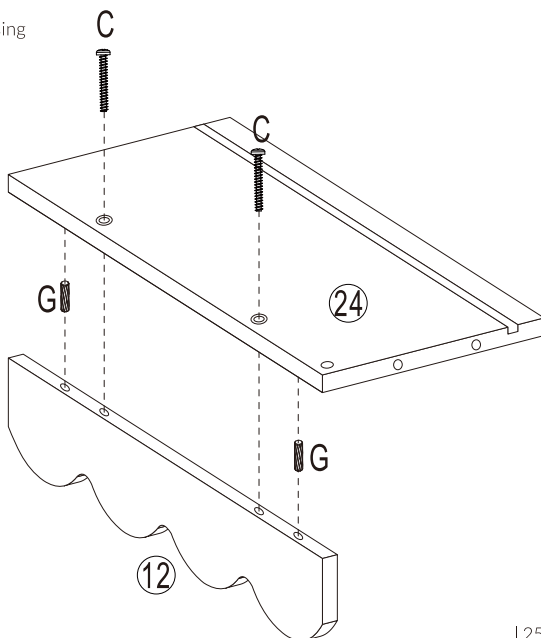


37

Insert one **part G** dowel into **part 24** espresso shelf.
Then attach **part 27** upper right wall using one **part C** screw.

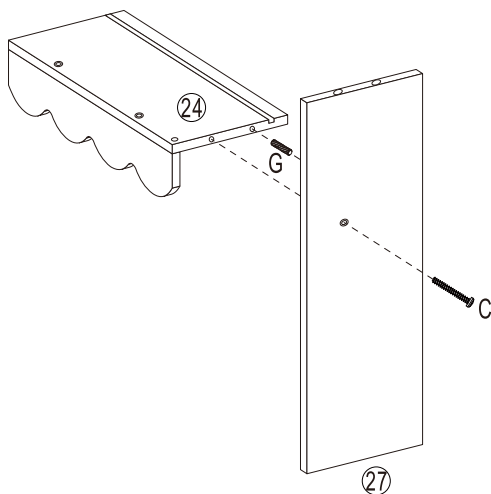


38

Insert one **part G** dowel into **part 27** upper right wall.
Then attach **part 26** microwave top panel using one **part C** screw.

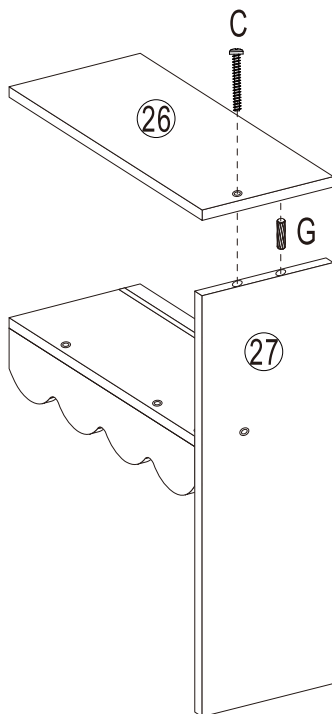


39 | Slide in one part 22 espresso/microwave back wall.

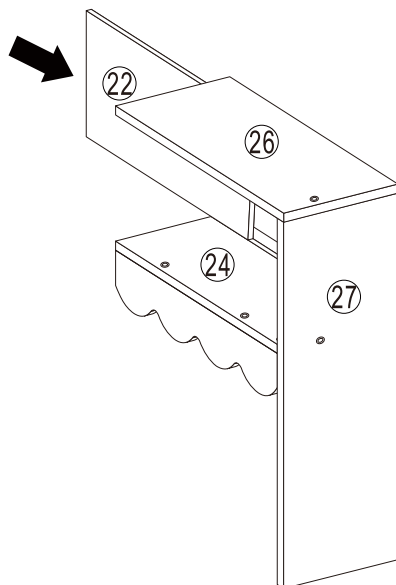

40 | Hammer four part J mounting blocks into the part 28 stovetop, then secure it by using four part F short screws.


Flip the stovetop and attach two part 45 burners using four part D long screws, two screws per burner.

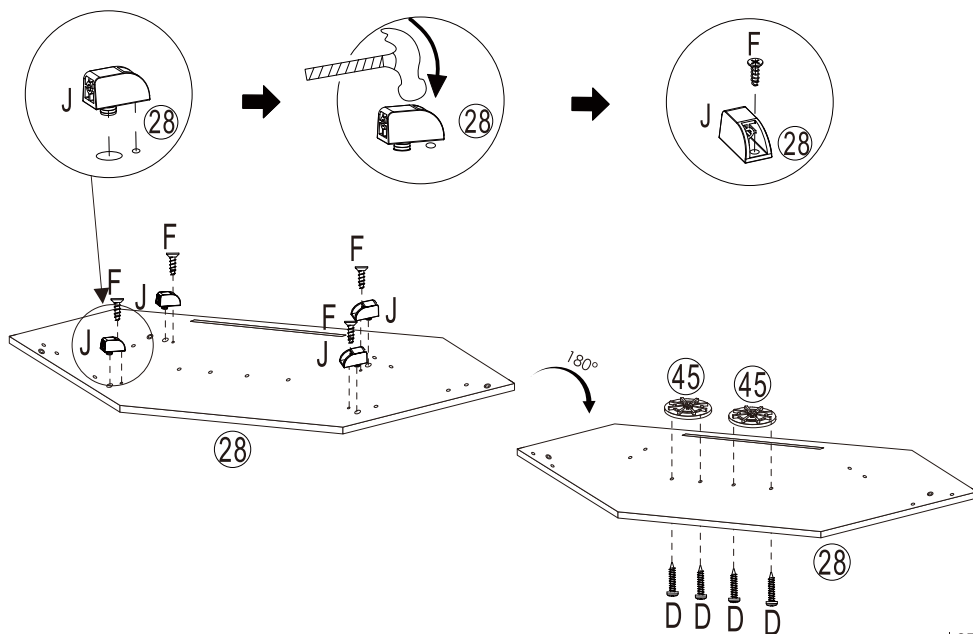

41

Insert one **part G** dowel into **part 29** left side backsplash wall.


Then attach **part 31** left side stove range using one **part C** screw.

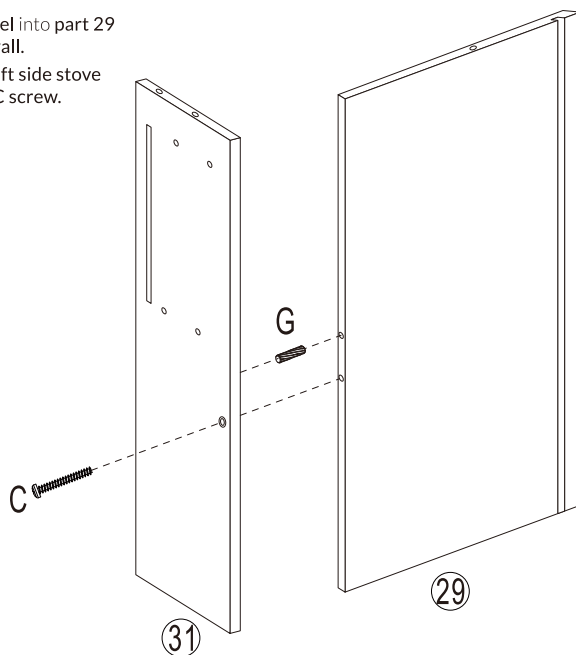

42

Insert one **part G** dowel into **part 30** right side backsplash wall.


Then attach **part 32** right side stove range using one **part C** screw.

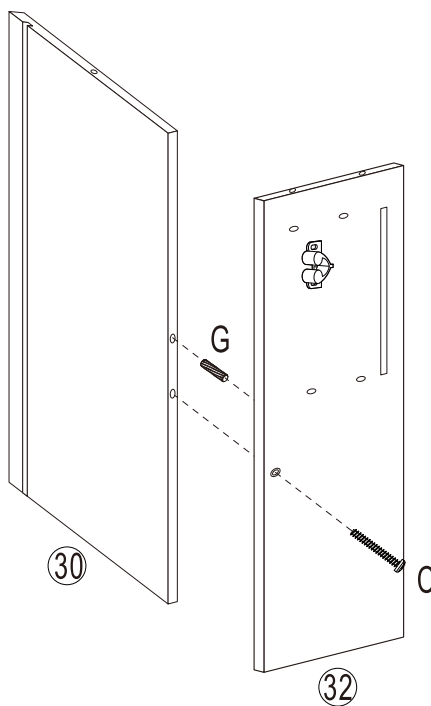

43

Insert four **part G** dowels into **part 28** stovetop.

Then attach the assembled **part 29** left side backsplash wall and **part 30** right side backsplash wall using four **part C** long bolts, two bolts per wall.

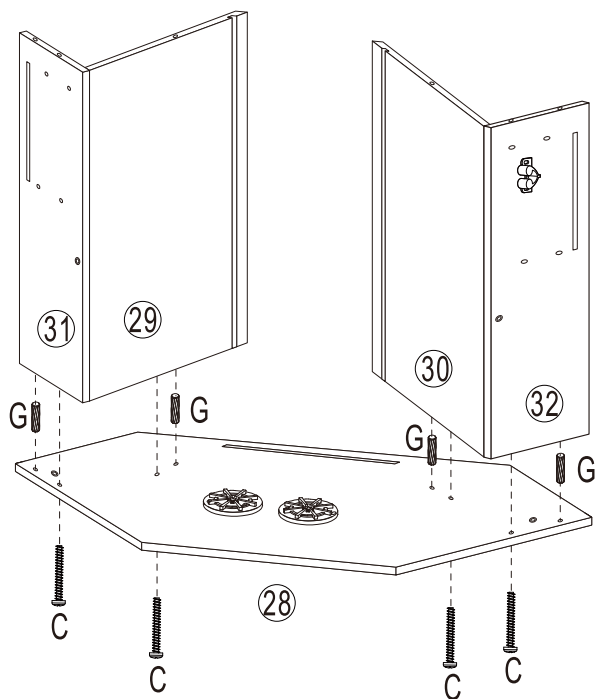



44

Secure two **part A** cam bolts into **part 34** hood vent.

Attach **part O** hood center to **part 35** hood bottom using two **part E** short bolts.

Attach **part 35** hood bottom to **part 34** hood vent using two **part B** cam locks.


NOTE: Use a screwdriver to turn the cam lock to secure the cam bolt.

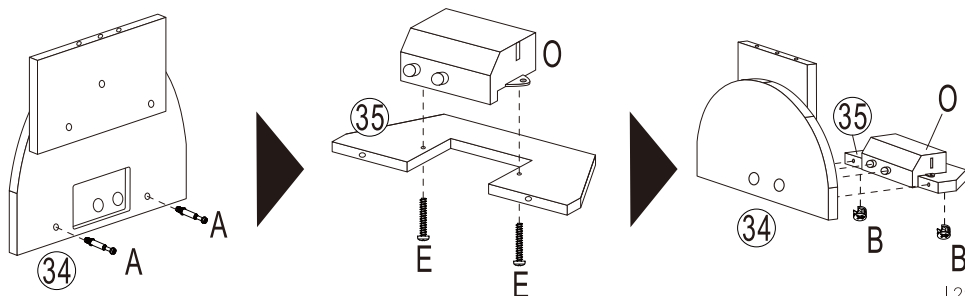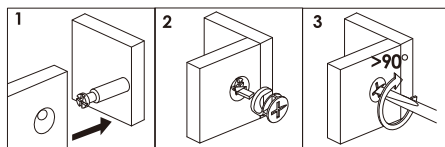

45

Attach part 34 hood vent to part 33 middle backsplash wall using two part C long bolts.


NOTE: Please pay attention to the direction of the pattern during installation.

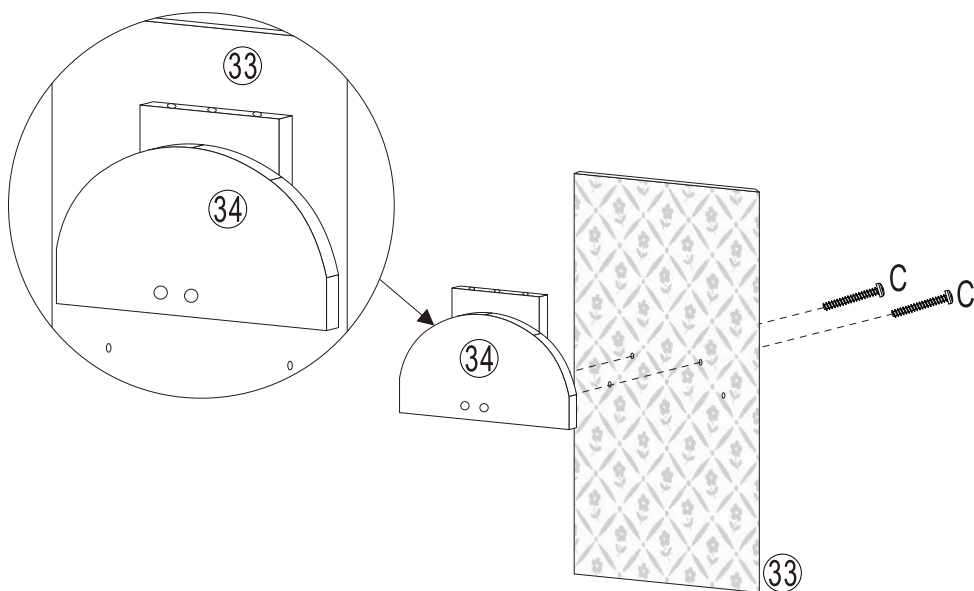

46


Attach three part 48 utensil hooks to one part 25 horizontal bar.

Attach two part M bar holders to part 25 horizontal bar, then attach the assembled bar to part 33 middle backsplash wall using two part D long screws.

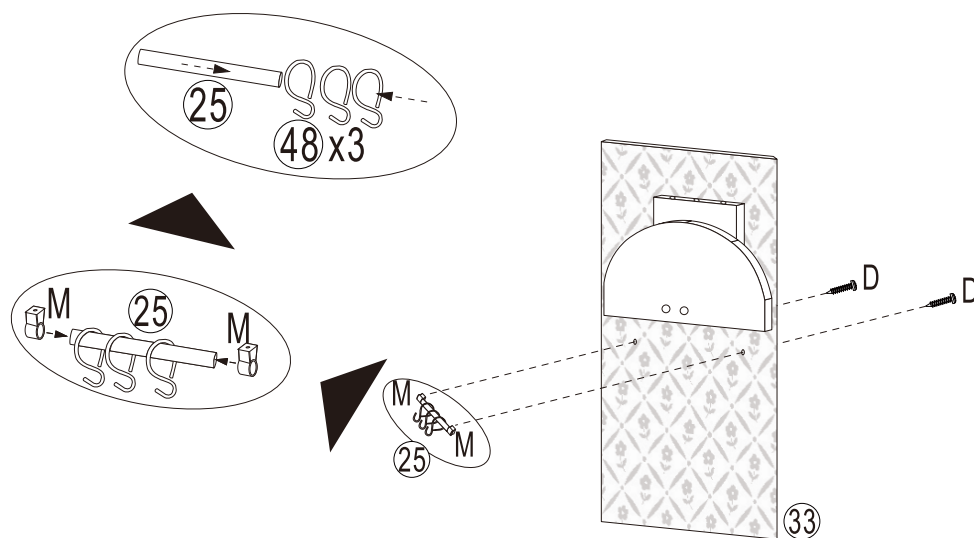


47

Slide in one **part 33**
middle backsplash wall.

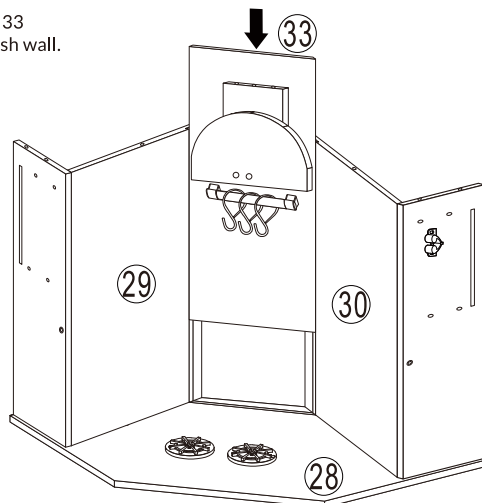

48


Insert six **part G** dowels into the
underside of **part 28** stovetop,
then attach the stovetop to the
center of the oven section.

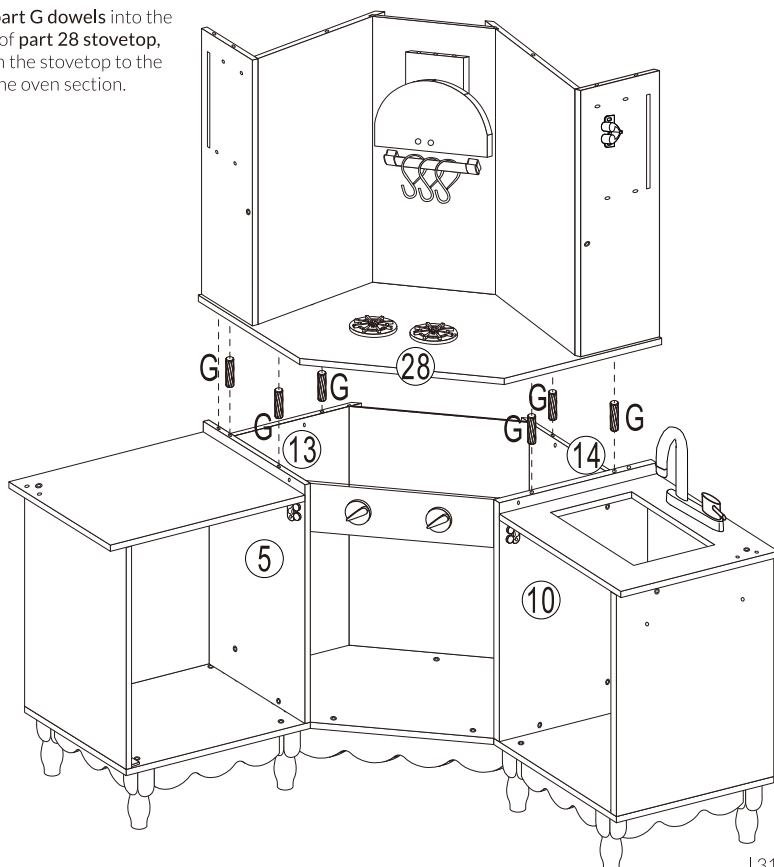

49

Secure the **part 5 left cabinet right side wall** to the **part J mounting block** underneath the stovetop using one **part D long screw**.

Secure the **part 10 right cabinet left side wall** to the **part J mounting block** underneath the stovetop using one **part D long screw**.

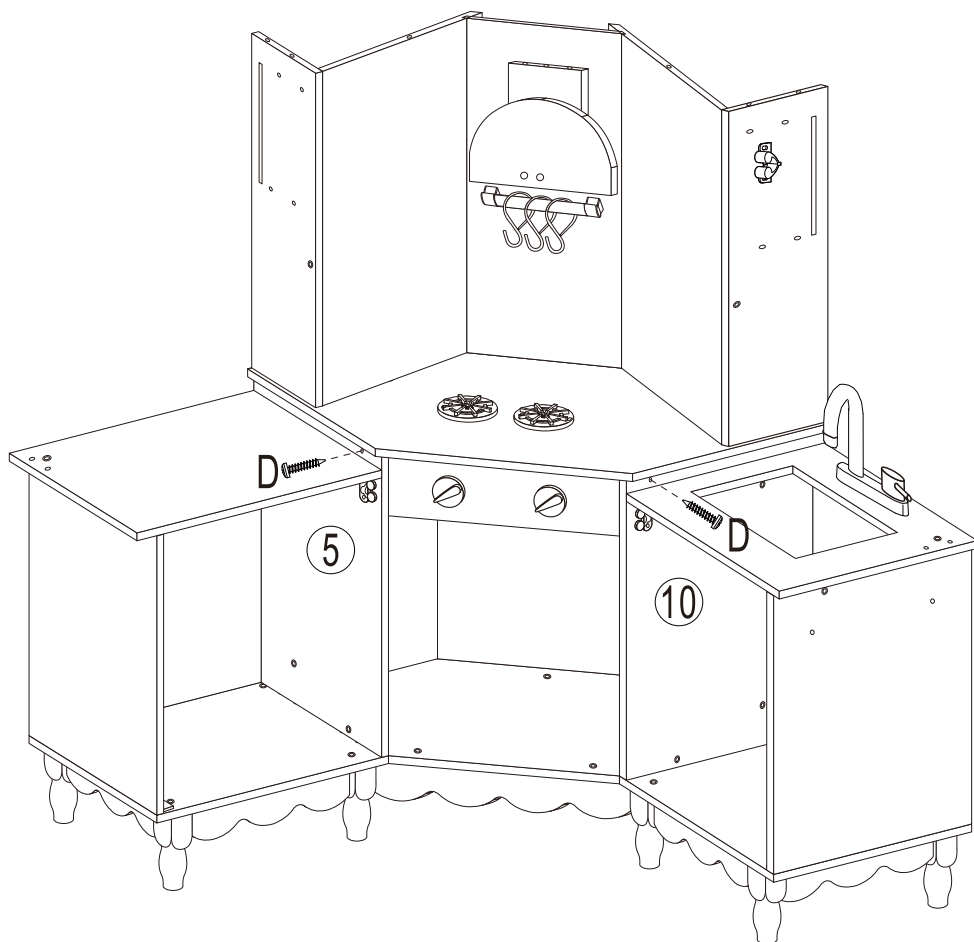


50

From the back of the cottage kitchen, secure two **part C long bolts** into the **part 28 stovetop**.

Secure the **part 14 right inner oven wall** to the **part J mounting block** underneath the stovetop using one **part D long screw**.


Secure the **part 13 left inner oven wall** to the **part J mounting block** underneath the stovetop using one **part D long screw**.

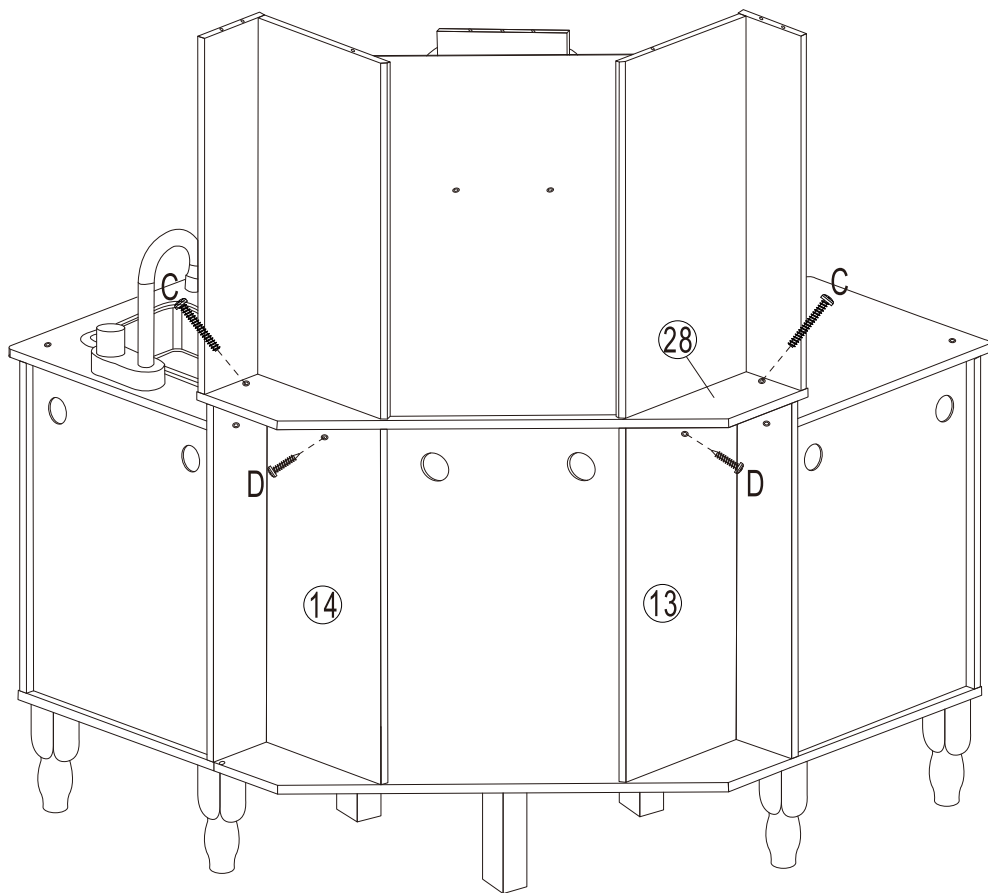

51

Insert one **part G** dowel into the **part 19** espresso top panel and one into the **part 17** espresso shelf. Then attach both parts to the **part 31** left side stove range using two **part C** long bolts.


Insert one **part G** dowel into the **part 23** upper left wall, then attach it to the **part 4** left countertop using one **part C** long bolt.

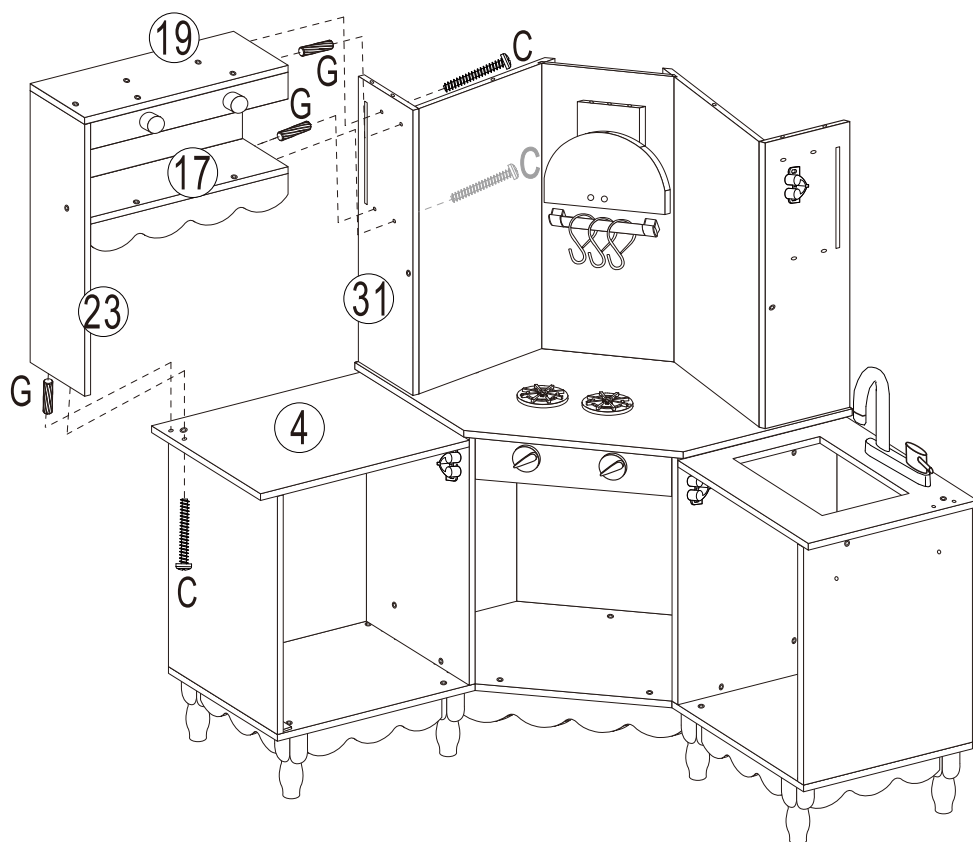

52

Insert one **part G** dowel into the **part 26** microwave top panel and one into the **part 24** microwave shelf. Then attach both parts to the **part 32** right side stove range using two **part C** long bolts.


Insert one **part G** dowel into the **part 27** upper right wall, then attach it to the **part 9** right countertop using one **part C** long bolt.

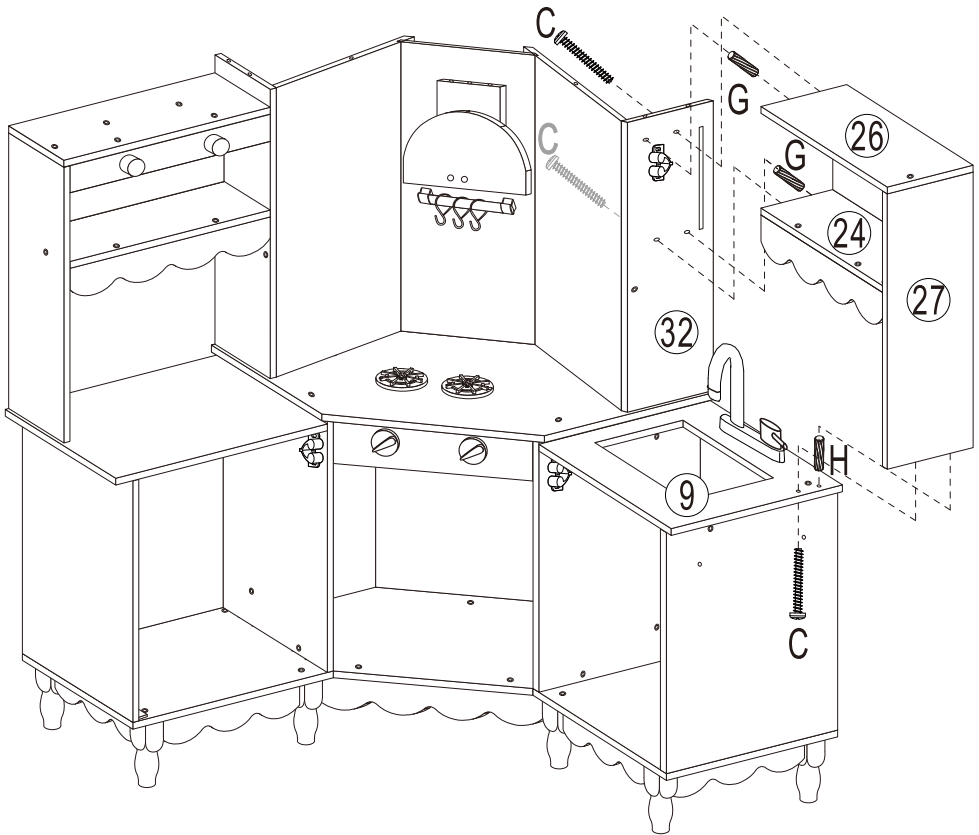

53

Insert six **part G** dowels into **part 36** middle top panel, then attach **part 36** to the kitchen assembly using three **part C** long bolts.

Attach two **part M** bar holders to one **part 25** horizontal bar, then attach the assembled bar to **part 8** right cabinet right side wall using two **part D** long screws.

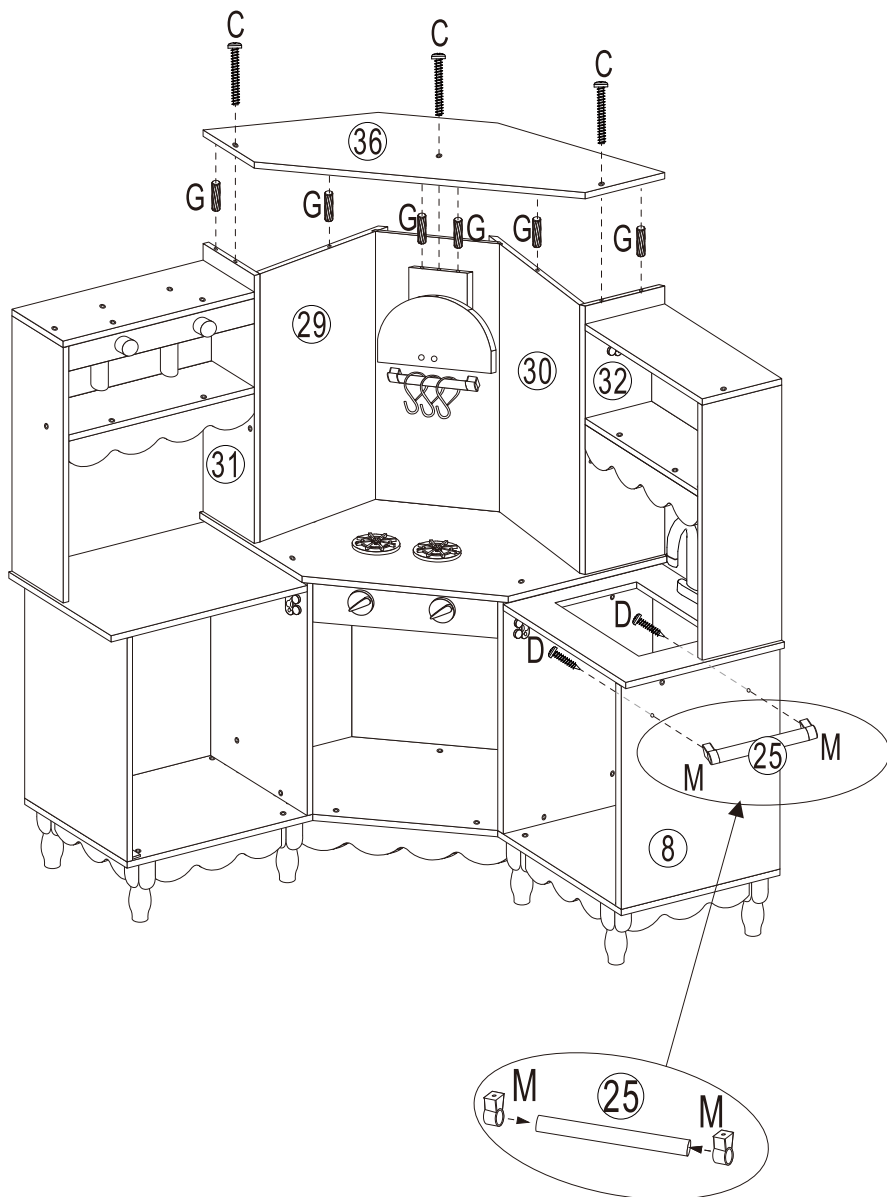


Insert the hinge peg on **part 37 refrigerator door** into the opening on **part 4 left countertop**.

Then insert one **part I hinge peg** into the opening on **part 1 left cabinet base panel**, and secure it to the part **37 refrigerator door** using two **part F short screws**.

Insert the hinge peg on **part 38 right cabinet door** into the opening on **part 9 right countertop**.

Then insert one **part I hinge peg** into the opening on **part 7 right cabinet base panel**, and secure it to the part **37 refrigerator door** using two **part F short screws**.

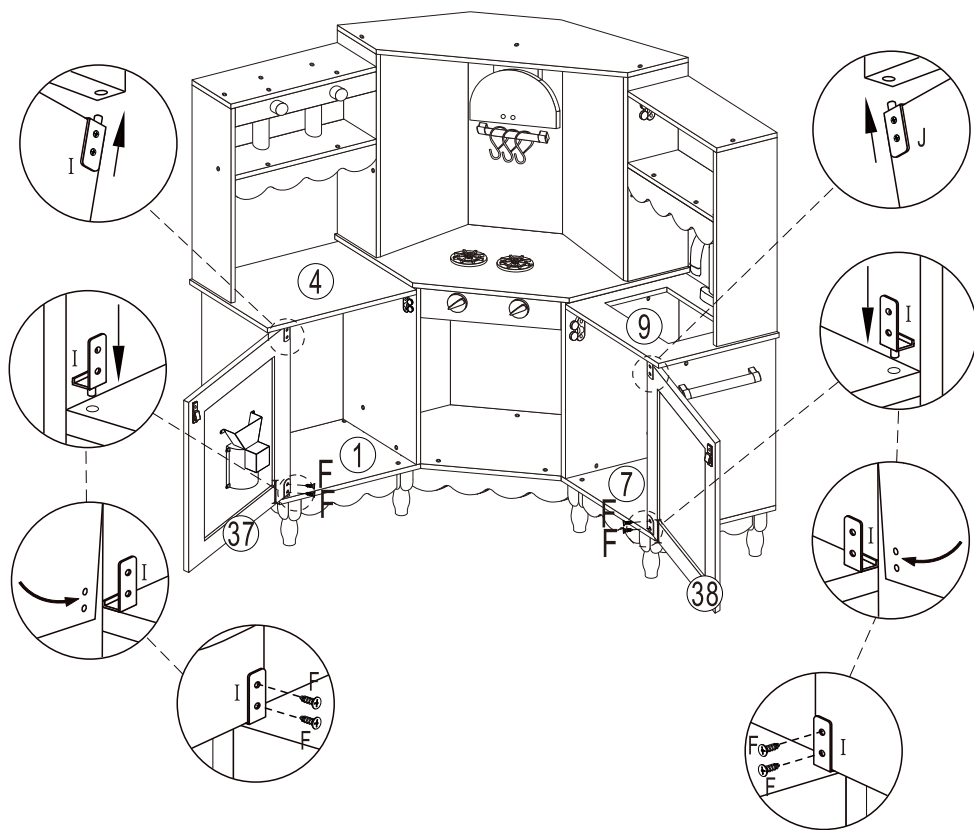


55


Attach the **part 40 oven door** by securing the **part N oven door hinges** with four **part F short screws**, two screws per hinge.

Insert **part 47 sink** into the opening of **part 9 right countertop**.

Insert the hinge peg on **part 39 microwave door** into the opening on **part 26 microwave top panel**.

Then insert one **part I hinge peg** into the opening on **part 24 microwave shelf**, and secure it to the **part 39 microwave door** using two **part F short screws**.

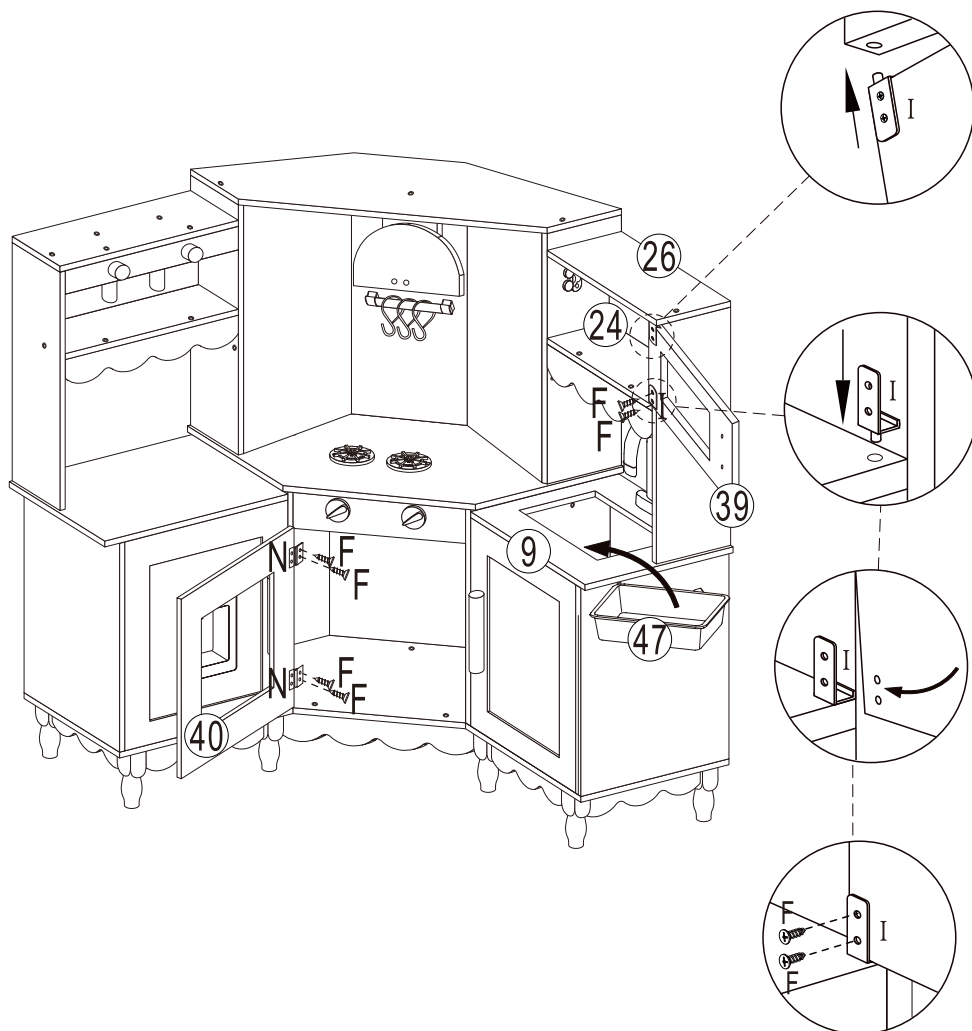

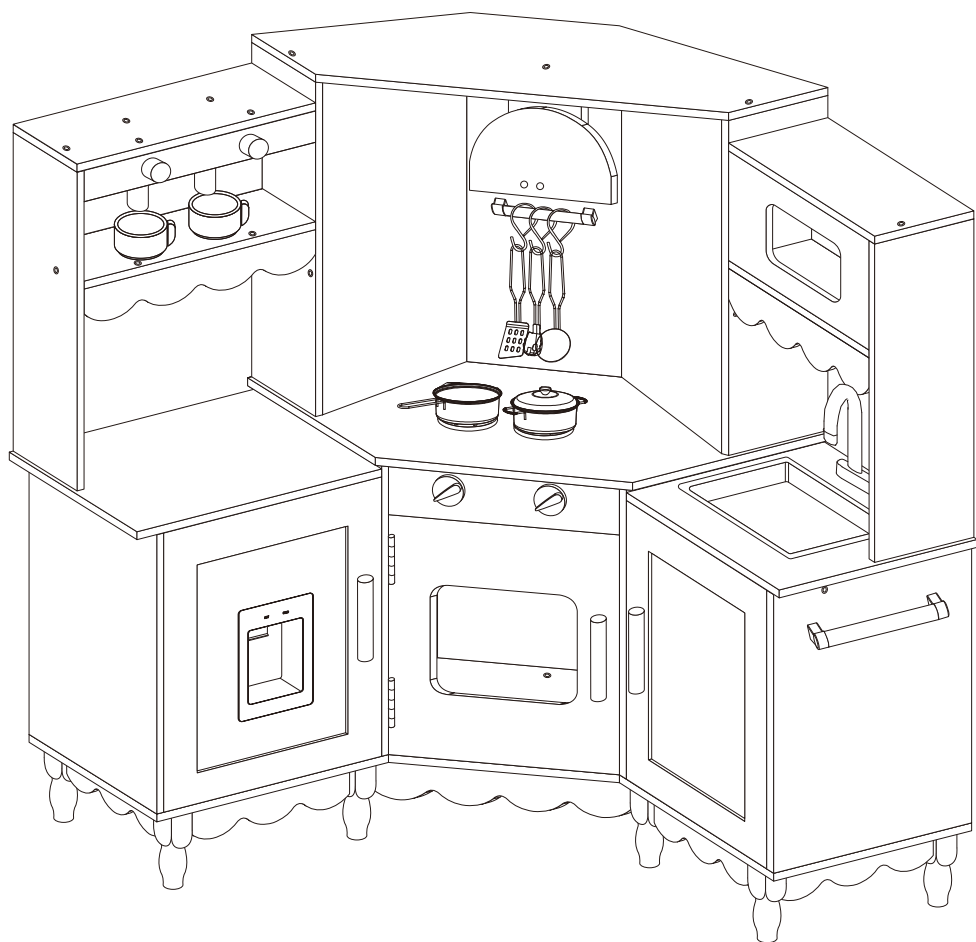



HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.