

The ENERGYSAVER® models below have the ability to set a maximum temperature limit directly from the control panel. This is beneficial to landlords and property management for conserving energy and reducing unnecessary gas consumption.

| <b>Procedure for Setting Maximum Temperature Limit on ENERGYSAVER® Furnaces</b>   |   |   |
|---|---|---|
| RFA Models:<br>ES08, ES11, ES17, ES22<br><br>FTA Models:<br>EX08C, EX11C, EX17C, EX22C  | WTA Models: EX17, EX22  | RFA Model: ES38   |
| 1. While the unit is off, press the "Function Lock" or "Child Lock" and "Up" arrow buttons at the same time for about 3 seconds until the unit beeps. | 1. While the unit is off, press the "Economy" and "Select" buttons at the same time for about 3 seconds until the unit beeps. | 1. While the unit is off, press the "Economy" and "up" buttons at the same time for about 3 seconds until the unit beeps. |
| 2. Select the maximum temperature with the up and down buttons.   |   |   |
| 3. Press the On/Off button to save the new setting.   |   |   |