

Let's get cooking

FIRE PIT GRIDDLE USER GUIDE

TIKI
BRAND
fire pit
& WOOD PACK

Table of contents

Safety	2
Assembly & Use	7
Care & Maintenance	12
Frequently Asked Questions	14
Limited Warranty	15

Fire Pit safety

⚠️WARNING: DO NOT use this TIKI® Brand Fire Pit until you have read the operating instructions and safety warnings. Failure to do so can cause death, serious injury or property damage.

- FOR OUTDOOR USE ONLY. Toxic carbon monoxide fumes can accumulate and cause asphyxiation.



WARNING Hot Surface Hazard

DO NOT touch when in use. The Fire Pit will be extremely hot when burning. Never attempt to touch, move, or clean your Fire Pit while in use and wait until it has completely cooled down.

FIRE PIT GRIDDLE



Fire Pit safety cont.

- **⚠ CAUTION:** Keep clothing, hair and face away from flame when lighting.
- DO NOT operate, light, or use the Fire Pit any closer than within 15 ft. of walls, structures or buildings, or other combustible materials such as dry grass/bushes, awnings, etc.
- DO NOT use under a patio roof, low hanging branches, trellises, or overhangs of any kind including covered porches.
- DO NOT use the Fire Pit in any explosive environment such as areas where flammable or combustible gases may be present.
- DO NOT use the Fire Pit with fuel sources other than the TIKI® Brand Wood Pack or natural cut firewood.
- DO NOT use an electric style grill starter. Use only matches or lighters which will provide a flame and then can be extinguished and moved away from the flame once the fire is ignited.
- DO NOT use gasoline, kerosene, diesel fuel, lighter fluid, alcohol, or any other flammable liquid to light or relight the Fire Pit.
- DO NOT store or use gasoline or any other flammable vapors, liquids, or materials in the vicinity of the Fire Pit.
- DO NOT store or use LP cylinders within 30 ft. of the Fire Pit while it is in operation.



Fire Pit safety cont.

- DO NOT use the Fire Pit on or near automobiles, trucks, vans, recreational vehicles, or boats.
- DO NOT place on any combustible surface such as wood, dry grass, leaves, mulch, etc.
- Only operate under the supervision of an adult.
- DO NOT lean over the Fire Pit when lighting or when it is in use.
- DO NOT breathe smoke from the fire and avoid getting smoke in your eyes.
- DO NOT use the Fire Pit while under the influence of drugs or alcohol.
- DO NOT leave the Fire Pit unattended, do not leave children or pets unattended near Fire Pit, and/or DO NOT leave a lit or hot Fire Pit unattended.
- Flames may reach a height of 3 ft. from the top of the Fire Pit.
- DO NOT use the Fire Pit in windy conditions.
- When using the Fire Pit, exercise the same precautions you would with any open fire.
- Never leave the Fire Pit unattended until the flames go out.
- DO NOT use water to extinguish the fire under normal circumstances as this could cause damage to the Fire Pit. Only extinguish with water during emergencies.



Fire Pit safety cont.

- DO NOT cover the Fire Pit with the cloth cover until it has completely cooled down approximately 12 hours.
- Always use the Fire Pit in accordance with all applicable local, state, and national codes. Contact your local fire department for details.
- DO NOT alter or modify the Fire Pit in any manner.
- The Fire Pit should be inspected and cleaned after every use.
- When lifting and moving the Fire Pit always wear protective clothes/gloves to prevent injury.

IMPORTANT: Natural cut firewood naturally contains sap, water, and air pockets as well as irregularities that lead to the potential to eject sparks. We recommend placing a fire screen (sold separately at TIKIBrand.com) over the Fire Pit to prevent sparks from escaping. Always follow local laws and ordinances when burning.




Fire Pit Griddle safety

⚠️WARNING: Product will become hot when in use. Always use grilling gloves, silicone holders, or oven mitts when handling the TIKI® Brand Fire Pit Griddle. Must be allowed 3 hours to cool before handling without gloves, cleaning, or storing.

- Keep the Fire Pit Griddle out of the reach of children. The Fire Pit Griddle should only be used by adults.
- DO NOT use water to extinguish the fire under normal circumstances as this could cause damage to the Fire Pit.
- DO NOT lean or stand on the Fire Pit Griddle.
- Always remove the Fire Pit Griddle before restarting a larger fire. This will cause the Fire Pit to overheat and may cause damage to the Fire Pit Griddle.



Pre-assembly

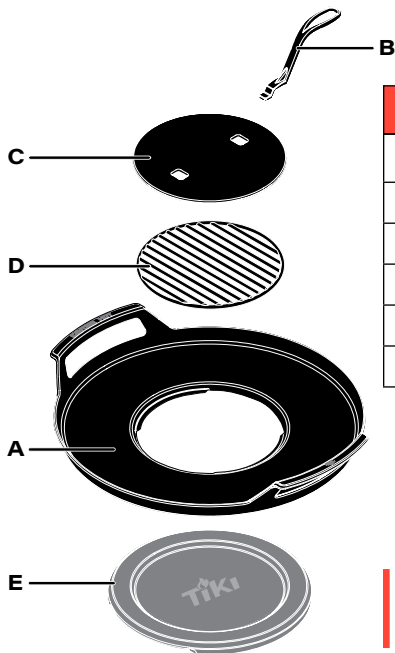

Part	Description	Qty
A	Outer Griddle	1
B	Removable Handle	1
C	Inner Griddle	1
D	Grill Grate	1
E	Wooden Trivet	1
F	Gloves	1



NOTE: Not shown to actual scale or size.




Assembly & Use



Insert a TIKI® Brand Wood Pack, natural cut firewood, or charcoal into the fire pit and light. Allow the fire to burn down to a bed of coals.

NOTE: Visible flame should not be reaching over the top ring for a good cooking fire.


With gloved hands, place the outer griddle (A) on the top ring of the fire pit by centering the griddle on the fire pit. There are locating rings under the griddle that aid in the alignment.

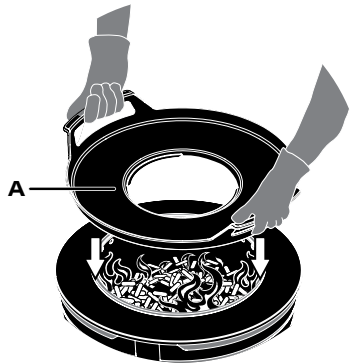

FIRE PIT GRIDDLE



Assembly & Use cont.

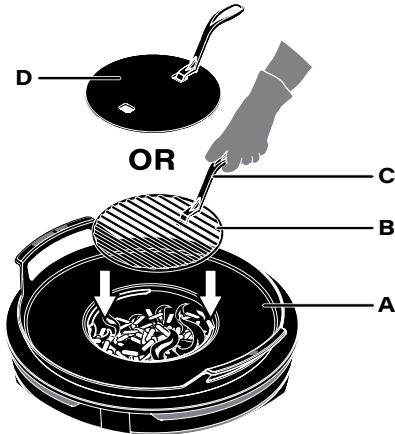


With a gloved hand, place the grill grate (B) or the inner griddle (D) in the center of the outer griddle (A) using the removable handle (C).

Allow the system to heat for 5-10 minutes or until it reaches 400-500 degrees F. The griddle is now ready for cooking.

TIP: Use a laser thermometer or sprinkle of water and listen for the sizzle to know when you're ready to cook.



Assembly & Use cont.

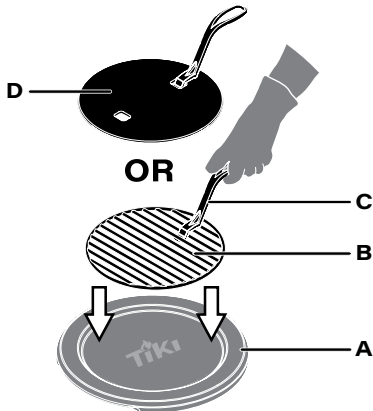

The wooden trivet provides protection to your table from the hot inner griddle or grill grate. You may use it as a cooling area before cleaning and storage or as a serving area for your favorite foods right off the fire. With a gloved hand, place the grill grate (B) or the inner griddle (D) in the center of the wooden trivet (A) using the removable handle (C).

Assembly & Use cont.

To refuel your fire, use gloves and remove the grill grate or the inner griddle using the removable handle and place into the wooden trivet as shown on page 10. Then add wood or charcoal.

NOTE: DO NOT add a wood pack, starter pack, or more than one piece of wood at a time. This will cause the fire pit to overheat and may damage the griddle.



When cooking is complete, use grill gloves, oven mitts, or silicone holders to remove the griddle and place on a non-combustible surface where it won't be in the way. It can take up to 3 hours for the griddle to cool.



Care & Maintenance

⚠️ CAUTION: Allow the griddle to cool for at least 3 hours before performing any cleaning or maintenance. Some parts may contain sharp edges. Wear protective gloves when moving or handling products.

Seasoning

- Start a fire and wait for a bed of coals. Visible flame should not be reaching over the top ring.
- Place the griddle on the fire and allow it to warm for 5 minutes.
- Using tongs or grill gloved hand, apply oil to all surfaces using a towel. Recommended oils are Avocado, Canola, Grapeseed, or Vegetable Oil.
- Allow the oil to be heated for 30 minutes between 350-425 degrees F.
- Wipe away excess oil and store in a dry place.

Cleaning

- For day-to-day use, clean your griddle using a small amount of soap and water. Be sure to dry the griddle promptly to avoid rust from developing.
- For a deep clean, use a large tub or sink to create a 25% vinegar/75% water solution. Soak the griddle for 1 hour. Sprinkle with baking powder and scrub with steel wool. Rinse with water, dry, and re-season prior to next use.



Care & Maintenance cont.

Cleaning cont.

- If there is grease on your TIKI® Brand Fire Pit, you may wipe away with a dry paper towel or towel when warm. After the Fire Pit is cool, use dish soap and a towel to clean. DO NOT use oven cleaner or abrasive cleaners as they will damage the finish.

Storage

- Store your griddle in a dry place
- You may store your TIKI® Brand Fire Pit Griddle on top of your fire pit under the TIKI® Brand Fire Pit Cover. In high humidity conditions you may experience discoloration over time. At that time use the cleaning and seasoning instructions to rejuvenate your cast iron griddle.
- DO NOT store on top of the TIKI® Brand Fire Pit Tabletop.



Frequently Asked Questions

How do I know when I should season my griddle?

If your griddle is showing rust or isn't as nonstick as it used to be its time to re-season your griddle.

How should I remove the griddle from the Fire Pit?

Use grill gloves, silicone grips, or oven mits to handle the outer griddle. The removable handle is intended for use with a gloved hand to remove the cooking inserts.

Can the griddle be used with Wood Packs, cord wood, or charcoal?

Yes, all three fuel types will work great to start your fire. DO NOT add a wood pack, starter pack, or more than one piece of wood at a time after you have started cooking. This will cause the fire pit to overheat and may damage the griddle.

Am I able to refuel my fire with the griddle installed?

Yes. To refuel your fire, remove the inner accessory using the removable handle and place into the trivet. Add charcoal or wood. DO NOT add a wood pack, starter pack, or more than one piece of wood at a time. This will cause the Fire Pit to overheat and may damage the griddle.



Frequently Asked Questions cont.

Am I able to stoke my fire with the griddle installed?

Yes. To refuel your fire, remove the inner accessory using the removable handle and place it into the trivet. Stoke the fire as necessary.

Where should I store my griddle?

The best place to store in a dry location. You may store your griddle on top of your fire pit under the TIKI® Brand Fire Pit Cover. In high humidity conditions you may experience discoloration over time. At that time use the cleaning and seasoning instructions to rejuvenate your cast iron griddle.

Limited Warranty

Visit tikibrand.com/our-guarantee or contact us at 1-888-473-1088.

For information on patents go to tikibrand.com/patents

⚠️ WARNING: This product can expose you to chemicals including lead, which is known to the State of California to cause Cancer and birth defects or other reproductive harm. For more information go to www.P65warnings.ca.gov.



Keep the fire going

FOR WOOD PACKS AND OTHER PRODUCTS
TO HELP YOU ENJOY YOUR FIRE,
VISIT [TIKIBRAND.COM](https://www.tikibrand.com)



[TIKIBRAND.COM](https://www.tikibrand.com)

4002259

©2023 Lamplight Farms Incorporated