



**OWNER'S MANUAL**

# **ELECTRIC FIREPLACE HEATER**

---

21" | 1500 / 750W



---

**MODEL 1VAHFP21**



## **CONSUMER PRODUCT INFORMATION**

---

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: \_\_\_\_\_

Location: \_\_\_\_\_

Date Purchased: \_\_\_\_\_

# CONTENTS

Safety Guidelines .....	4
Usage .....	7
Overheating Safety .....	9
Cleaning Your Fan Heater.....	9
Disposal of Electrical and Electronic Equipment .....	10

**IMPORTANT NOTE:**

Read the manual carefully. Make sure to save this manual for future reference. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different.

# SAFETY GUIDELINES

## IMPORTANT SAFEGUARDS

---

When using any electrical appliance basic precautions should be followed. Please read the following instructions as they are for your benefit and safety:

1. Make sure the power supply used corresponds to the rating label.
2. Never obstruct or block any openings of the heater.
3. Use the heater only on a flat surface.
4. Always disconnect the appliance from the main power supply when not in use and when cleaning.
5. Do not leave the heater "ON" unattended.
6. Never cover the heater as this may lead to risk of fire.
7. Keep the appliance a distance of at least 90 cm from any combustible material such as furniture, curtains, bedding, clothes or papers.
8. Do not use this heater in the immediate surrounding of a bath, a shower or a swimming pool.
9. Do not immerse the heater in water or allow for water to come into contact with the plug or control device.
10. Keep this heater clean. Do not allow objects to enter the ventilation opening as this may cause electric shock, fire or damage to the heater.
11. Close supervision is require when any appliance is used near or by children.
12. Never allow the cord to touch wet or hot surfaces, become twisted or be within the reach of children.
13. Do not use outdoors
14. Do not place on or near a hot gas electric burner.
15. If the supply cord is damaged, it must be replaced the manufacture or its service agent or a similarly qualified person must replace it in order to avoid a hazard.
16. Do not use the appliance for other than its intended use as described in this instruction book.
17. Do not place the heater immediately below a socket outlet.
18. This appliance is intended for household use only.
19. Do not leave the heater on overnight.

20. While cleaning, make sure not to use a wet cloth or use water on any part of the unit, as this may cause a short circuit or electrical shock.
21. Do not use this unit in any area where water present.
22. Make sure the power cord is placed at the back away from the front panel of the heater.
23. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
24. Children should be supervised to ensure that they do not play with the appliance.
25. Caution: Do not cover anything on your heater when in use.
26. The heater must not be placed near a socket and the following hint: This fan-heater must not be used near a bath, shower or swimming pool.
27. This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
28. **NOTE:** It is normal when the heaters are turned on for the first time or when they are turned on after having not been used for a long period of time, the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.
29. Hyperthermia can result in death. Symptoms of hyperthermia include high body temperature, headache, nausea, vomiting, tiredness, dizziness, fainting, and rapid pulse. If you begin to experience symptoms related to hyperthermia, turn off the heater and seek medical attention.
30. To avoid excessive room temperatures which can cause hyperthermia: DO NOT leave product running unattended in a confined space around infants, or individuals with reduced physical, sensory, or mental capabilities.

## **WARNING: CONTINUOUS OPERATION AND TIMER USE**

---

- Plug directly into a wall outlet. Do not use an extension cord, power strip, surge protector, outlet adapter, or any other type of cord extension.
- Do not use the space heater in an outlet that is loose or does not hold the plug securely.
- Do not operate the unit if the power cord, plug, or outlet is damaged, loose, or overheating.
- This unit is not designed for unattended use or continuous operation for indefinite periods.
- If this unit includes a timer, the timer function is provided solely for convenience. It is not a safety device and is not a substitute for active supervision.
- Periodically turn the unit off and discontinue use immediately if any abnormal operation is observed.

## **IMPORTANT SAFETY WARNING: PACKAGING REMOVAL**

---

**DO NOT** operate this unit while it is inside, resting on, or in contact with Styrofoam, foam blocks, plastic bags, tape, or any packaging materials.

**FAILURE TO REMOVE ALL PACKAGING MATERIALS BEFORE USE MAY RESULT IN OVERHEATING, MELTING, SMOKE, FIRE, PROPERTY DAMAGE, OR PERSONAL INJURY.**

# USAGE

## BEFORE USING THIS PRODUCT

---

- Remove the unit completely from the carton.
- Remove ALL Styrofoam, foam inserts, plastic coverings, tape, and protective materials.
- Inspect all air intake and exhaust openings to ensure they are fully clear and unobstructed.

 **NEVER attempt to operate the unit while packaging materials are attached or nearby.**

## FOR SAFE OPERATION

---

- Stop using immediately if unusual noise, odor, or abnormal operation occurs.
- Do not operate this unit unattended for extended periods of time.
- Keep the heater out of reach of children and pets during operation.
- Do not rely on the timer function as a substitute for supervision.
- This heater is intended for **indoor, dry-location use only**.
- Do not operate outdoors or in damp environments.
- Do not place the heater on soft surfaces such as beds, sofas, or thick carpeting that may restrict airflow.
- Maintain proper clearances and ventilation during operation.
- Do not insert or allow foreign objects to enter ventilation or exhaust openings.
- Do not modify the plug or attempt to bypass built-in safety features.
- Always unplug the unit when not in use or before cleaning or maintenance.
- Allow the unit to cool before moving or storing.
- Turn the unit off periodically to allow internal components to cool.

 **Failure to follow these instructions may result in damage to the unit or unsafe operating conditions.**

## HOW TO OPERATE

THE PLUG NEEDS TO BE INSTALLED DIRECTLY INTO A WALL OUTLET, NEVER USE AN EXTENSION CORD OR ANY TYPE OF ADAPTER. THE HEATER SHOULD NEVER SHARE A WALL OUTLET WITH ANOTHER APPLIANCE.


Turn on the ON/OFF main switch, which is located on the back bottom corner of the fireplace.



### FLAME

Press the left button  to start the flame effect. Press it again to turn off the flame.


### HEAT SETTING

Press the right button  to start the heating mode. Press once for low heat; press twice for high heat; press again to turn the heat and flame effect off. The fan will run for 30 seconds before powering off.

### TEMPERATURE

Press the button  to adjust the temperature from 59-100°F (15-38°C).

### TIMER

Press the button  to set the timer for up to 12 hours.

## REMOTE CONTROL

The remote requires a line-of-sight path to allow for the signal to be received by the unit. Position the unit so the receiver lens is visible from the remote control.

The symbols on the remote correspond to the symbols on the main unit, you can use it to get corresponding function.

**The remote control uses one button cells, model No. CR2025 (3V). We recommend the use of Lithium type battery for longer use.**



**Note: Please follow battery disposal instruction on battery packaging, or contact your local councils for safely disposal of batteries.**

# SAFETY, CLEANING, DISPOSAL

## OVERHEATING SAFETY DEVICE

---

The heater is fitted with a safety device. If the heater overheats, it will stop working. Please turn the heater off and inspect of blockage of inlet or outlet. The safety device will restart the heater after several minutes.

If the safety device fails to restart the heater again, contact customer service for troubleshooting.

## CLEANING YOUR FAN HEATER

---

1. Always disconnect the appliance from the main supply before cleaning.
2. Clean the outside of the heater by wiping with damp cloth and buff with a dry cloth.
3. Do not use Benzine or any other detergents / solvents or chemical agents to clean the heater.

# DISPOSAL

## DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT

---



To protect our environment and to recycle the raw materials used as completely as possible, the consumer is asked to return unserviceable equipment to the public collection system for electrical and electronic. The symbol of the crossed indicates that this product must be returned to the collection point for electronic waste to feed it by recycling the best possible raw material recycling.

By ensuring this product you will prevent possible negative effects on the environment and human health, which could otherwise be caused due to improper disposal of that product. The recycling of materials from this product will help to preserve a healthy environment and natural resources.





4560 W. 160th Street  
Cleveland, OH 44135

833-950-1185 | [support@visionairproducts.com](mailto:support@visionairproducts.com)  
[www.visionairproducts.com](http://www.visionairproducts.com)