

ASSEMBLY INSTRUCTIONS



MODEL NO W804, 10' x 5'6" 3P Connectent for Canopy

SAFETY WARNING - DOs AND DO NOTs

EVERYONE WHO USES THIS TENT SHOULD READ THIS MANUAL AND BECOME FAMILIAR WITH ALL SAFETY WARNINGS AND PRECAUTIONS FOR SAFE USE, ASSEMBLY, CARE, MAINTENANCE, AND STORAGE. KEEP THIS MANUAL SO YOU CAN REFER TO IT LATER.

- ⚠ DANGER** CARBON MONOXIDE GAS WILL KILL YOU
- Stoves, heaters, grills, lantern, candles, and other fuel-burning devices that burn propane, natural gas, charcoal, kerosene, coal, or other fuels produce a toxic gas called carbon monoxide. Because carbon monoxide gas is invisible, odorless, and colorless, a dangerous level of carbon monoxide gas can accumulate in a tent which cannot be detected by sight, smell, or taste. For these reasons:
- DO NOT use matches, lighters, stoves, heaters, grills, lanterns, candles, cooking equipment, or other fuel-burning devices inside or near a tent.
 - DO NOT build fires inside or near a tent.
 - DO NOT leave campfires unattended.

Your failure to follow this warning will cause death, serious injury, or permanent disability to you or others.

- ⚠ DANGER** PROTECT YOUR CHILDREN
- DO NOT leave children unattended inside a tent or in camp.
 - DO NOT allow children to assemble a tent.
 - DO NOT allow children to enter or exit a tent except through the door.
 - DO NOT allow children to remain in a closed-up tent on hot days.

Your failure to follow this warning will cause death, serious injury, or permanent disability to your children.

- ⚠ WARNING** FLAMMABILITY WARNING KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC
- This tent is made with flame resistant fabric which meets CPAI-84 specification. IT IS NOT FIREPROOF. The fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective. Your failure to follow this warning could cause death, serious injury, or permanent disability to you or others.

CAMPING DO'S AND DON'TS DO NOT...

1. Do not pitch tent near open fire.
2. Do not leave campfire unattended.
3. Do not leave children unattended inside a tent.
4. Do not use heating, lighting or cooking equipment with open flames in or near tents.
5. Do not use other than recommended water repellent compounds on your tent.
6. Do not spray the tent with insecticide.
7. Do not store tent on concrete floor.

DO...

1. Always extinguish campfire before leaving area.
2. Exercise care when using electricity and lighting in and near tents.
3. Make certain your tent is properly ventilated in all weather conditions. In extreme weather conditions, snow could obstruct airflow and cause asphyxiation unless cleared frequently.
4. Anchor your tent securely to provide additional security from changing climatic conditions. Snow pegs, skis and/or heavy rocks may be necessary to supplement tent stakes and guy cords.
5. Take your tent down and store properly after camping.

CARE

DO NOT LEAVE YOUR TENT SET UP IN DIRECT SUNLIGHT LONGER THAN NECESSARY. THE SUN'S ULTRAVIOLET (UV) LIGHT DEGRADES ALMOST EVERY FABRIC AND MATERIAL. IF LEFT IN SUNLIGHT FOR PROLONGED PERIODS OF TIME, FABRIC WILL FADE AND WEAKEN. DO NOT STORE TENT ON CONCRETE FLOOR. DO NOT SPRAY THE TENT WITH INSECTICIDE.

Your tent is water repellent, however, it is not waterproof. During heavy rain, some leakage may occur. Keep objects from touching the inside of the tent. Such objects may cause leakage at point of contact. If seam leakage occurs, it can be controlled by applying a seam sealer compound.

EXERCISE CARE WHEN USING ELECTRIC DEVICES IN AND NEAR TENTS.

Although our tents and screen houses are constructed to rigid specifications, periods of wind or rain soaking the ground may loosen the stakes and cause the uprights to sink into the ground. This will weaken the rigidity of the overall structure. Water pockets may also form in the roof if the unit is not assembled taut, possibly causing broken frames and torn fabric.

REPLACEMENT PARTS

If you have questions or need to order a part, call 1-800-325-4121 or send an e-mail to contactus@wenzelco.com. Have your model number or part number ready when you call. DO NOT ORDER BY REFERENCE KEY NUMBER.

Send your request for parts to:
Exxel Outdoors, LLC.
6235 Lookout Road
Boulder, CO 80301

KEY NO.	MODEL NO W804, 10' x 5'6" 3P Connectent for Canopy		QTY
	DESCRIPTION	PART NO.	REQ
	Steel Stake	PIN STAKE	4

ASSEMBLY INSTRUCTIONS



OZARK TRAIL®
OUTDOOR EQUIPMENT

MODEL NO W804, 10' x 5'6" 3P Connectent for Canopy

IMPORTANT: WE ADVISE YOU TO ASSEMBLE THE TENT ONCE BEFORE GOING CAMPING TO BECOME FAMILIAR WITH THE ASSEMBLY OF THE TENT.

 
NOTE: PLEASE LOOK AT THE REPLACEMENT PARTS DIAGRAM TO SEE HOW YOUR FRAME IS ASSEMBLED.

TO PROLONG THE LIFE OF THE TENT FLOOR, SELECT A LEVEL, CLEAN AREA FOR THE CAMPSITE. TO PREVENT DAMAGE TO THE ZIPPER, UNZIP THE DOOR TO ALLOW AIR TO ENTER THE TENT.

TO IMPROVE THE WEATHER RESISTANCE OF YOUR TENT, IT IS ADVISABLE TO USE SEAM SEALER TO COAT ALL EXPOSED SEAMS. YOU SHOULD APPLY ONLY TO THE UNDERSIDE OF THE FLY AND INSIDE SEAMS OF THE TENT. IF APPLIED TO THE OUTSIDE SEAMS, DISCOLORATION OF YOUR TENT MAY OCCUR. SEAM SEALER IS AVAILABLE IN THE CAMPING SECTION OF ANY LOCAL SPORTING GOODS STORE.

STEP 1: Set up your 10' x 10' canopy following the directions that came with the canopy. Make sure it is staked to the ground.

STEP 2: Lower the height of the canopy to the lowest setting to connect the tent to the frame.

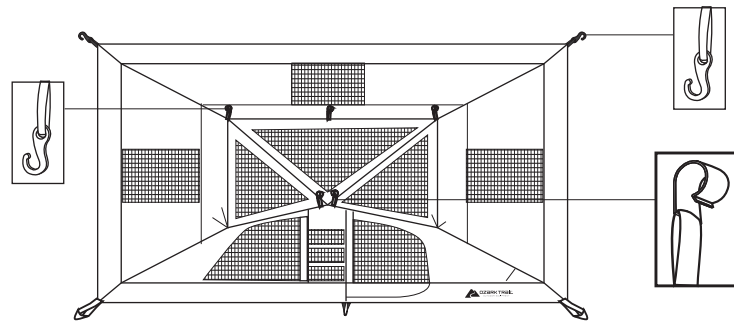

Top view.

STEP 3: Spread the tent out flat under the canopy, floor side down and unzip the door.

STEP 4: Starting at the peak of the tent attach the clips on the roof of the tent to the 2 poles that are on the front side of the canopy.

 
⚠ WARNING: Elastic cords can snap back and hit your eye.

To reduce the risk of injury to you and others:

- Keep your body and face clear.
- Do not over stretch elastic cords.
- Maintain firm grip on hook.
- Pull the hook toward you; if it slips it will spring away from you.
- Make sure hook is fully clipped to canopy before releasing.
- Wear protective eye wear during tent assembly.

Your failure to follow this warning could cause serious injury or permanent disability.


STEP 5: Locate the two "S" hooks on the elastic cords that are located at the upper eave corners at the back of the tent. Connect the "S" hooks to the eyelets in the back upper corners of the canopy.

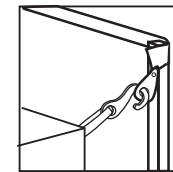

STEP 6: Tie the three fabric ties located at the 2 sides of the tent and the center back to the center of the canopy frame.




 STEP 7: There are "S" hooks located at the bottom corners of the tent. These should be connected to the holes in the bottom of the canopy legs.

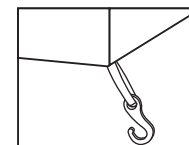


STEP 8: Once the tent is attached to the canopy frame, raise the canopy to its full height.

 STEP 9: Stake down the front two corners of the tent as well as the two intermediate points along the front and back walls of the tent. Hammer the stakes into the ground at a 45° angle using a hammer or mallet, making sure to pull tent floor out even and snug.

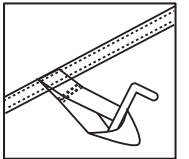

 The assembled tent should appear as shown.

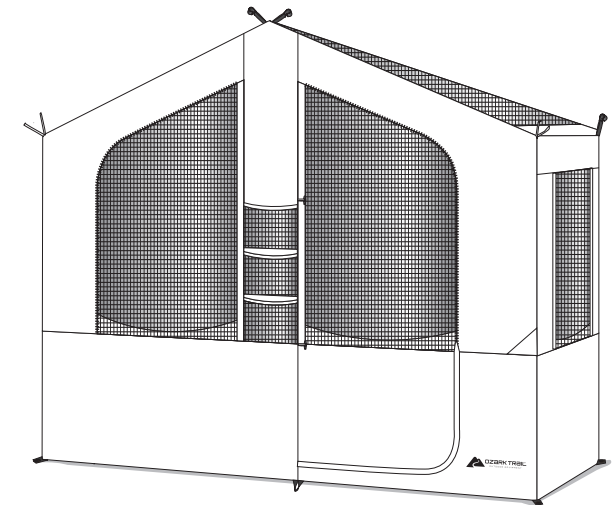

NOTE: To take down tent, follow steps above in the reverse order. Be sure to leave door and windows unzipped. **MAKE SURE TENT IS CLEAN AND DRY BEFORE STORING.** Place stakes into stake bag which is provided. The tent should be folded into equal parts toward the center of the tent to distribute the bulk. Start a small tight roll, the width of the carry bag. Roll the tent towards the door to allow air to escape. Once rolled, tie a string or rope around tent to hold into place. Place the rolled-up tent into carry bag.