


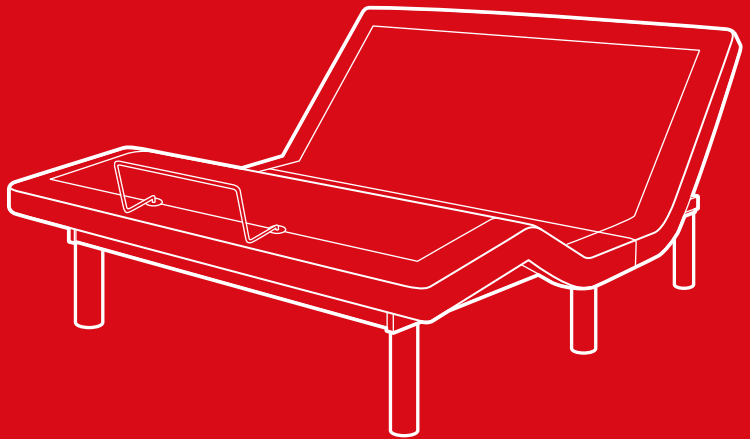

bestchoiceproducts



INSTRUCTION MANUAL

Upholstered Adjustable
Queen Bed Base



bestchoiceproducts

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

! NOTICE

Please retain these instructions for future reference.

- This item is intended for indoor, household use only.
- Ensure that your voltage is consistent with specifications.
- Do not modify the plug in any way.
- This item is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the item by a person responsible for their safety.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

! WARNING

- Do not use this item if your physician or healthcare professional has advised against massager use.
- If you experience any pain, illness, or discomfort during use, discontinue using this item and consult with a physician.
- This product features electrical components. Do not expose to high temperatures or humidity.
- Keep item away from direct sunlight and other heat sources (stove, heater, etc.).
- Do not spill water on the electrical components or connectors.
- Do not touch the plug or operate with wet hands.
- Do not unplug by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
- Do not use if the plug or any components are damaged.

TOOLS REQUIRED



2 AAA BATTERIES
(FOR REMOTE)
PROVIDED



2 9V BATTERIES
(FOR EMERGENCY CONTROL)
OPTIONAL/NOT PROVIDED



2 PERSON
ASSEMBLY






750 LBS
CAPACITY





UP TO 20 MIN.
ASSEMBLY

PARTS

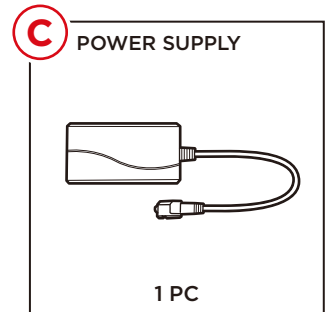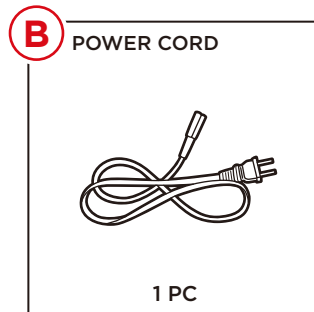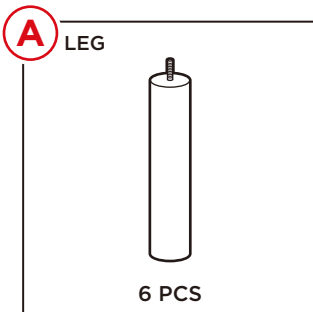

PARTS

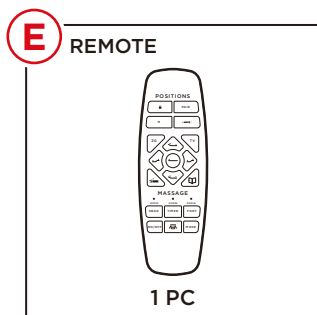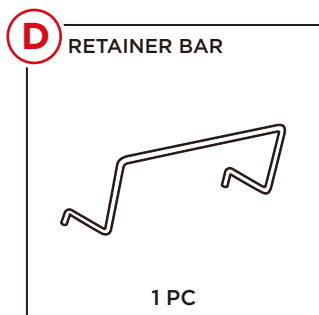


PRODUCT ASSEMBLY

1

Remove all packaging and parts from the underside of the bed and confirm that all parts listed are present.


Screw six part A legs into the leg bases.

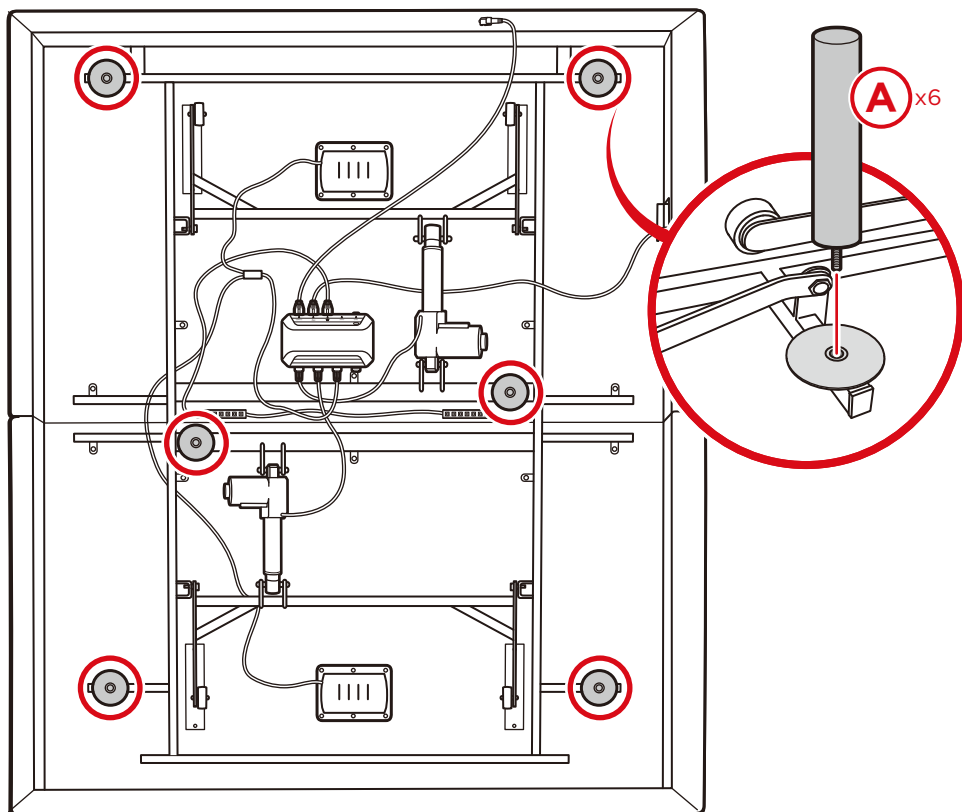

PRODUCT ASSEMBLY

2


Insert the part B power cord into the part C power supply, then join the power supply to the black control box on the bottom of the bed.

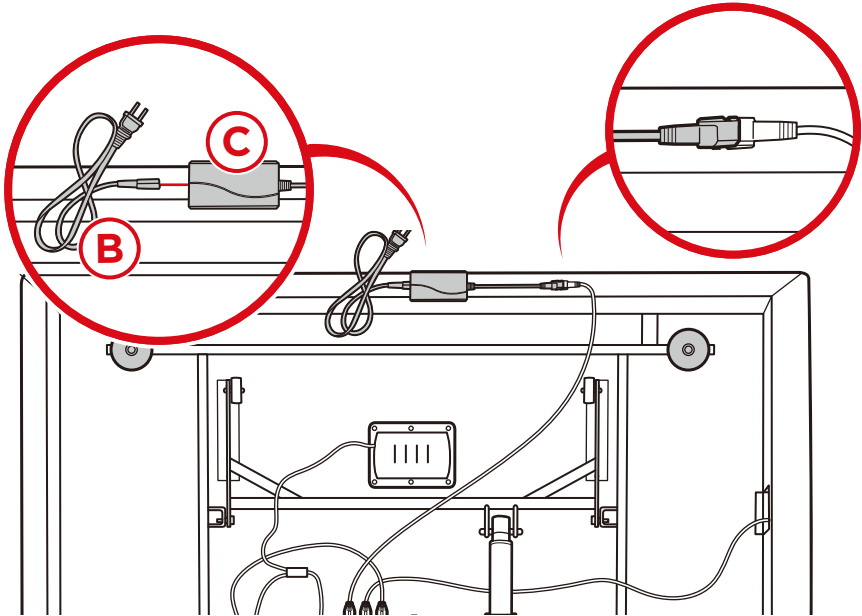


3

With the help of another person, carefully flip the bed onto its legs. Insert the part D retainer bar into the slots.

Plug the power cord into a wall outlet.

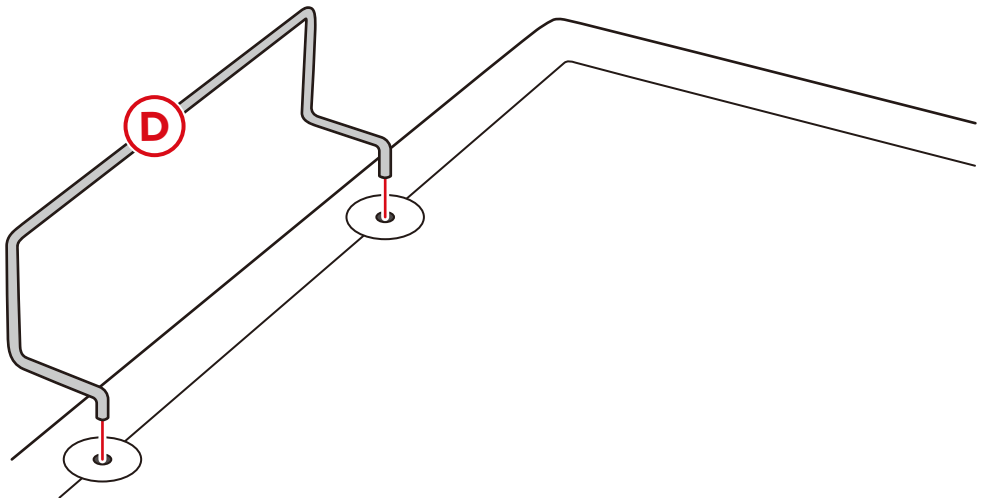


MAIN DIAGRAM

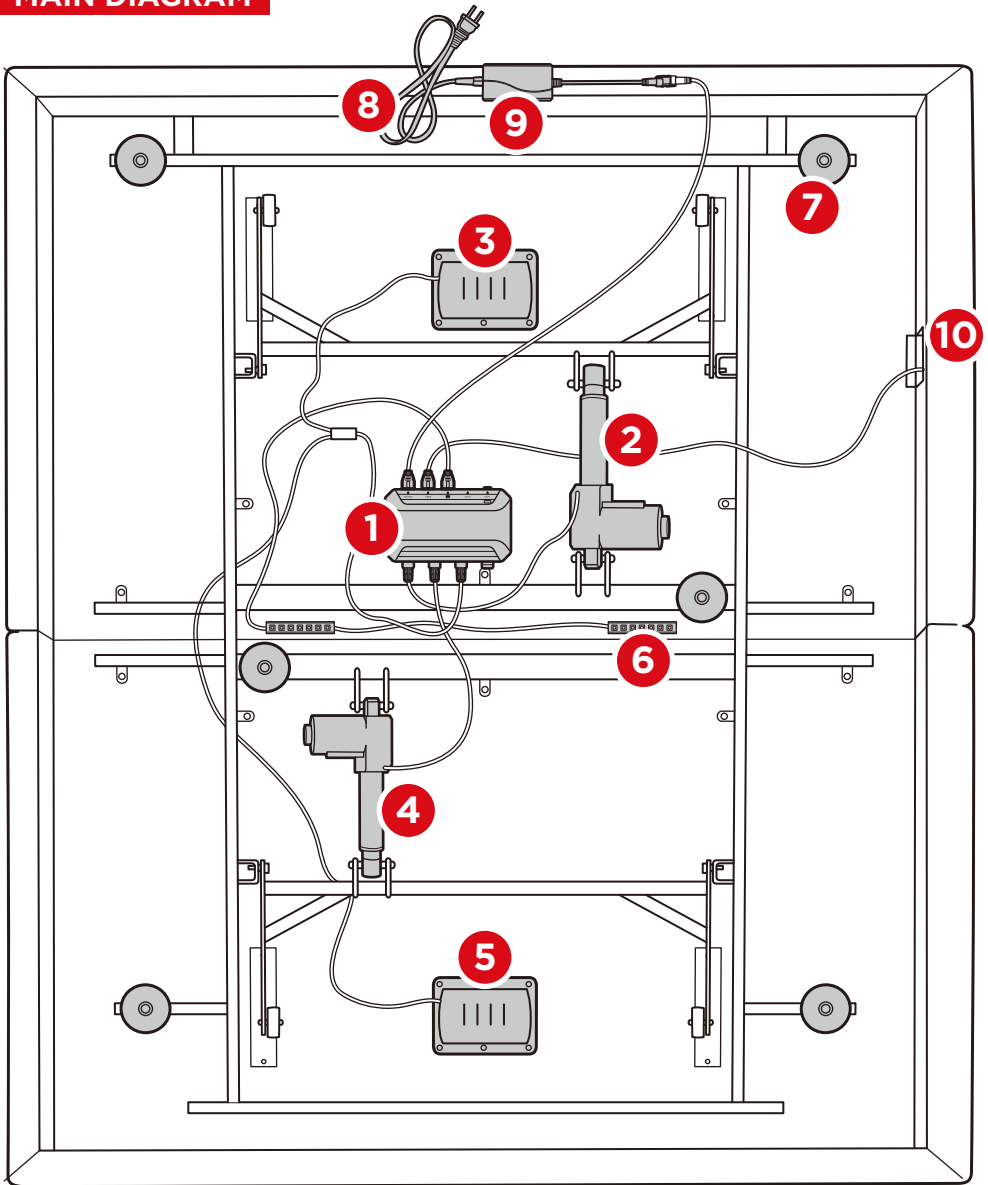

- | | | |
|-----------------------|-----------------------|-----------------|
| 1. Control box | 5. Foot massage motor | 9. Power supply |
| 2. Head motor | 6. LED lights | 10. USB ports |
| 3. Head massage motor | 7. Leg base | |
| 4. Foot motor | 8. Power cord | |


REMOTE DIAGRAM

Install two AAA batteries into the part E remote, and pair the remote with the control box.

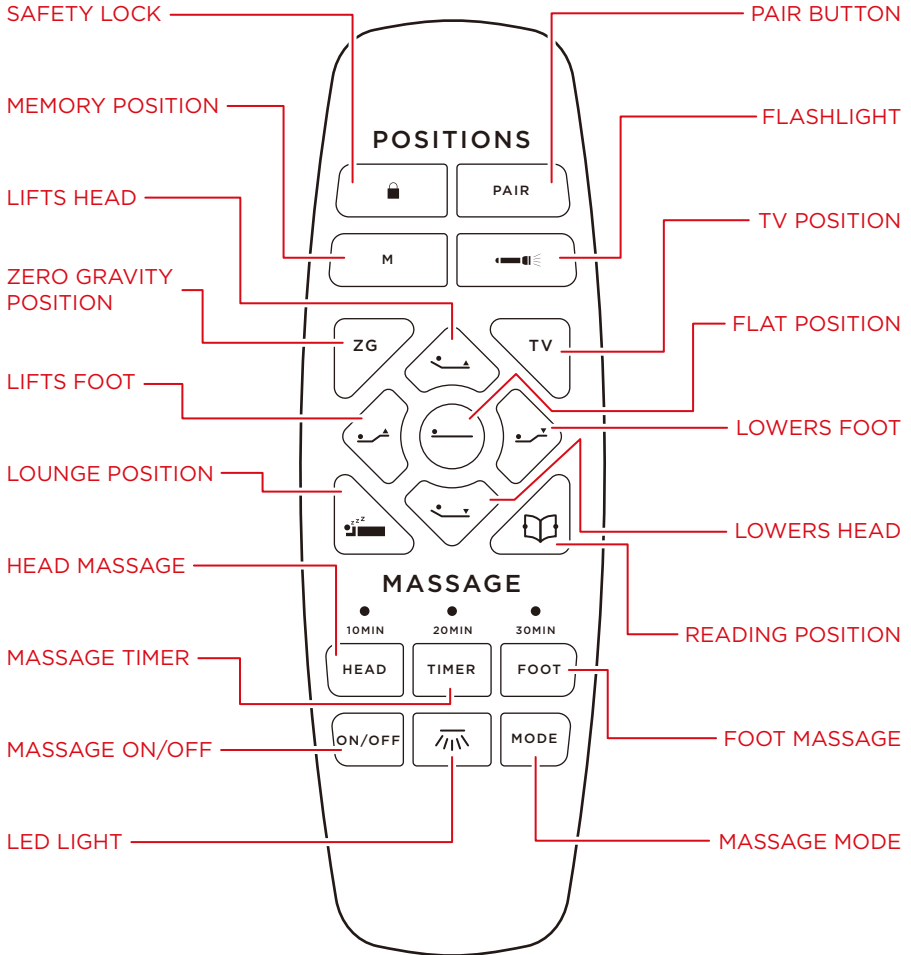

PAIRING REMOTE



1. Plug the bed into a wall outlet and wait for the indicator light (under the bed) to flash.
2. Locate and press the "Pair" button on the part E remote until the remote's backlights flash.
3. The indicator light on the bed will stop flashing and the remote is now paired.

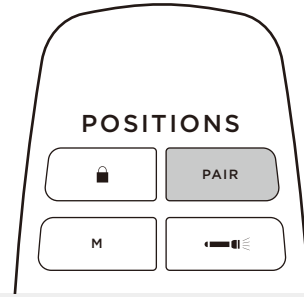

The remote comes paired to the bed. If the remote becomes unpaired, do the following to pair the remote:



ALTERNATE METHOD 1

1. Locate the "pair" button on the side of the control box.
2. Connect the bed to a wall outlet and press the button twice. Allow the indicator light to turn blue, then press and hold the pair button on the part E remote for three seconds.
3. The indicator light on the bed will stop flashing and the remote is now paired.

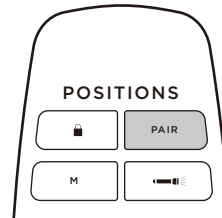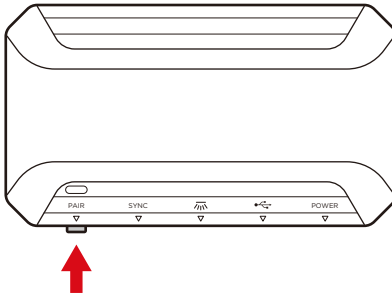

ALTERNATE METHOD 2

1. Disconnect and reconnect the power supply.
2. If the indicator light on the control box turns blue, press and hold the pair button on the part E remote for 3 seconds.
3. Allow the indicator light on the control box to turn green. The remote control is now paired.

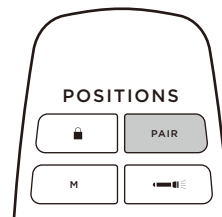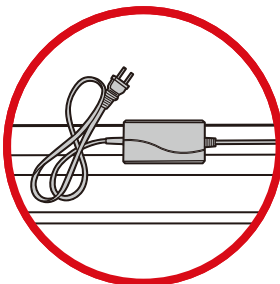


SETTING PROGRAMMABLE BUTTONS

NOTE: The TV, LNG, ZG, and READ come Pre-Programmed as follows.


TV SETTING:

Head Angle	38°
Foot Angle	9°

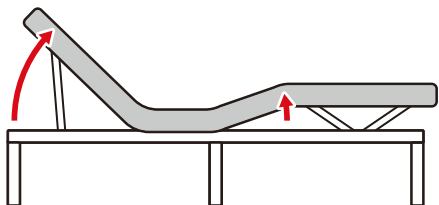


LOUNGE (LNG) SETTING:

Head Angle	9°
Foot Angle	0°

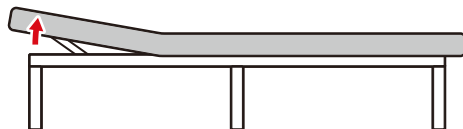


ZERO GRAVITY (ZG) SETTING:

Head Angle	60°
Foot Angle	40°

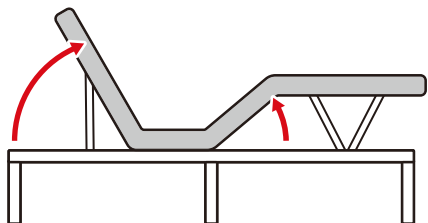

READ SETTING:

Head Angle	44°
Foot Angle	40°

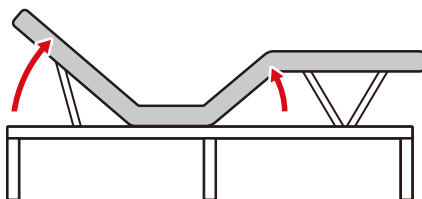

WARNINGS REGARDING BATTERIES

- Do not mix alkaline, standard (carbon zinc) and rechargeable (nickel hydride) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries should not be charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source (fire, electronic heating device, etc.).
- Do not hit batteries against hard objects.
- Do not submerge batteries in water.
- Batteries should be inserted with the correct polarity.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This product may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Responsible party (contact for FCC matters only):

Quality Control Dept.
15101 Red Hill Ave.
Tustin, CA 92780

TROUBLESHOOTING

Problem	Reason	Solution
Remote working, but bed not responding	Unplugged	Make sure power cord is plugged into a working outlet
Bed functions not activating	Remote unpaired	Pair remote with bed
	Malfunction	Reset; unplug power cord, wait 30 seconds, then plug in
	Power outlet not working	Plug into working outlet
	Loose connections	Ensure all connections to control box are secure
Remote not working	Remote out of batteries	Replace batteries
Head/foot elevates but does not return to flat position	Bed mechanism obstructed	Elevate bed and remove obstruction
	Head section too close to wall	Move head further from wall
Head/foot lift has minor interference	Remote out of batteries	Replace batteries
	Motor overworked	Allow motor to rest for 20 minutes
	Buttons not completely pushed	Push buttons squarely and accurately
	Remote has radio frequency interference	Wait and try again later
Excessive motor noise	Bed on hard surface	Place carpet or rubber feet under each leg
	Motor mechanisms misaligned	Elevate sections a short distance to realign
	Bed positioned against another object or wall	Make sure bed is positioned away from wall or objects
Clicking noise when raising or lowering	Normal	-
Massage motor overheats or stops	Thermal protection activated	Wait 30 minutes, then turn massage back on



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.


Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.



bestchoiceproducts

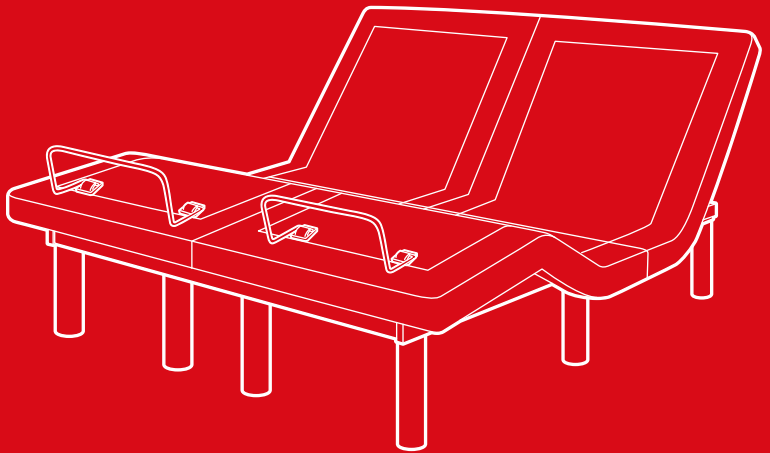

INSTRUCTION MANUAL

Upholstered Adjustable
Split King Bed Base



This split king bed is
made up of two XL
twin beds.

bestchoiceproducts.com

! NOTICE Please retain these instructions for future reference.

- This item is intended for indoor, household use only.
- Ensure that your voltage is consistent with specifications.
- Do not modify the plug in any way.
- This item is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the item by a person responsible for their safety.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product features a split base with two remotes to control both halves of the base separately. The two halves can be synchronized to operate through one remote.

! WARNING

- Do not use this item if your physician or healthcare professional has advised against massager use.
- If you experience any pain, illness, or discomfort during use, discontinue using this item and consult with a physician.
- This product features electrical components. Do not expose to high temperatures or humidity.
- Keep item away from direct sunlight and other heat sources (stove, heater, etc.).
- Do not spill water on the electrical components or connectors.
- Do not touch the plug or operate with wet hands.
- Do not unplug by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
- Do not use if the plug or any components are damaged.

TOOLS REQUIRED



**2 AAA BATTERIES
(FOR REMOTE)
PROVIDED**



**2 9V BATTERIES
(FOR EMERGENCY CONTROL)
OPTIONAL/NOT PROVIDED**



**2 PERSON
ASSEMBLY**




**750 LBS
PER BED**



**UP TO 40 MIN.
ASSEMBLY**


PARTS

A LEG



 
12 PCS

B POWER CORD






2 PCS

C POWER SUPPLY



2 PCS

PARTS

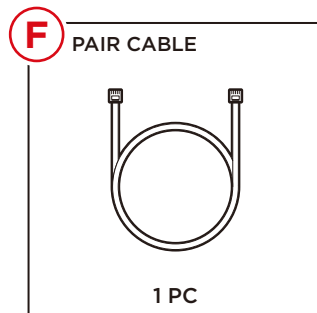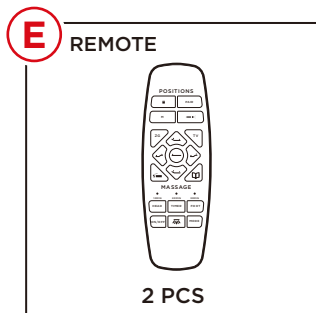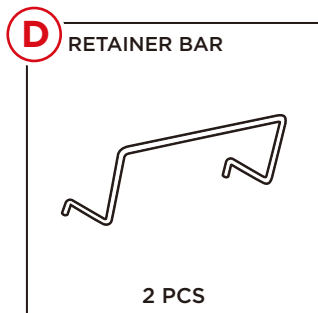


PRODUCT ASSEMBLY

1

NOTE: This product uses TWO XL twin bed frames to be assembled separately then joined together.

Remove all packaging and parts from the underside of the bed.


Screw six part A legs into the leg bases. Repeat on the second bedframe.

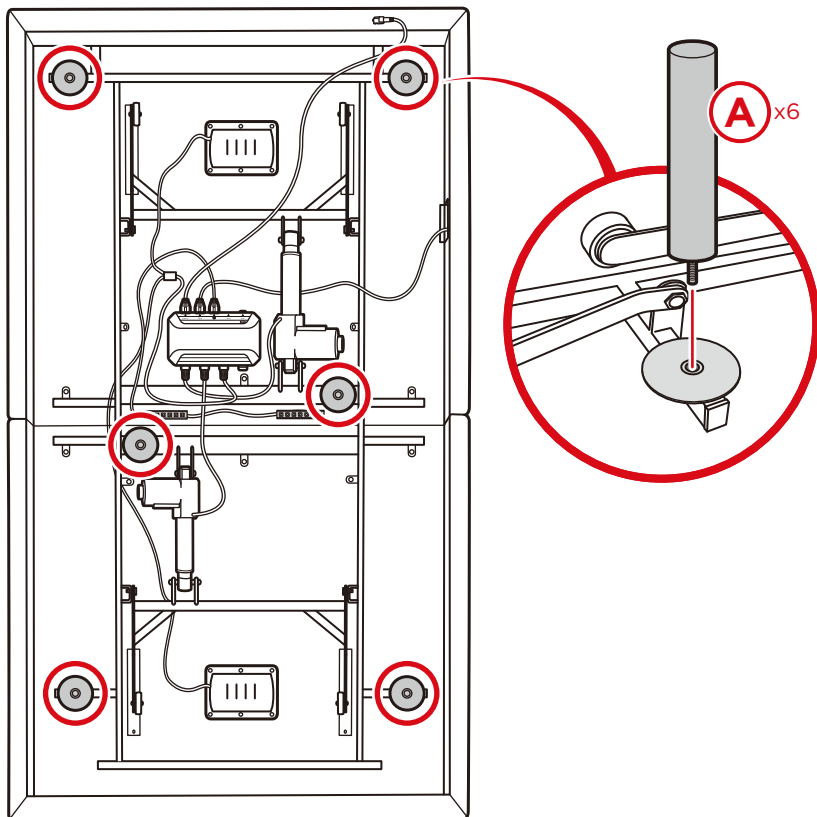

PRODUCT ASSEMBLY

2


Insert the part B power cord into the part C power supply, then join the power supply to the corresponding connector under the bed. Repeat on the second bedframe.

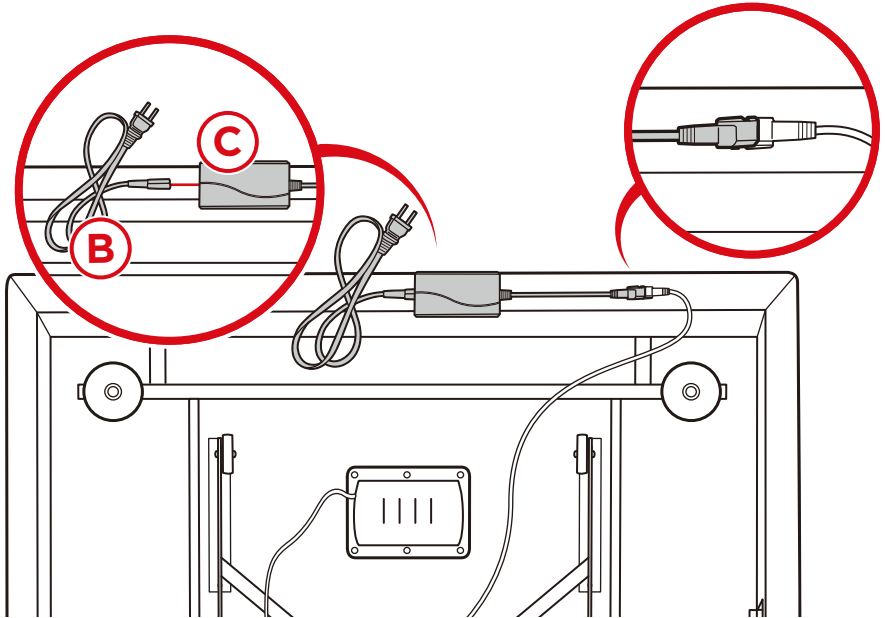


3

With the help of another person, carefully flip the bed onto its legs. Insert the part D retainer bar into the slots.

Plug the power cord into a wall outlet. Repeat on the second bedframe.

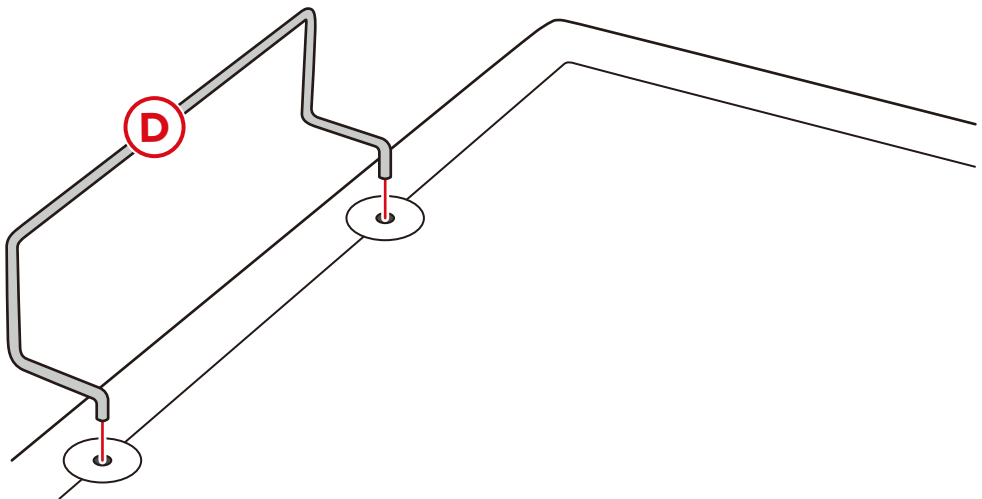

DIAGRAM

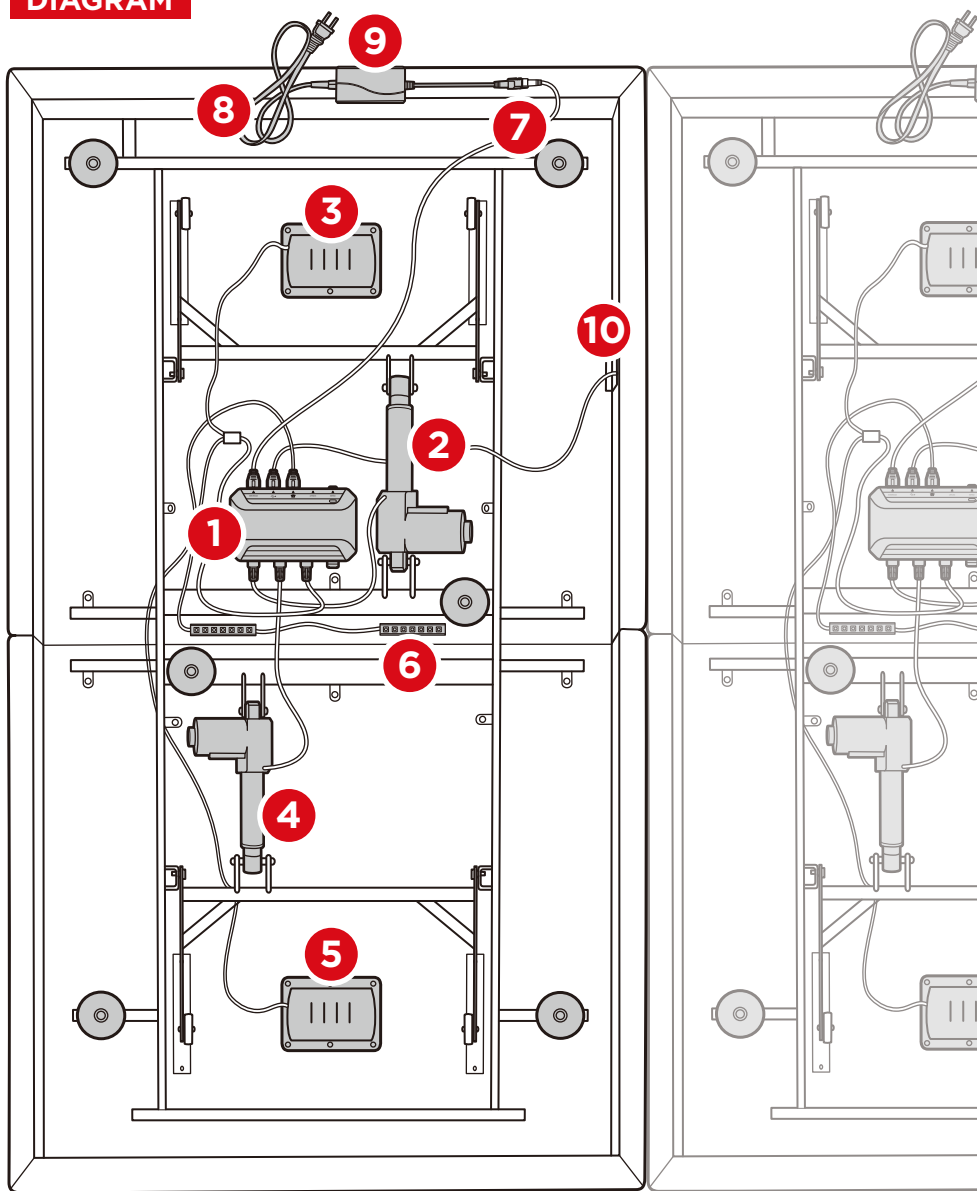

1. Control box

2. Head motor

3. Head massage motor

4. Foot motor

5. Foot massage motor

6. LED lights

7. Leg base

8. Power cord

9. Power supply


10. USB ports

REMOTE DIAGRAM

Install two AAA batteries into the part E remote, and pair the remote with the control box.




OPTIONAL:
Synchronize the two bases together.
(See Synchronization Section.)

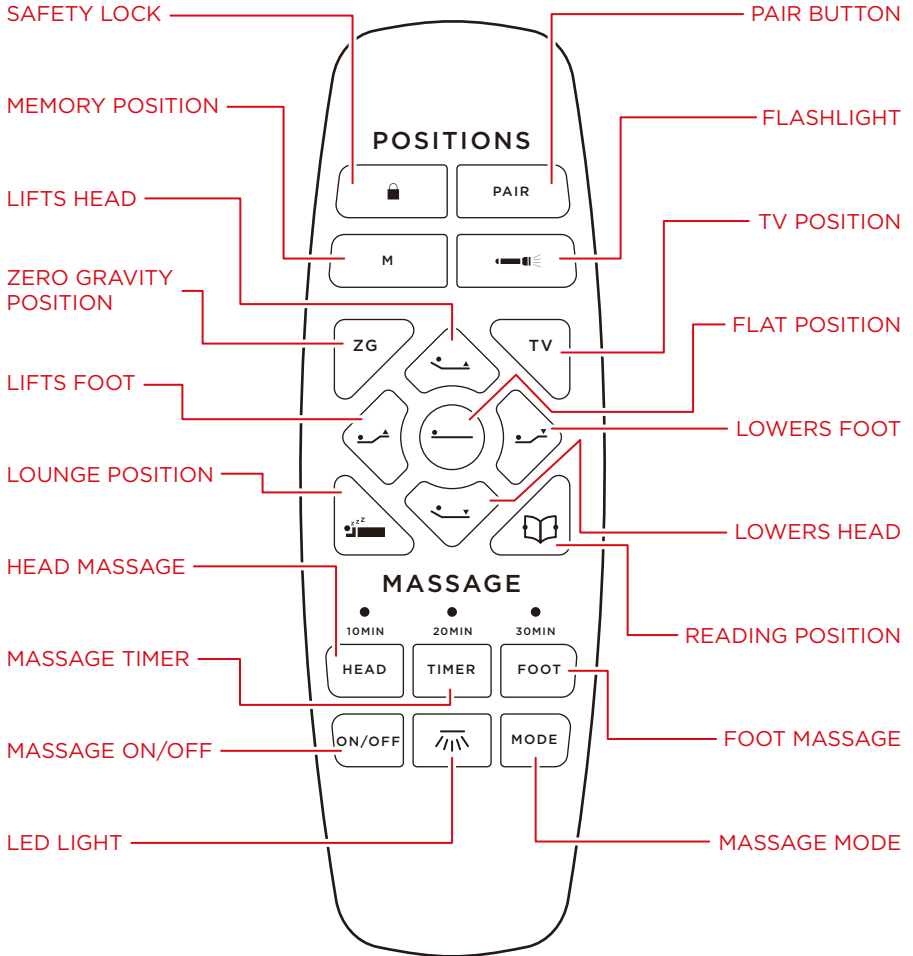

PAIRING REMOTE

NOTE: There are two individual remotes for the two beds. You can either use a separate remote for each bed, or pair both beds to one remote. (See Synchronization Section)



1. Plug the bed into a wall outlet and wait for the indicator light (under the bed) to flash.
2. Locate and press the "Pair" button on the part E remote until the remote's backlights flash.
3. The indicator light on the bed will stop flashing and the remote is now paired.

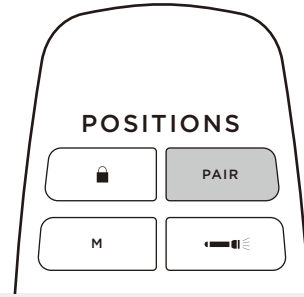

The remote comes paired to the bed. If the remote becomes unpaired, do the following to pair the remote:



ALTERNATE METHOD 1

1. Locate the "pair" button on the side of the control box.
2. Connect the bed to a wall outlet and press the button twice. Allow the indicator light to turn blue, then press and hold the pair button on the part E remote for three seconds.
3. The indicator light on the bed will stop flashing and the remote is now paired.

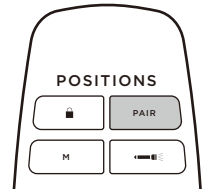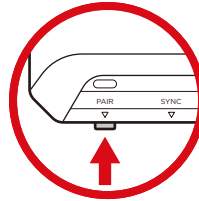

ALTERNATE METHOD 2



1. Disconnect and reconnect the power supply.
2. If the indicator light on the control box turns blue, press and hold the pair button on the part E remote for 3 seconds.
3. Allow the indicator light on the control box to turn green. The remote control is now paired.

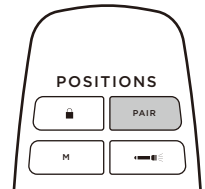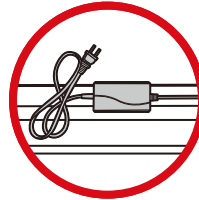

SYNCHRONIZATION (OPTIONAL)


This product uses two separate bases for independent or synchronized movement. To synchronize the two bases, complete the following:

1. Insert the part F pair cable into the two control boxes underneath the bed frames via the input labeled **SYNC**. Gather the cable's extra length, then use the included touch fastener to affix it to one of the bed's legs.

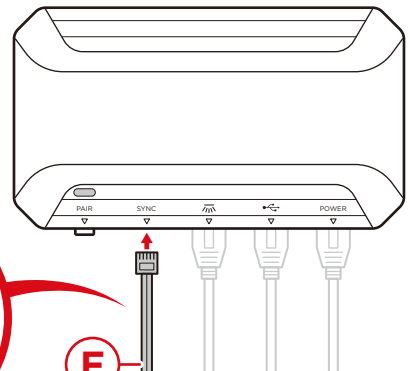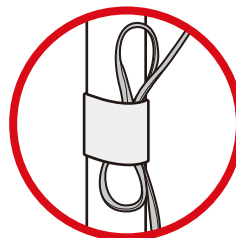

SYNCHRONIZATION (OPTIONAL)

2. Select one of the two part E remote controls then locate, press, and hold the **LIFT HEAD** and **LIFT FOOT** buttons until the flashes.
3. The two frames are now synchronized.
4. To unsynchronized the bedframes, repeat step 2 and wait for the remote to flash.

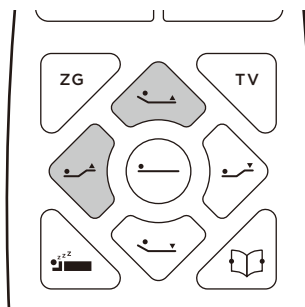


SETTING PROGRAMMABLE BUTTONS

NOTE: The TV, LNG, ZG, and READ come Pre-Programmed as follows.


TV SETTING:

Head Angle	38°
Foot Angle	9°

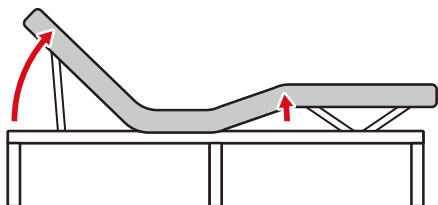


LOUNGE (LNG) SETTING:

Head Angle	9°
Foot Angle	0°

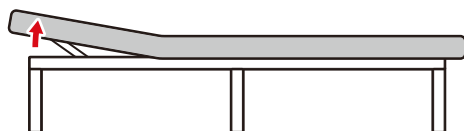


ZERO GRAVITY (ZG) SETTING:

Head Angle	60°
Foot Angle	40°

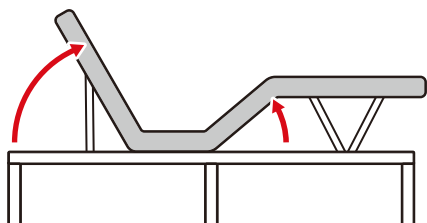

READ SETTING:

Head Angle	44°
Foot Angle	40°

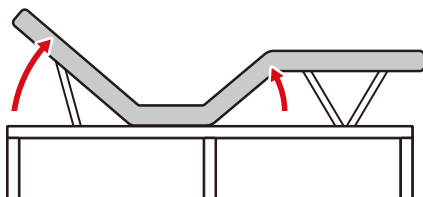

WARNINGS REGARDING BATTERIES

- Do not mix alkaline, standard (carbon zinc) and rechargeable (nickel hydride) batteries.
- Do not mix old and new batteries.
- Non-rechargeable batteries should not be charged.
- Rechargeable batteries should be charged under adult supervision only.
- Exhausted batteries should be removed.
- The supply terminals should not be short-circuited.
- Do not put batteries next to or in a heat source (fire, electronic heating device, etc.).
- Do not hit batteries against hard objects.
- Do not submerge batteries in water.
- Batteries should be inserted with the correct polarity.

FCC COMPLIANCE STATEMENT

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This product may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Responsible party (contact for FCC matters only):

Quality Control Dept.
15101 Red Hill Ave.
Tustin, CA 92780

TROUBLESHOOTING

Problem	Reason	Solution
Remote working, but bed not responding	Unplugged	Make sure power cord is plugged into a working outlet
Bed functions not activating	Remote unpaired	Pair remote with bed
	Malfunction	Reset; unplug power cord, wait 30 seconds, then plug in
	Power outlet not working	Plug into working outlet
	Loose connections	Ensure all connections to control box are secure
Remote not working	Remote out of batteries	Replace batteries
Head/foot elevates but does not return to flat position	Bed mechanism obstructed	Elevate bed and remove obstruction
	Head section too close to wall	Move head further from wall
Head/foot lift has minor interference	Remote out of batteries	Replace batteries
	Motor overworked	Allow motor to rest for 20 minutes
	Buttons not completely pushed	Push buttons squarely and accurately
	Remote has radio frequency interference	Wait and try again later
Excessive motor noise	Bed on hard surface	Place carpet or rubber feet under each leg
	Motor mechanisms misaligned	Elevate sections a short distance to realign
	Bed positioned against another object or wall	Make sure bed is positioned away from wall or objects
Clicking noise when raising or lowering	Normal	-
Massage motor overheats or stops	Thermal protection activated	Wait 30 minutes, then turn massage back on



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.