

INSTRUCTION MANUAL

11.3" 6-Cube Storage Organizer and Bookshelf

(!) NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

TOOLS REQUIRED











1 PERSON

ASSEMBLY



UP TO 30 MIN.

ASSEMBLY

180 LBS 15 LBS
TOTAL WEIGHT PER SHELF
CAPACITY CAPACITY

 
90 LBS TOP SHELF CAPACITY

HARDWARE











MOUNTING HARDWARE






 

 



PARTS

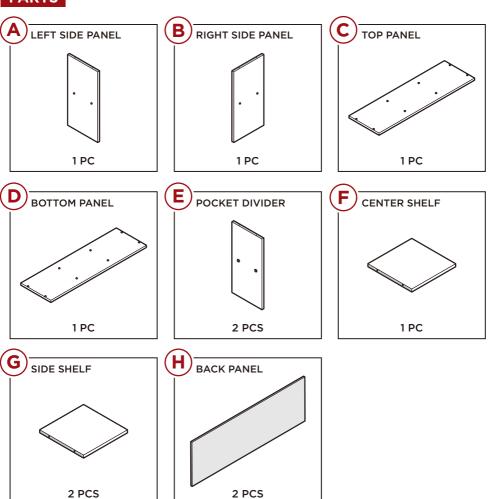


PRODUCT ASSEMBLY




Insert four part 2 dowels into two part E pocket dividers, two dowels per divider.

Attach the part F center shelf to the two dividers, then attach two part G side shelves.

NOTE: This product uses edge banding to mark the "front" edge of each assembly panel.

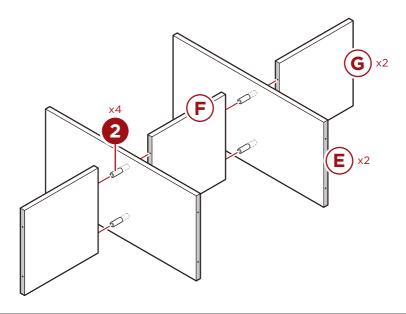


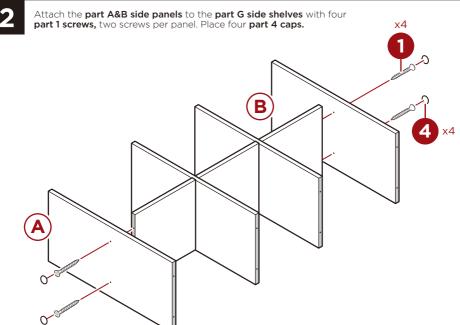

PRODUCT ASSEMBLY



Attach one the part C top panel to the part A, B, and E panels with eight part 1 screws. Repeat to attach the part D bottom panel. Place sixteen part 4 caps.

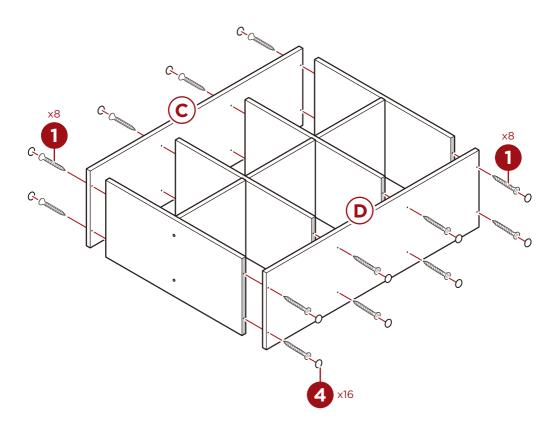


PRODUCT ASSEMBLY



Flip the assembly on its front side, then use a hammer to attach two ${\bf part\ H\ back\ panels}$ with sixteen ${\bf part\ 3\ nails.}$


NOTE: The edge banding should face down, exposing the back end of the product.

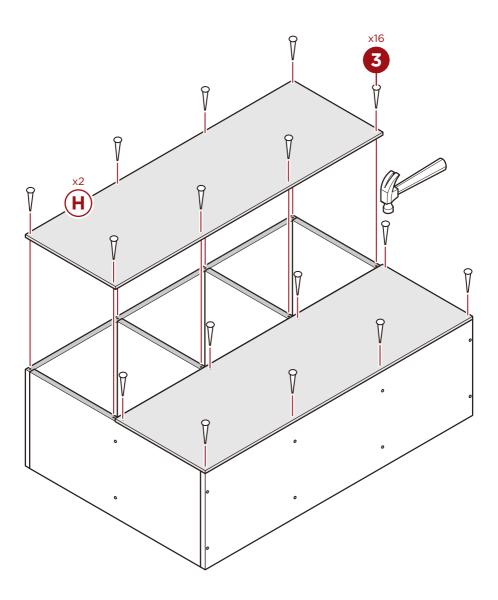

WALL MOUNTING (OPTIONAL)

- Attach two part 5 mounting straps to the "back" side of part C top shelf with two part 9 screws.
 NOTE: The straps come with pilot holes in either end, mount the hardware through these holes.
- 2. Place the assembled product in its intended space, abutting a wall. Stretch the straps to sit flat against the wall, then use a pencil to mark the wall, use the strap's pilot hole as a guide.
- 3. Use a power drill to make two pilot holes in the wall then insert two part 7 wall anchors.
- Align the mounting straps with the wall anchors, then secure the strap with two part 8 washers, and two part 6 mounting screws.

NOTE: You may need to use different wall anchors/screws depending on your wall material.

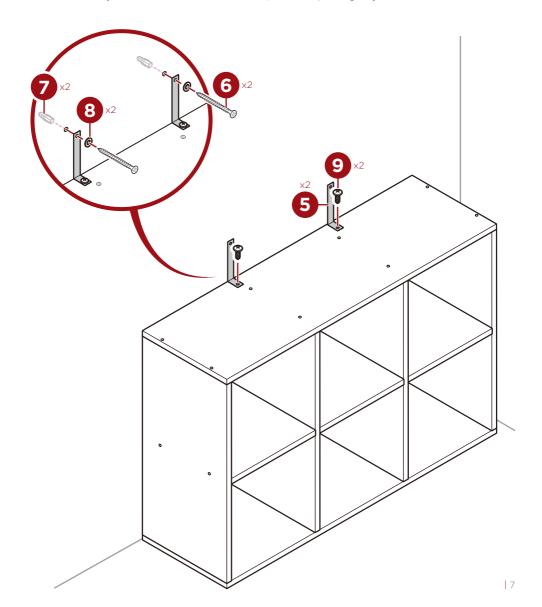



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com











Chat Support

Product Inquiry

Orders FA

Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

△WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.