

MM Starter of the sta

# INSTRUCTION MANUAL

2-Piece 2D Lighted Moose Family


SKY7780 + SKY7781 + SKY7782



As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

- Always.

#### Assembly is similar for the bull and calf. Please follow these steps to assemble each moose.

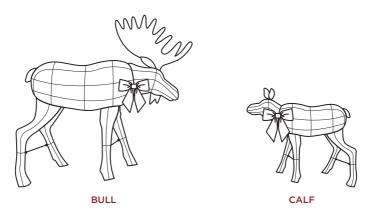


#### **I** NOTICE

Please retain these instructions for future reference.


- This product is intended for outdoor use and should be assembled outdoors only.
- This item is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Ensure that your voltage is consistent with specifications.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

#### 

- Do not plug into a wall outlet until the item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- This product contains glitter, do not assemble indoors to avoid unintended property damage and cleanup.
- Do not allow glitter to contact your eyes or face as this may result in skin irritation or injury.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the moose figures.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.
- Unplug item before removing or changing bulbs.
- This product is intended for residential use only.

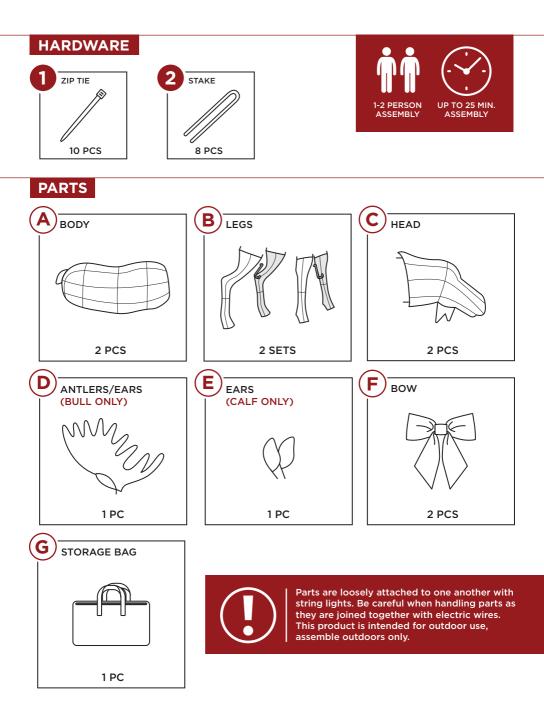


Carefully remove protective wrap. Do not use a knife to avoid damaging parts, lights, or wires.

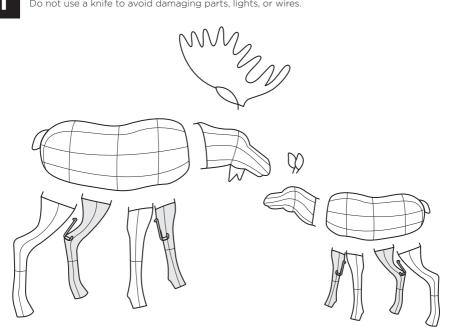



Insert **part B legs** into the designated holes on the respective **part A body**.


**NOTE:** There are lights on one side of the figure, this side is the "back." Assembly steps are oriented towards the unlit front side.

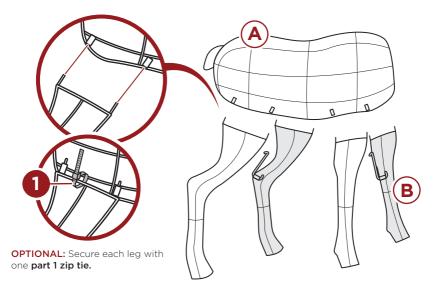




Insert the rod on a front leg into the designated hole on the other front leg. Repeat on the back legs.

**NOTE:** The leg with the connecting rod will be on the bull's left side and the calf's right side. See gray shading for reference.

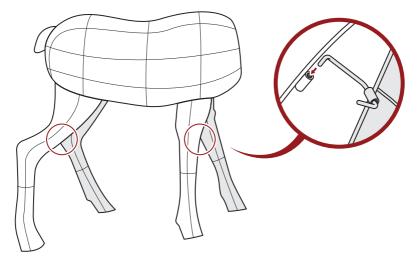




Attach the **part C head** into the designated holes on the **part A body**. Secure the back of the neck with a **part 1 zip tie**.

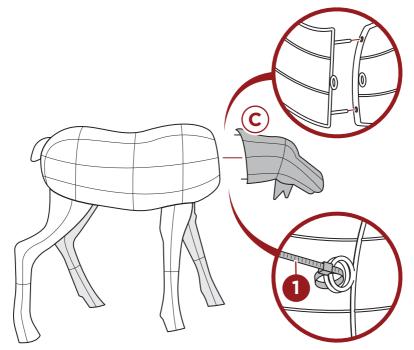




Attach the part D antlers/ears to the part C head and secure with one part 1 zip tie. NOTE: For the calf, insert the part E ears into the part C head.

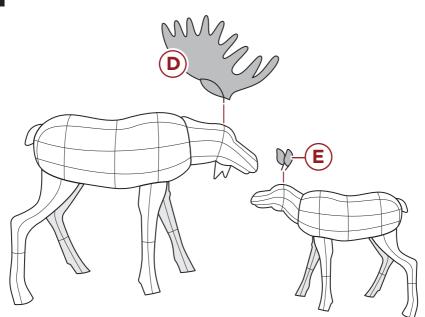




Attach the part F bow.

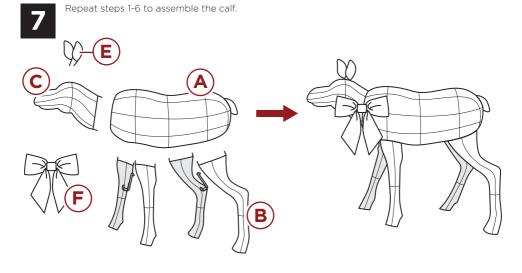

8

Secure the moose to the ground with eight **part 2 stakes,** four stakes per moose. Plug into a wall outlet to turn on lights.

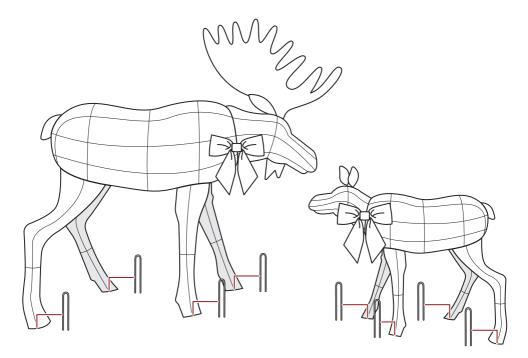

### TROUBLESHOOTING

PROBLEM	REASON	SOLUTION
One section does not light	Broken or loose bulb	Inspect bulbs individually and replace broken bulbs
Lights do not work	Not plugged in	Firmly plug into wall outlet
	Extension cord does not have power	Plug in/turn on extension cord
	Broken or loose bulb	Inspect bulbs individually and replace broken bulbs
	Blown fuse	Replace fuse on plug



Check out more great products: **bestchoiceproducts.com** 

Earn points while you shop. Join today!

# bestchoiceproducts **rewards** Join | Earn | Redeem

Give your friends 15% off their first order! For each successful referral you'll receive 100 points.

bestchoiceproducts.com



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com





Product Inquiry







#### **PRODUCT WARRANTY INFORMATION**

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© 2023 Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Tustin, CA 92780

## 

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.