

est 1872

Beldray®

Our **warm**,
portable &
convenient
fan heater



2000 W FAN HEATER INSTRUCTION MANUAL

* This product is only suitable for well-insulated spaces or occasional use.

www.beldray.com



Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical products, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.

Children younger than 3 years old should be kept away from the product unless continuously supervised.

Children aged from 3 years and less than 8 years should only switch on/off the product, provided that it has been placed or installed in its intended operating position and they have been given supervision or instruction concerning the use of the product in a safe way and understand the hazards involved.

Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

This product is not a toy.

This product contains no user serviceable parts. If the power supply cord, plug or any part of the product is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the product and its power supply cord out of the reach of children.

Keep the product and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the product that may become hot during use.

Keep the product away from other heat emitting products.
Keep furniture, curtains and other flammable material at least 1 metre away from the product.
Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.
Do not immerse the product or plug in water or any other liquid.
Do not operate the product with wet hands.
Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.
Do not leave the product unattended whilst connected to the mains power supply or when in use.
Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
Do not use this product for extended periods of time.
Do not use the product for anything other than its intended use.
Do not cover this product.
Do not block the rear air intake of the product; place in an open, well-ventilated space.
Do not use this product outdoors.
Do not attempt to move the product whilst it is in use.
Do not touch the product during use, as it will get very hot and could cause injury.
Do not put objects into any of the openings.
Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically, as there is a risk of fire if the heater is covered or positioned incorrectly.
Do not clean the product with abrasive chemicals or materials such as scourers as they may damage the product and impair future function.
The product should be used on a stable, heat-resistant surface.
The product must not be located immediately below or next to a mains power supply.

Always unplug the product after use and before any cleaning or maintenance.

Always ensure that the product has cooled fully after use, before any cleaning or maintenance.

Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.

Use of an extension cord with the product is not recommended. This product is intended for domestic use only. It should not be used for commercial purposes.

Caution: Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.



Hot surface – do not touch the hot section or heating components of the product.



Warning: In order to avoid overheating, do not cover the product.

Do not use this product in small rooms whilst occupied by persons incapable of leaving the room on their own, unless constant supervision is provided.

Normal voltage is still present in this product as long as the product is connected to the electrical source. Always unplug the product when not in use.

In order to avoid a hazard, due to inadvertently tripping the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer. Nor should it be connected to a circuit that is regularly switched on and off by the utility.

Thermal Cut-out Device

The fan heater is fitted with a thermal safety cut-out device, built in to prevent it from overheating. Should the fan heater start to overheat, the thermal safety cut-out system will automatically operate and the heat settings will switch off. If this happens:

STEP 1: Switch off the fan heater by turning the heat control dial to (O).

STEP 2: Check that the fan heater is unplugged from the mains power supply and allow it to cool for approx. 15 minutes.

STEP 3: Clear any blockages present on the vent, being careful not to damage the fan heater.

STEP 4: Plug in and switch on the fan heater at the mains power supply.

Caution: In order to avoid a hazard, due to inadvertent resetting of the thermal cut-out, this fan heater must not be supplied through an external switching device such as a timer or connected to a circuit that is regularly switched on and off by the utility.

Care and Maintenance


Always unplug the fan heater from the mains power supply and allow to cool sufficiently before performing any cleaning or maintenance.

Wipe the fan heater with a soft, damp cloth and allow to dry thoroughly.

Do not use harsh or abrasive cleaning solvents, as these may damage the finish of the fan heater.

Do not immerse the fan heater in water or any other liquid.

Description of Parts

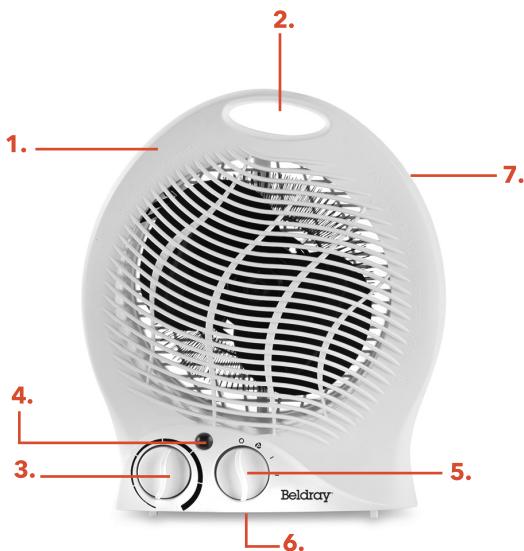

- 1. Main body
- 2. Carry handle
- 3. Adjustable thermostat
- 4. Power indicator light
- 5. Heat control dial
- 6. Safety tip over switch
- 7. Rear intake (on the back)

Instructions for Use

Before First Use

STEP 1: Check that there is no damage to the fan heater.

STEP 2: Position the fan heater on a flat, stable, heat-resistant surface in an open space, at least 1 metre away from furniture, curtains or any other flammable materials. Do not block the air intake on the back of the fan heater.

Note: When using the fan heater for the first time, a slight odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the fan heater.

Using the 2000 W Fan Heater

STEP 1: Plug in and switch on the fan heater at the mains power supply.

STEP 2: To turn on the fan heater, select a heat setting by turning the heat control dial in a clockwise direction to the desired position; (I) will emit cool air, whilst (II) and (III) will produce warm and hot air respectively.

STEP 3: Whilst using the warm or hot heat settings, the adjustable thermostat can be used to finely regulate the temperature. Turn it in a clockwise direction to increase the heat output. To reduce it, turn the adjustable thermostat in an anticlockwise direction.

STEP 4: Turn off the fan heater by turning the heat control dial to (O).

Note: The heat indicator light will illuminate whilst the fan heater is warming up and will cycle on and off during use to show that the correct temperature is being maintained. The fan heater will only produce heat if the adjustable thermostat is at a higher temperature than the room temperature.

Storage

Check that the fan heater is completely cool before storing in a cool, dry place. Never wrap the cord tightly around the fan heater; wrap it loosely to avoid causing damage.

Specifications

Product code: EH0567S

Voltage: 220-240 V ~ 50 Hz

Power: 2000 W

ERP Table

Item	Symbol	Value	Unit	Item	Item
Heat Output				Type of heat input for electric storage local space heaters only (select one).	
Nominal heat output	P_{nom}	1,8-2	kW	Manual heat charge control, with integrated thermostat.	No
Minimum heat output (indicative)	P_{min}	0,015	kW	Manual heat charge control with room and/or outdoor temperature feedback.	No
Maximum continuous heat output	$P_{\text{max,c}}$	2	kW	Electronic heat charge control with room and/or outdoor temperature feedback.	No
Auxiliary electricity consumption				Fan assisted heat output.	No
At nominal heat output	el_{max}	0	kW	Type of heat output/room temperature control (select one).	
At minimum heat output	el_{min}	0	kW	Single stage heat output an no room temperature control.	No
In standby mode	el_{SB}	0	kW	Two or more manual stages, no room temperature control.	No
				With mechanic thermostat room temperature control.	Yes
				With electronic room temperature.	No
				Electronic room temperature control plus day timer.	No
				Electronic room temperature control plus week timer.	No
				Other control options (multiple selections possible).	
				Room temperature control, with presence detection.	No
				Room temperature control, with open window detection.	No
				With distance control option.	No
				With adaptive start control.	No
				With working time limitation.	No
				With black bulb sensor.	No

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



Manufactured by:
UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK

www.beldray.com

©Beldray Trademark. All rights reserved.

Please retain instructions for future reference.

Made in China.

CD190216/MD200219/V4

Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Keep the appliance away from flammable materials.



EN | Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD260324/MD000000/V1