



BEST CHOICE  
PRODUCTS



# INSTRUCTION MANUAL

---

Lighted Birch Twig Trees



**BEST CHOICE  
PRODUCTS**

---

As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

— Always. —

## ! NOTICE

Please retain these instructions for future reference.

- This seasonal product is not intended for permanent installation or use.
- Unplug item when not in use or if left unattended.
- Do not use or store this item in proximity of open flame, flammable/combustible chemicals, or other strong heat sources.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This set includes three trees: one small, one medium, and one large. Construct the trees using the appropriately sized pieces. Do not attempt to mix the three tree assemblies.
- This product is intended for residential use only.

## ! WARNING

- Do not plug into a wall outlet until the item is fully assembled and lights are properly connected.
- Do not use in extreme weather conditions.
- Keep item away from all heat sources (fireplace, stove, heater, etc.).
- Please use the provided stakes to properly secure the trees.
- Do not secure wiring with staples, nails, or sharp hooks.
- Do not hang ornaments or other objects from the cord.

## HARDWARE

### 1 GROUND STAKES



16 PCS



1 PERSON  
ASSEMBLY



UP TO 20 MIN.  
ASSEMBLY

## PARTS

### A TREE TOP BRANCHES



3 PCS

### B TREE TRUNKS






2 PCS

### C BASE




3 PCS

## PARTS

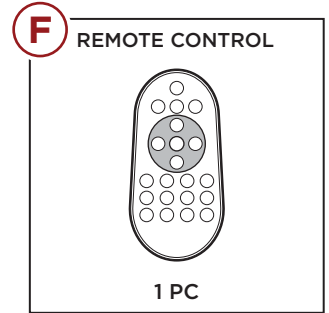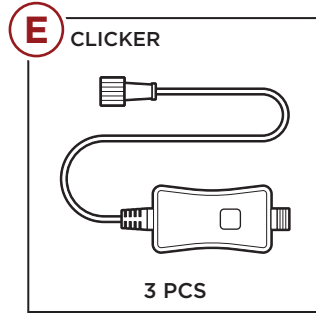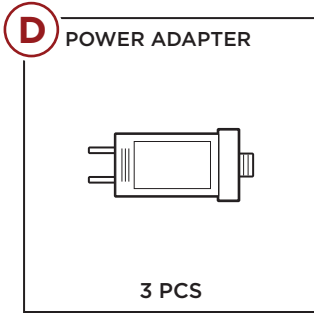

## REMOTE CONTROL DIAGRAM

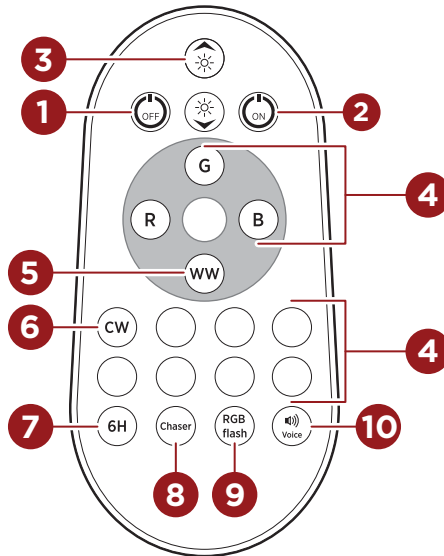


- 1. Red Power:** Press to turn the trees Off
- 2. Green Power:** Press to turn the tree On
- 3. Dimmer Up/Down:** Press up or down to choose brighter or dimmer options.
- 4. Colors:** Press color button once for steady-on lights. Press button twice for slow glow settings
- 5. WW:** Press for Warm White
- 6. CW:** Press for cool white
- 7. 6H:** Press to turn on the 6 hours timer
- 8. Chaser:** Jumping color combinations. Press button to toggle through color options.
- 9. RGB Flash:** Flashing color setting. Press button to toggle through color options.
- 10. Voice:** Sound-activated dancing light setting. Press button to toggle through color options.

## PRODUCT ASSEMBLY


1

Locate one **part C base** and screw the appropriate **part B tree trunk** into the receiver.

**NOTE:** The base comes in two sizes, two large and one small, assemble each tree using the appropriately sized components.

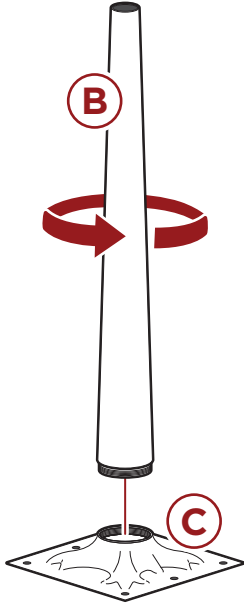

LARGE (x2)

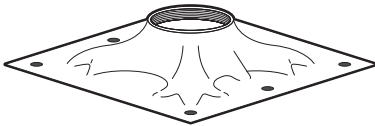


SMALL



2

Press one **part A tree top branch set** into the **part B tree trunk** until secured, do not twist.

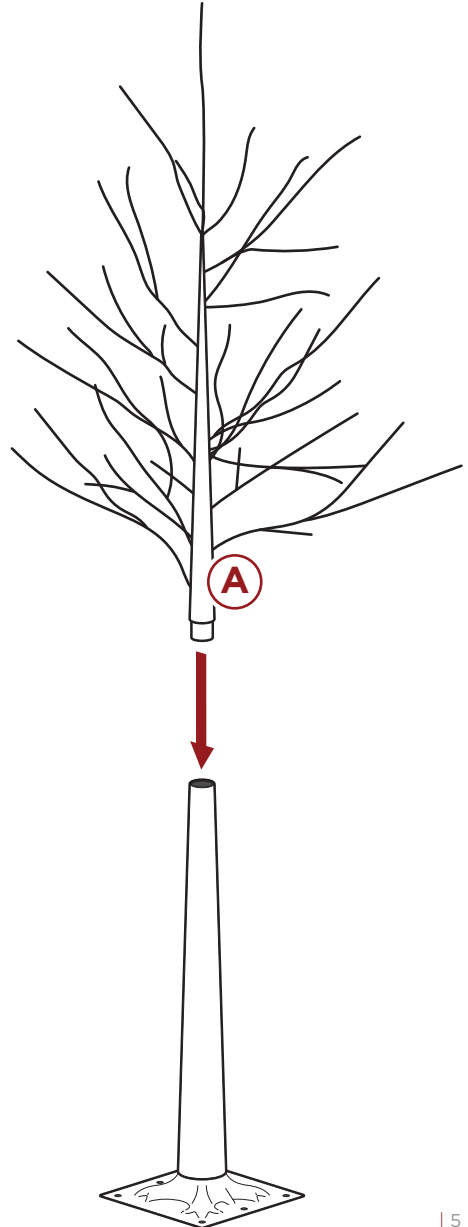


## PRODUCT ASSEMBLY

1

Repeat **steps 1 & 2** to assemble the remaining trees..

**NOTE:** To assemble the smallest tree, insert the **part A branch set** directly into the **part C base**.

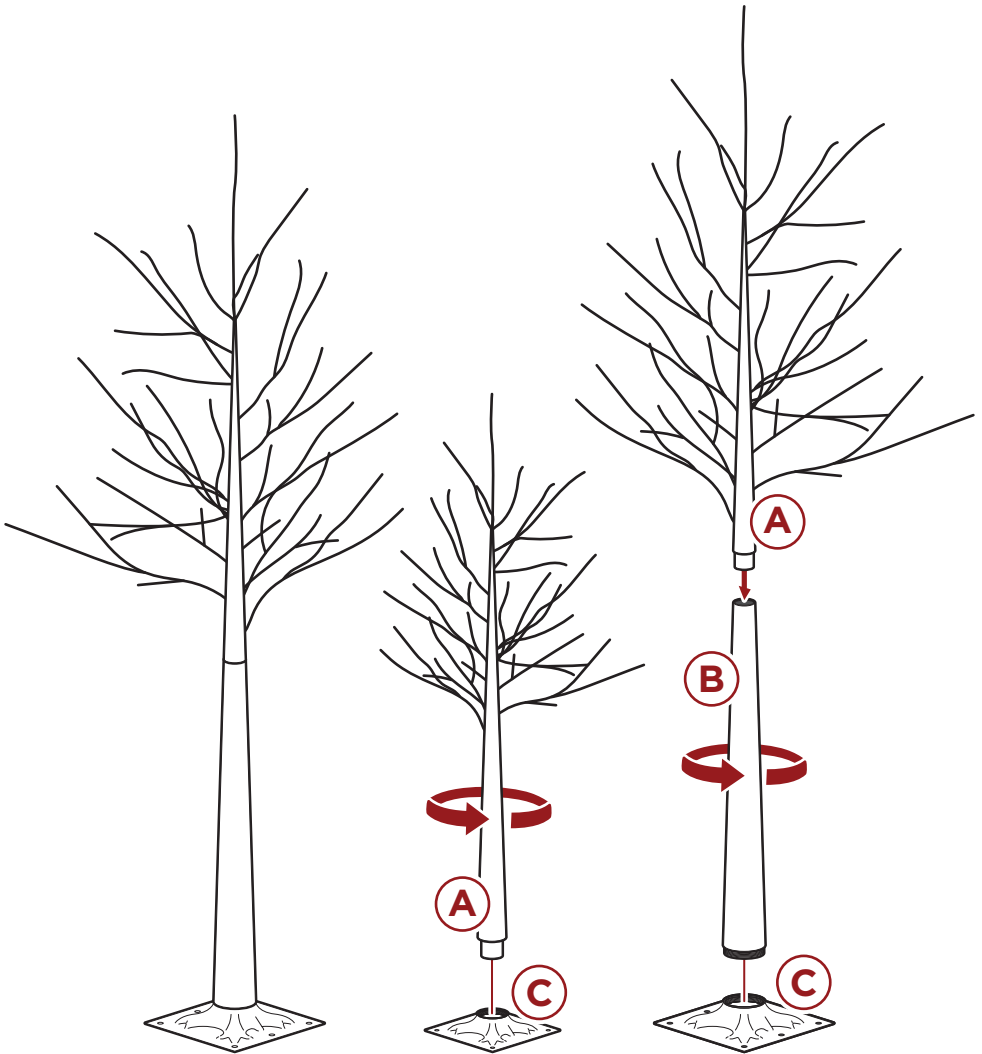

## FLUFFING

1. Find a large branch and gently draw it away from the trunk.
2. Extend one twig at a time so each light is prominently displayed.
3. Apply additional pressure along the twigs to create additional angles and improve the natural look of the tree.


## INSTALLATION

1

Arrange your assembled trees as desired and use the **part 1 stakes** to secure them. Press down on the tops of the stakes.

If the ground is firm, use a mallet to tap the stakes into the ground.


**NOTE:** This product is intended for grass or dirt, do not attempt to sink the stakes into concrete.

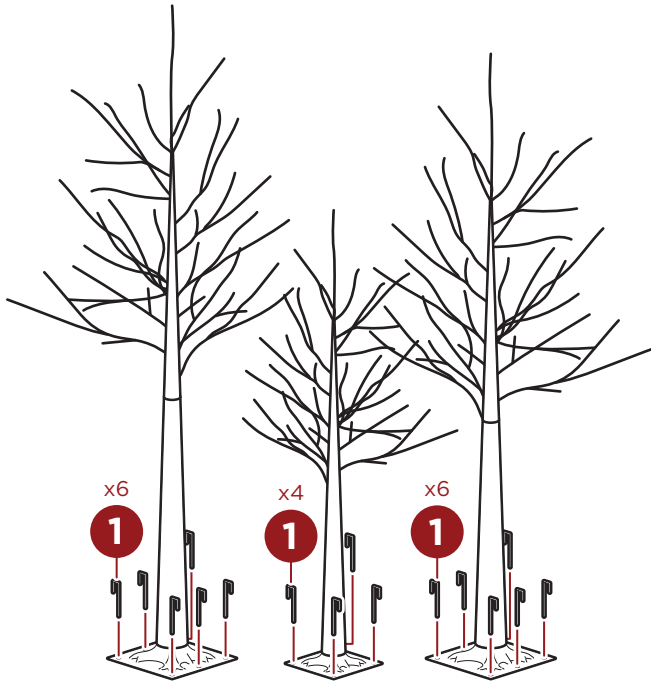

2

Attach one **part D power adapter** to one **part E clicker**, then attach that clicker to the power cord on the branch set of each tree assembly; insert the two halves together, then secure by turning the fastener ring.

Repeat for the other trees, then plug the **part D power adapters** into three sufficiently rated outlets.

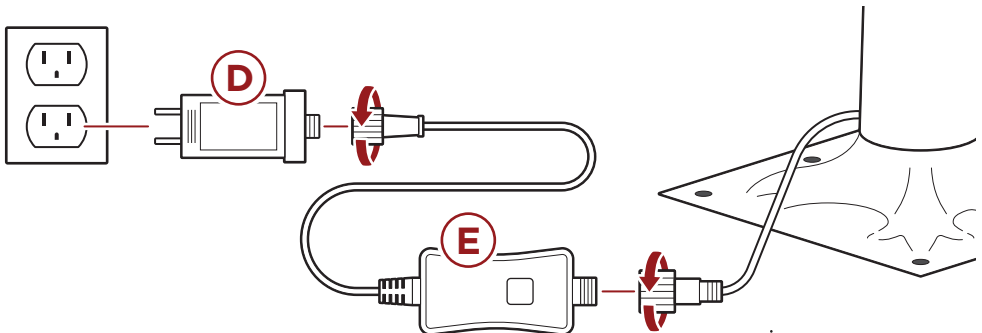



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](https://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledged by Best Choice Products as undamaged.

© 2023 Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Tustin, CA 92780

## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.