

Size: 19.685" x 17.5"

Note: For best results, when baking or cooking, always preheat the oven for at least 10

#### BAKE FUNCTION

- Unplug appliance when not in use.
- Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast. Light will go off.
- When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.
7. The on indicator light comes on and remains on until toasting cycle is complete. Turn your preference.
8. When toast cycle is complete, there will be an audible signal. The oven and the on indicator light will go off.
9. Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the toast.
10. Unplug appliance when not in use.

- Turn toast shade selector knob to 10 and then turn back to desired toast shade.
- Place desired pieces of bread or bagel to be toasted directly on slide rack and close the door.
- Set temperature selector knob to TOAST position.
- Open oven door.
- Insert slide rack.
- Place desired pieces of bread or bagel to be toasted directly on slide rack and close the door.

It is not necessary to preheat the oven for toasting.

#### TOAST FUNCTION

- You must set the timer or select STAY ON for the oven to function.
- is normal and should cause no concern.
- During first few minutes of use you may notice smoke and a slight odor. This is touching any outer or inner surface of the oven.
- This oven gets hot. When in use, always use oven mitts or pot holders when plugging unit into electrical outlet.

#### IMPORTANT INFORMATION ABOUT YOUR OVEN

- Remove all packing material and any stickers.
- Wash all removable parts as instructed in CARE AND CLEANING.
- Select a location where this unit is to be used, allowing enough space from back of the unit and the wall to allow heat to flow without damage to cabinets and walls.
- Plug unit into electrical outlet.

#### GETTING STARTED

Caution: A fire may occur if the toaster oven is covered or touching flammable materials including curtains, draperies, walls and the like when in operation or after the like. Do not place any of the following materials in the oven, on top of the oven, or in contact with the oven sides or bottom surfaces: paper, cardboard, plastic or materials including curtains, draperies, walls and the like when in operation or after the like.

Caution: Do not leave oven unattended when in operation. Food ignition may occur. If this happens, unplug unit but DO NOT open door. To reduce the risk of fire, keep oven interior completely clean and free of food residues, oil, grease and any other combustible materials.



THIS OVEN GETS HOT  
WHEN IN USE, ALWAYS USE OVEN MITTS  
OR POT HOLDERS WHEN TOUCHING ANY  
OUTER OR INNER SURFACE OF THE OVEN.

## CAUTION

## How to Use

This product is for household use only.

minutes at the desired temperature setting.

- Set temperature control dial to the desired setting from 200 °F to 450 °F.
  - Turn time selector knob to 10 and then turn back or forward to desired baking time, including preheat time. (Select STAY ON to bake longer than 30 minutes or to control cooking time yourself. Be sure to use a kitchen timer.)
  - The indicator light comes on and will remain lit during the entire baking time.
  - The heating elements will cycle on and off to maintain even heat distribution.
  - Once oven has preheated, open oven door and insert food. Close oven door.
- Note: You can cook your food two ways:
- In the bake pan/drip tray placed on the slide rack ), or
  - Directly on the slide rack with the bake pan/drip tray inserted on the rack support rails underneath the slide rack to catch drippings.
- Note: Be sure food does not extend past the outer limits of the bake pan to prevent grease dripping onto the heating elements.
- Use a metal, glass or ceramic baking dish placed on the slide rack. (Be sure food or baking dish does not come within 1½ inches of the top heating elements.)
- The first time you use the oven, follow the manufacturer's or recipe directions and check for doneness at minimum suggested cooking time. If using the oven timer, there will be an audible signal once the baking cycle is complete. The oven turns off and the light goes out.
  - If not using the oven timer, turn the oven to OFF once cooking cycle is complete.
  - Open the oven door. Using oven mitts or pot holders, slide the rack out to remove the cooked food.

#### BROIL FUNCTION

Note: When broiling, preheat oven for 10 minutes.

- Turn the temperature selector to Broil.
  - Open oven door and using the bake pan as a drip tray, insert it under the slide rack on the rack support rails.
  - Set the timer to desired number of minutes including preheat time or to STAY ON if you want to control cooking time or need to cook your food longer than 30 minutes.
  - Place food on the baking pan slide rack/broiling rack.
- Note: Be sure the top edge of the food or container is at least 1½" (3.81 cm) away from the upper heating elements.
- Important: Food should not extend beyond the edges of the bake pan/drip tray to avoid drippings from falling onto the heating elements.
- Cook food according to recipe or package instructions and check at minimum time to see if it is done.
  - When finished broiling, the signal bell sounds. Turn the TOAST/TIMER selector to the OFF position. The power indicator light goes off.
  - Using an oven mitt or pot holder, slide out broiling rack together with bake pan to remove food.
  - Unplug appliance when not in use.

#### BROILING CHART

Cooking times are approximate and should be adjusted to individual preferences.

FOOD	APPROXIMATE TIME
Chicken pieces (1-4)	30 - 40 minutes
Hamburguers (1-3)	8 – 22 minutes
Beef steaks (1-2)	18 – 25 minutes
Fish steaks (1-6)	10 – 18 minutes



Product may vary slightly from what is illustrated.

Important: When using the TIMER/TOAST function, always turn the knob past 10 and then turn back or forward to desired setting.  
To switch off the appliance turn TOAST/TIMER knob to "OFF" position.

- Power on indicator light (Part #T01420B-01, T01342W-01)
- Temperature selector knob (Part #T01420B-02, T01342W-02)
- TOAST/TIMER selector knob with stay on setting (Part #T01420B-03, T01342W-03)
- swing-down crumb tray (under unit) (Part #T01420B-04, T01342W-04)

Note: † indicates consumer replaceable/removable parts

## SAVE THESE INSTRUCTIONS.

This product is for household use only.

Warning: this appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

#### ELECTRICAL CORD

- A short power-supply cord (or detachable power-supply cord) is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.
- If a long detachable power-supply cord or extension cord is used, the marked electrical rating of the detachable power-supply cord or extension cord should be at least as great as the electrical rating of the appliance.
- If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

#### GROUNDING PLUG

As a safety feature, this product is equipped with a grounded plug, which will only fit into a three-prong outlet. do not attempt to defeat this safety feature. Improper connection of the grounding conductor may result in the risk of electric shock. Consult a qualified electrician if you are in doubt as to whether the outlet is properly grounded.

#### TAMPER-RESISTANT SCREW

Warning: this appliance is equipped with a tamper-resistant screw to prevent removal of the outer cover. There are no user-serviceable parts inside. Repair should be done only by authorized service personnel.

- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.

#### Código de fecha / Date Code

1150 W 120 V~ 60 Hz

Importado y distribuido por:  
**RAYOVAC ARGENTINA S.R.L.**  
Humboldt 2495 Piso# 3  
C1425FUG) C.A.B.A. Argentina  
C.U.I.T NO. 30-70706168-1

Importado por / Imported by:  
**Spectrum Brands de México SA de CV**  
Autopista México Querétaro  
No.3069-C, Oficina 004  
Col. Centro Industrial Tlalnepantla  
CP 54030  
Tlalnepantla, Estado de México  
Tel. 01-800-714-2503

BLACK+DECKER and the BLACK+DECKER logos and product names are trademarks of The Black & Decker Corporation, used under license. All rights reserved.

BLACK+DECKER y los logos y nombres de productos de BLACK+DECKER son marcas registradas de The Black & Decker Corporation, usados bajo licencia. Todos los derechos reservados.

All other marks are Trademarks of Spectrum Brands, Inc.  
Todas la demás marcas son Marcas Registradas de Spectrum Brands, Inc.

Made in China.  
Fabricado en China.

T22-9001226  
2018/11/07

# BLACK+DECKER

## TOASTER OVEN HORNO TOSTADOR



## MODEL/MODELO

T01342W

- To switch off the appliance turn Toast/Timer knob to "OFF" position.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for material including curtains, draperies, walls and the like, when in operation.
- A fire may occur if the toaster oven is covered or touching flammable material including curtains, draperies, walls and the like, when in operation.
- As they may create a fire or risk of electric shock.
- Over-sized foods or metal utensils must not be inserted in a toaster oven, touch electrical parts, creating a risk of electric shock.
- Do not clean with metal scouring pads. Pieces can break off the pad and Use extreme caution when removing tray or disposing of hot grease.
- Do not use appliance for other than intended use.
- Always attach plug to appliance first, then remove plug from wall outlet. Disconnect, turn any control to OFF, then remove plug into the wall outlet. To oil or other hot liquids.
- Extreme caution must be used when moving an appliance containing hot Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces. manufacturer may cause injuries.
- The use of accessory attachments not recommended by the appliance or adjustment.
- appliance to the nearest authorized service facility for examination, repair or adjustment.
- appliance malfunctions or has been damaged in any manner, return to the manufacturer immediately.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner, return to the manufacturer immediately.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Close supervision is necessary when any appliance is used by or near children.
- appliance in water or other liquid.
- To protect against electrical shock do not immerse cord, plugs or Do not touch hot surfaces. Use handles or knobs.
- Read all instructions.
- When using electrical appliances, basic safety precautions should always be followed including the following:

## IMPORTANT SAFETY INSTRUCTIONS

Please Read and Save this Use and Care Book.

