

Important safety

Please read carefully

Please retain instructions for future reference.

SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.
- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



 
CAUTION: Hot surface – do not touch hot sections or heating components of the appliance.



WARNING: Keep the appliance away from flammable materials.

User manual

Milk frother

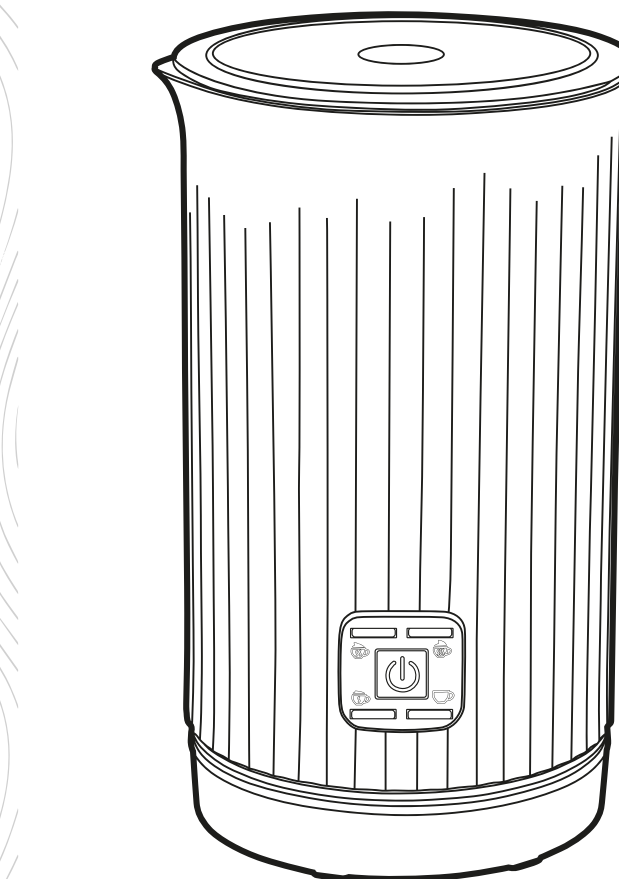

Function	Selection	Best for	Whisk	Max fill
Full foam	Press '0' twice	Cappuccino or macchiato	Frothing whisk	150 ml max. fill mark for frothing function
Cold foam	Press '0' three times	Frappe or iced cappuccino	Frothing whisk	150 ml max. fill mark for frothing function
Hot milk	Press '0' four times	Flat white	Frothing whisk	150 ml max. fill mark for frothing function
		Warming milk	Stirring whisk	300 ml max. fill mark for heating function

Storage

Check that the milk frother is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the milk frother; wrap it loosely to avoid causing damage.

Do not store the cord inside the milk frother.

Specifications

Product code: EK6681

 
 
Input: 220–240 V ~ 50/60 Hz

Output: 500 W

Power consumption (off mode): 0.15 W

Off mode: after 20 seconds of inactivity

Description of parts

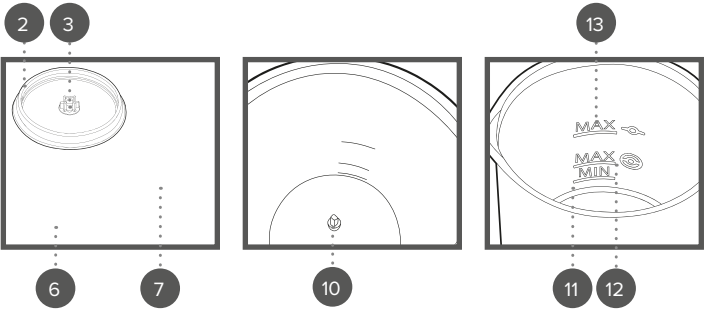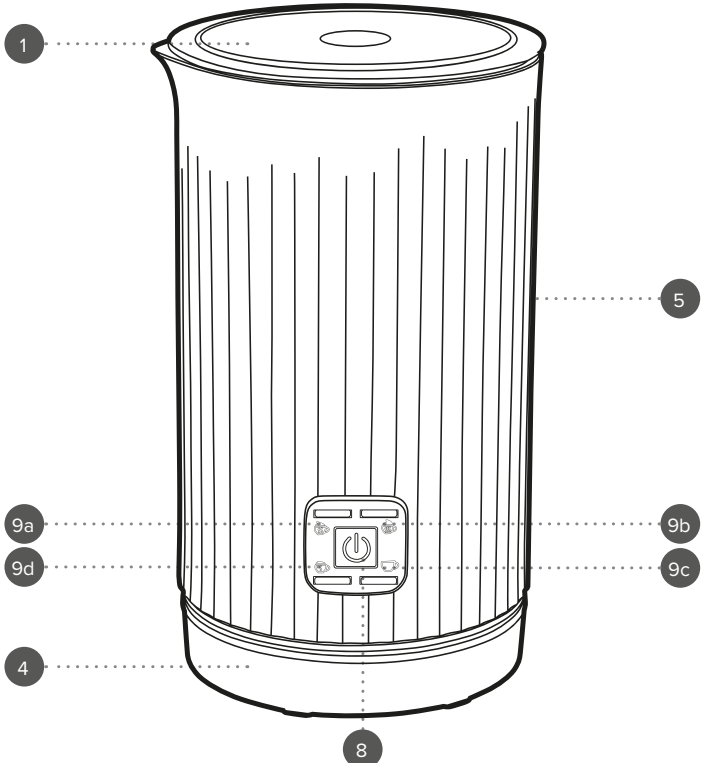

- 1. Lid
- 2. Sealing ring
- 3. Whisk holder
- 4. Milk frother base
- 5. Milk frother
- 6. Frothing whisk
- 7. Stirring whisk
- 8. Power button
- 9. Indicator lights
 - a. Part foam
 - b. Full foam
 - c. Cold foam
 - d. Hot milk
- 10. Whisk spindle
- 11. 80 ml min. fill mark
- 12. 150 ml max. fill mark for frothing function
- 13. 300 ml max. fill mark for heating function

Please retain instructions for future reference.

Dos and don'ts

DO:
 Check that the base of the milk frother is clean before each cycle.
 Always fill the milk frother above the min. fill mark, whilst making sure not to exceed the max. fill mark for the frothing or heating function.

DON'T:
 Connect the milk frother to the mains power supply before milk has been added.
 Allow any liquid to come into contact with the base.
 Operate the milk frother whilst empty.

Boil-dry protection

If there is insufficient milk in the milk frother, all indicator lights will flash, and it will automatically shut off. If this happens, switch off and unplug the milk frother from the mains power supply. Allow to cool fully for at least 10 minutes before using again.

Care and maintenance

Switch off and unplug the milk frother from the mains power supply and allow it to cool fully before attempting any cleaning or maintenance.

STEP 1: Wipe the milk frother with a soft, damp cloth and dry thoroughly.

STEP 2: Clean the interior of the milk frother with warm, soapy water, then rinse and dry thoroughly. Do not use harsh or abrasive cleaning detergents or scourers to clean the milk frother, as this could cause damage.



NOTE: The milk frother should be cleaned after each use.



WARNING: The milk frother is not safe for dishwasher use.

Instructions for use

Before first use

Clean the milk frother following the instructions in the sections entitled 'Care and maintenance'.

Using the milk frother

- STEP 1:** Place the milk frother base onto a flat, stable, heat-resistant surface at a height that is comfortable for the user.
- STEP 2:** Position either the frothing whisk or stirring whisk onto the whisk spindle at the bottom of the milk frother.
- STEP 3:** Fill the milk frother with the desired amount of milk. Ensure that the milk is above the min. fill line but below the max. fill line (see table below).
- STEP 4:** Attach the milk frother lid and place the milk frother on to the milk frother base.
- STEP 5:** Plug in and switch on the milk frother at the mains power supply. The indicator lights will flash 3 times to signal that the milk frother is powered on.
- STEP 6:** Press the power button to select the desired function. The indicator light will flash for approx. 3 seconds before automatically starting the desired function.
- STEP 7:** When the cycle is complete, the indicator light will flash for approx. 20 seconds then switch off automatically. To stop the cycle before it is complete, press the power button.
- STEP 8:** Switch off and unplug the milk frother at the mains power supply. Carefully remove the milk frother lid and pour out the milk.

Table of functions

Function	Selection	Best for	Whisk	Max fill
Part foam	Press '0' once	Latte or matcha latte	Frothing whisk	150 ml max. fill mark for frothing function