

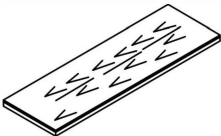
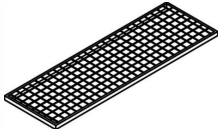

 
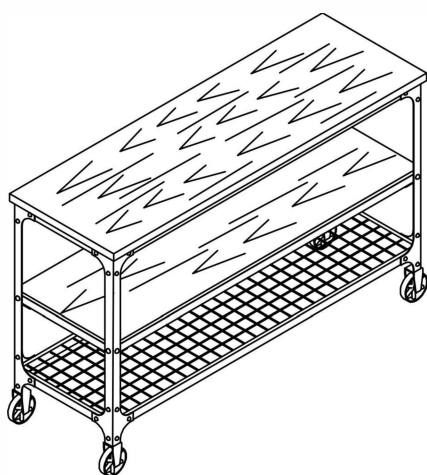


ASSEMBLY INSTRUCTION

SOFA TABLE


A Table Top	B Table Leg	C Table Panel
		
1 pc	4 pcs	1 pc
D Table Shelf	E Bolt with Lock Washer and Flat Washer 1/4", 5/8"	F Allen Wrench
		
1 pc	24 pcs	1 pc

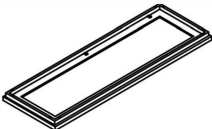

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

Place and face down Table Top on a stable and smooth surface, attach 3 Table Leg (B) firstly to the Table Top (A), then attach the Table Panel (C) to the 3 Table Leg (B), using Bolt with Lock Washer and Flat Washer (E) and Allen Wrench (F).

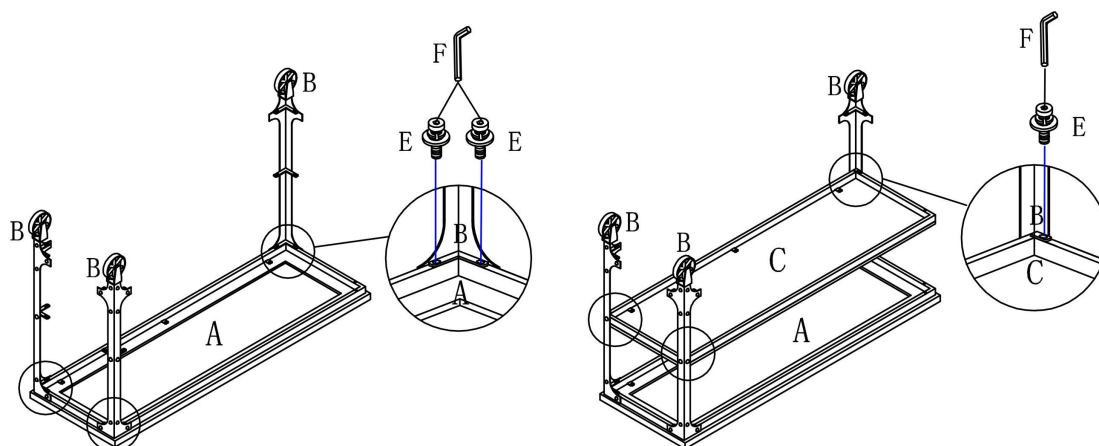

2

Attach the Table Shelf (D) to the 3 Table Leg (B) and attach the last Table Leg (B) to the Table Top (A), Table Panel (C), Table Shelf (D), using Bolt with Lock Washer and Flat Washer (E) and Allen Wrench (F). Finally tighten all bolts with Allen Wrench (F).

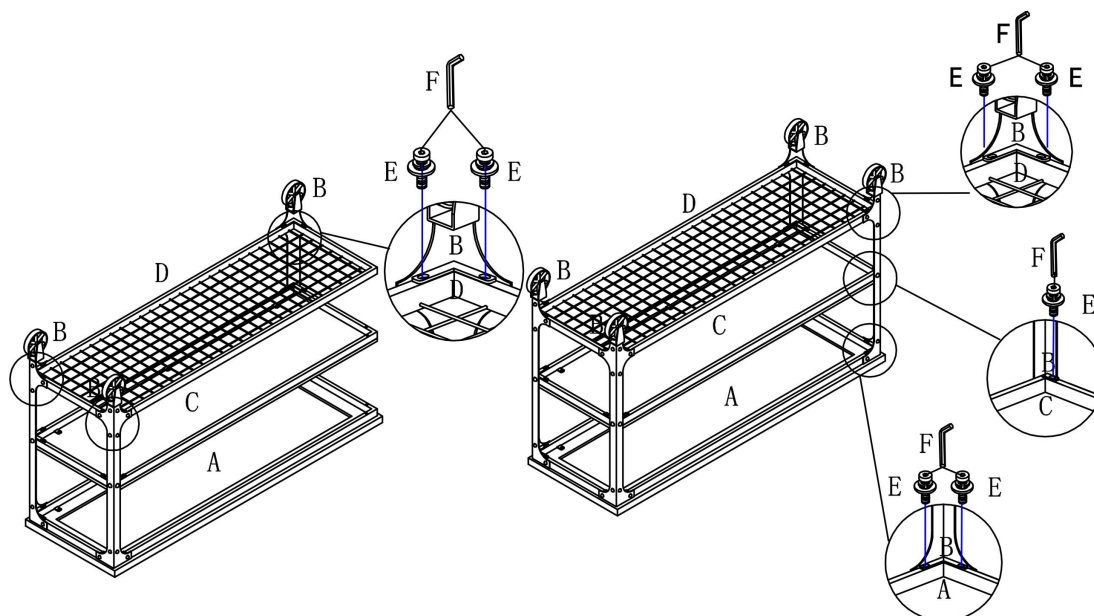

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with adry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.