


# User manual

Iron

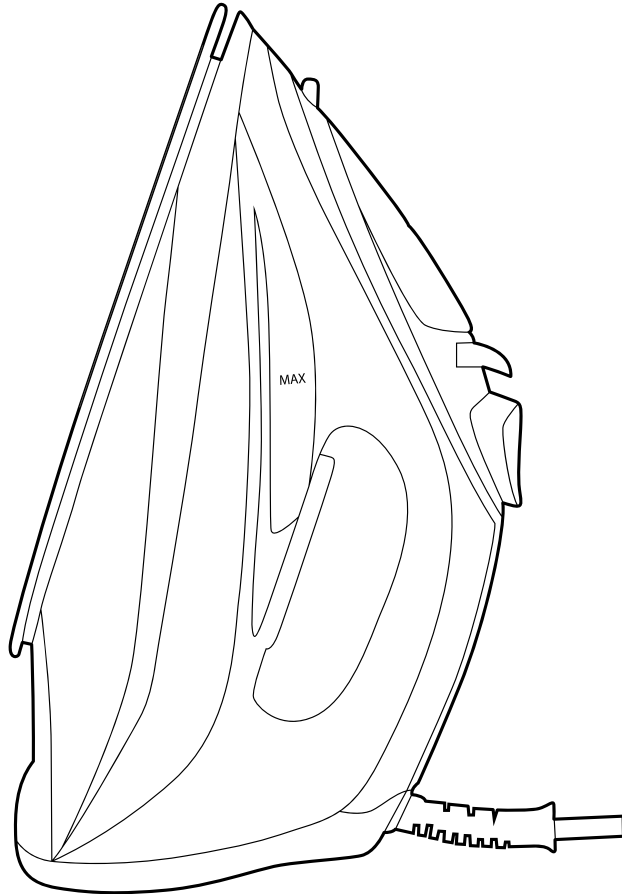

To register for your extended guarantee, scan the QR code or visit [guarantee.usgpc.com/beldray](http://guarantee.usgpc.com/beldray) and register your product within 30 days of purchase. For any further queries, visit [www.beldray.com](http://www.beldray.com).

# Important safety

Please read carefully

Please retain instructions for future reference.

## SAFETY INSTRUCTIONS

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.

- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not open the filling cap during use.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any parts/accessories other than those supplied with this appliance.
- Do not direct steam at people or animals or towards equipment containing electrical components, such as the interior of ovens.
- Never add aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.
- Always unplug the appliance after use and allow to cool fully before any cleaning or user maintenance.
- Use of an extension cord with the appliance is not recommended.
- This appliance should not be operated by means of an external timer or separate remote control system.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



**CAUTION:** The appliance emits very hot steam; always exercise extreme caution during use. Hot surface – do not touch the hot section or heating components of the appliance.



**WARNING:** Danger of scalding. Keep the appliance away from flammable materials.

UK CE

**EN | Disposal of Waste Batteries and Electrical and Electronic Equipment**




This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**  
**MADE IN CHINA.**

CD151124/MD000000/V1

## Description of parts

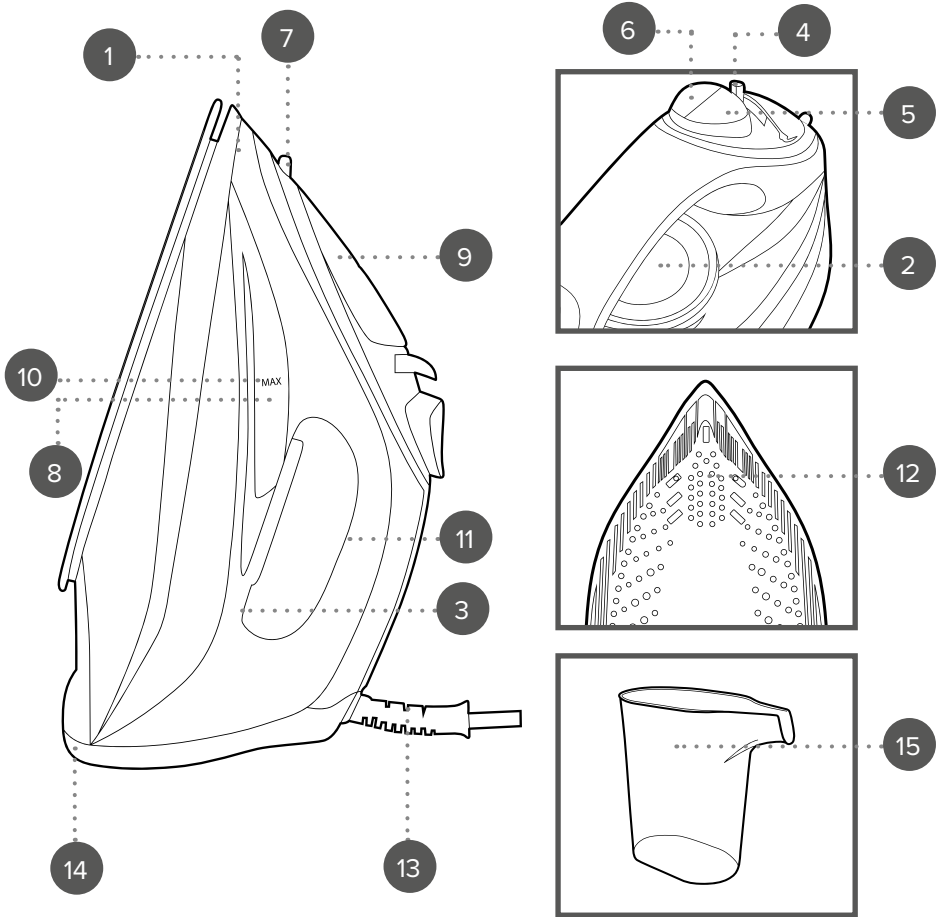

1. Iron
2. Temperature control dial
3. Temperature indicator light
4. Steam control/self-clean switch
5. Steam burst button
6. Water spray button
7. Spray nozzle
8. Water tank
9. Water tank cap
10. Max. fill mark
11. Easy-grip handle
12. Ceramic soleplate
13. Cord guard
14. Heel rest
15. Measuring jug

Please retain instructions for future reference.

## Dos and don'ts



Only use the iron rested on a stable surface.  
Always hold the iron by its handle.



Do not overfill the water tank past the max. fill mark.  
Never iron clothing whilst it's being worn.

## Care and maintenance

Before attempting any cleaning or maintenance, always unplug the iron from the mains power supply, drain the water tank and allow it to cool sufficiently.

To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft damp cloth and dry thoroughly.

Before attempting any cleaning or maintenance, always unplug the iron from the mains power supply and allow it to cool sufficiently.

**STEP 1:** Drain the remaining water from the water tank to prevent it from leaking during cleaning.

**STEP 2:** Wipe the ceramic soleplate with a soft, damp cloth and dry thoroughly.

**STEP 3:** If polyester has burnt onto the ceramic soleplate, wipe it with a soft cloth dipped in methylated spirits. Clean off the methylated spirits with a soft, damp cloth and dry thoroughly.

**STEP 4:** To remove any build-up around the steam holes, use a cotton wool tip dampened with methylated spirits. Wipe off the methylated spirits with a soft, damp cloth and dry thoroughly.

## Instructions for use

### Before first use

**STEP 1:** Switch off and unplug the iron from the mains power supply.

**STEP 2:** Wipe the exterior surface of the iron with a soft, damp cloth and dry thoroughly.

**STEP 3:** To remove any impurities that may have occurred during the manufacturing process, it is best to use the iron on an old piece of cloth, making sure that it is on the highest temperature setting suitable for the material. Plug in and switch on the iron at the mains power supply, place the iron onto the cloth and then push the steam burst button 2–3 times, waiting approx. 5 seconds in-between each burst; this will remove any impurities from the ceramic soleplate.



**NOTE:** When using the iron for the first time, a slight odour and a small amount of smoke may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the iron when it is in use.

## Filling the water tank

**STEP 1:** Switch off and unplug the iron from the mains power supply.

**STEP 2:** Check that the steam control dial is set to the off position.

**STEP 3:** Set down the iron onto the heel rest and open the water tank cap.

**STEP 4:** Fill the measuring jug with water. Carefully pour the contents of the measuring jug into the water tank. Do not fill the water past the max. fill mark.

**STEP 5:** Close the water tank cap.



**CAUTION:** Do not fill the water tank past the max. fill mark; it is best to check the water level when the iron is on the heel rest.



**WARNING:** Never add descaling, aromatic, alcoholic or detergent products to the water tank, as this could cause damage to the iron or injury to the user.

## Using the iron

### Ironing with steam

The steam settings are ideal for removing creases from fabrics, such as cotton and linen, with ease.

**STEP 1:** Fill the water tank following the instructions in the section entitled '**Filling the water tank**'.

**STEP 2:** Plug in and switch on the iron at the mains power supply.

**STEP 3:** Rotate the temperature control dial until the desired heat setting is reached. The temperature indicator light will illuminate to signal that the iron is heating up; this will switch off once the iron is ready to use. The iron will only produce steam when the temperature control dial is set to the '●' heat setting.

**STEP 4:** Select the desired steam setting by sliding the steam control switch to the right. The first click is the lowest steam setting whilst the last click delivers the highest steam setting. The steam setting can be switched off at any time by sliding the steam control switch to the off position.

**STEP 5:** After use, rotate the temperature control dial to the off position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.



**NOTE:** Allow the iron to reach the desired heat setting before use; not doing so may cause water to drip from the ceramic soleplate. The temperature control dial needs to be at the '●' setting in order for the iron to heat up. The temperature indicator light will illuminate whilst the iron is heating up but not when it is cooling down; it should not be misinterpreted as a ready-to-use indicator light. The temperature indicator light will cycle on and off during use to regulate the temperature.



**WARNING:** Never leave the iron's ceramic soleplate resting on fabric for any longer than 15 seconds.

### Ironing without steam

For removing creases from more sensitive fabrics, try ironing without steam.

**STEP 1:** Move the steam control switch to the off position.

**STEP 2:** Plug in and switch on the iron at the mains power supply.

**STEP 3:** To increase the temperature of the iron, rotate the temperature control dial in a clockwise direction until the desired heat setting is selected. Reduce the temperature by rotating the temperature control dial in an anticlockwise direction. The temperature indicator light will illuminate red to indicate that the iron is heating up; this will switch off once the iron is ready to use.

**STEP 4:** Test the iron on a small area of the fabric to check that the selected temperature is suitable; adjust if necessary.

**STEP 5:** After use, rotate the temperature control dial to the off position. Switch off and unplug the iron from the mains power supply and allow to cool thoroughly.

### Steam burst function

For creases that are stubborn and difficult to remove, use the steam control dial to select the desired steam setting; if necessary, press the steam burst button for extra steam. Wait approx. 5 seconds in-between each burst to prevent any water leaking out from the steam holes.



**NOTE:** The iron will only produce steam when the temperature control dial is set to the '●●●' heat setting.

## Vertical steam ironing

The steam burst button can also be used to vertically steam curtains and other hanging garments.

**STEP 1:** Hang up the item to be vertically steamed.

**STEP 2:** Slide the steam control switch to the off position.

**STEP 3:** Fill the water tank following the instructions in the section entitled '**Filling the water tank**'.

**STEP 4:** Plug in and switch on the iron at the mains power supply.

**STEP 5:** Rotate the temperature control dial until the '●●●' heat setting is selected; the higher the temperature, the more powerful the steam.

**STEP 6:** Hold the iron approx. 15 cm away from the item and press the steam burst button to remove any creases, waiting approx. 5 seconds in-between each burst.

## Water spray function

The water spray function can be used to help to remove stubborn creases on heavier fabrics. It can also be used when dry ironing delicate fabrics that cannot be steam ironed.

To use the water spray function, hold the iron over the area to be ironed and then press the water spray button.



**NOTE:** The water spray function will not work if the water tank is empty. When using the water spray function for the first time, it may be necessary to press the water spray button several times.

## Anti-calcium feature

The iron has a built-in anti-calc filter located in the water tank to prevent calcium and limescale build-up. Calcium build-up, which is prominent in areas with hard water, can hinder performance and lower the lifespan of the iron. This is an automatic feature that is permanently activated.



**NOTE:** The filter is built in and does not need replacing.

## Self-clean function

The self-clean function removes limescale and impurities from within the ceramic soleplate.

It is recommended to use this function on a fortnightly basis or more often if the iron is used in a hard water area.

**STEP 1:** Switch off and unplug the iron from the mains power supply.

**STEP 2:** Rotate the steam control dial to the off position.

**STEP 3:** Set down the iron onto the heel rest.

**STEP 4:** Fill the water tank following the instructions in the section entitled '**Filling the water tank**'.

**STEP 5:** Plug in and switch on the iron at the mains power supply.

**STEP 6:** Set the temperature control dial to the highest heat setting and allow the iron to heat up until the temperature indicator light switches off.

**STEP 7:** Switch off and unplug the iron from the mains power supply.

**STEP 8:** Carefully hold the iron over a sink, making sure that the power supply cord and plug are kept away from the ceramic soleplate and remain dry.

**STEP 9:** Slide and hold the self-clean switch to the self-clean position. Hot water and steam will expel from the steam holes along with any impurities.

**STEP 10:** After approx. 1 minute or when the water tank is completely empty, release the self-clean switch.

**STEP 11:** Set down the iron onto the heel rest and allow to cool thoroughly.

**STEP 12:** When the iron has sufficiently cooled, wipe it with a soft, damp cloth.

**STEP 13:** Plug in and switch on the iron at the mains power supply.

**STEP 14:** Set the temperature control dial to the highest heat setting.

**STEP 15:** Once the temperature indicator light has switched off, use the iron on an old piece of fabric to remove any excess water and impurity build-up from in the steam holes.



**NOTE:** Water may be ejected from the steam holes whilst the iron is heating up.



**CAUTION:** Never press the self-clean button when using the iron; only press it when the iron is switched off and unplugged from the mains power supply and is safely held over a sink. When the iron is self-cleaning lots of hot steam will be released from the steam holes of the iron.

## Hints and tips

Always start ironing on a low heat setting and work up to a higher one, if necessary; it takes less time for the iron to heat up than it does to cool down.

The temperature of the iron is the hottest when it has initially heated up and will therefore need time to stabilise. Once the iron has heated up, allow the temperature indicator light to cycle off and on again before using the iron.

## Storage

Check that the iron is cool and dry and that the water tank is empty before storing in a cool, dry place. Wrap the cord loosely around the iron; never wrap it tightly as this could cause damage.

## Troubleshooting

Problem	Cause	Solution
Reduced constant steam or no constant steam.	The steam holes are blocked.	Clear the steam holes of any blockages following the instructions in the section entitled ' <b>Care and maintenance</b> '.
	The steam control dial is set to the off position.	Select a steam setting using the steam control switch.
The fabric shows signs of melting.	The temperature selected is too high.	Reduce the temperature using the temperature control dial.
The iron will not turn on.	The iron is not connected to the mains power supply.	Plug in and switch on the iron at the mains power supply.

Problem	Cause	Solution
Water does not spray out of the spray nozzle.	There is no water in the water tank.	Fill the water tank following the instructions in the section entitled <b>'Filling the water tank'</b> .
	The iron is being used for the first time.	Press the water spray button several times until water is released from the spray nozzle.
The iron is not removing the creases from the fabric.	The temperature is set too low.	Increase the temperature using the temperature control dial, making sure that the fabric's care instructions are followed.
	The steam control switch is set to the off position.	Select a steam setting using the steam control switch.



**WARNING:** To reduce the risk of fire, electric shock or injury, switch off and unplug the iron from the mains power supply before troubleshooting.

## Specification

Product code: BEL01480

Input: 220–240 V ~ 50–60 Hz

Output: 2200 W

Water tank capacity: 230 ml

Power consumption (off mode): 0 W



Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

**MADE IN CHINA.**

©Beldray trademark. All rights reserved.

CD050422/MD300725/V2