

# **ASSEMBLY INSTRUCTION**

# TWIN / FULL HEADBOARD

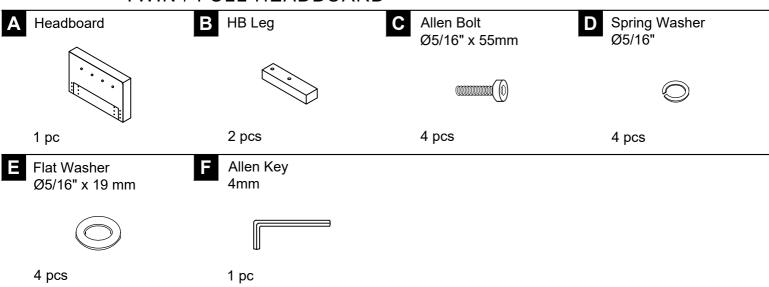

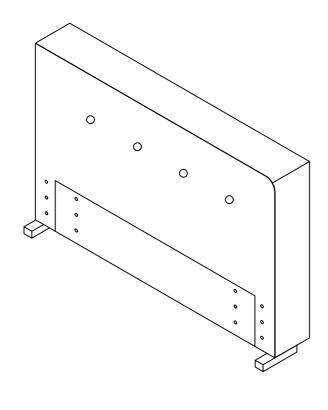


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


### **IMPORTANT NOTE:**

- 1. Do not tighten all screws / bolts until all completely assembled.
- 2. Keep all hardware parts out of reach of children.

1 Take the leg box out of the inner box from the back of Headboard (A).

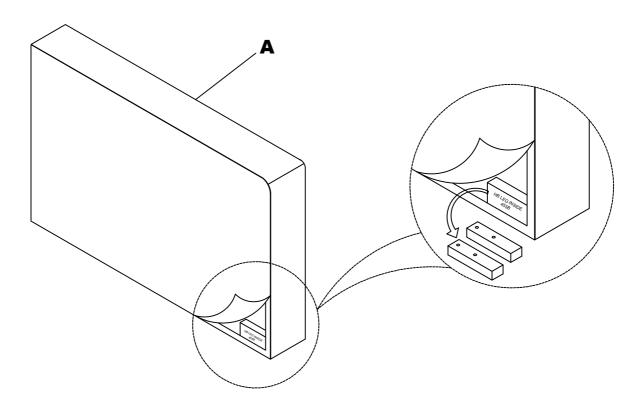


Attach HB Leg (B) to Headboard (A) using Allen Bolt (C), Spring Washer (D), Flat Washer (E) and Allen Key (F).

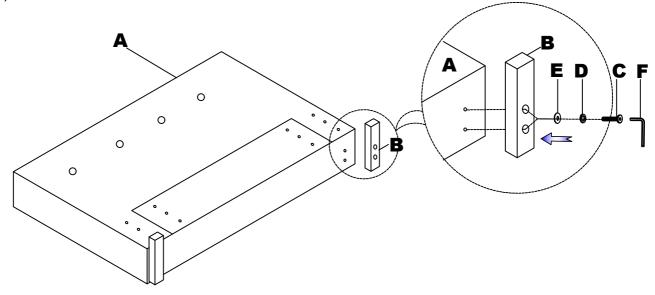


### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

# **ASSEMBLY INSTRUCTION**

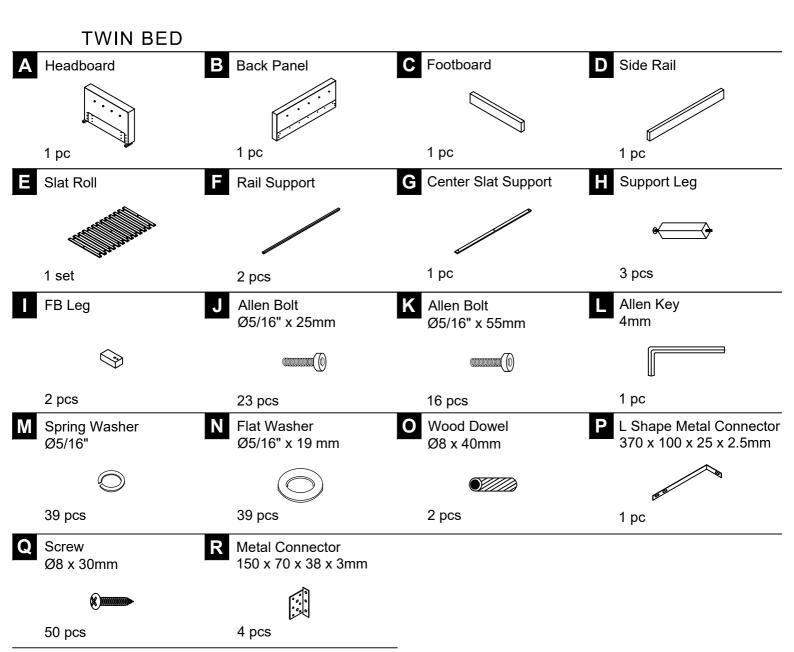

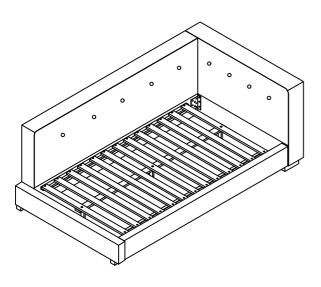


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

#### **IMPORTANT NOTE:**


- 1. Do not tighten all screws / bolts until all completely assembled.
- 2. Keep all hardware parts out of reach of children.

# \*\*\* Do not tighten screws & bolts until the entire unit is completely assembled.


Attach FB Leg (I) to Footboard (C) using Wood Dowel (O), Allen Bolt (K), Spring Washer (M), Flat Washer (N) and Allen Key (L).

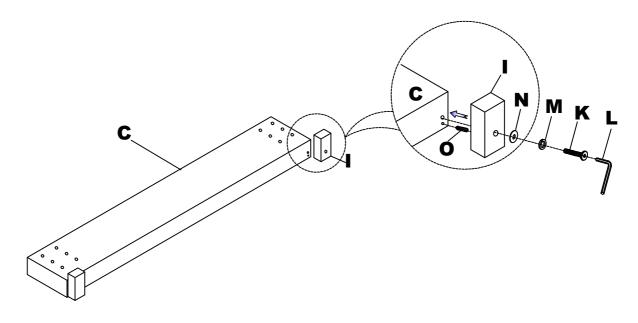


Attach Rail Support (F) to Back Panel (B) using Allen Bolt (K), Spring Washer (M), Flat Washer (N) and Allen Key (L).

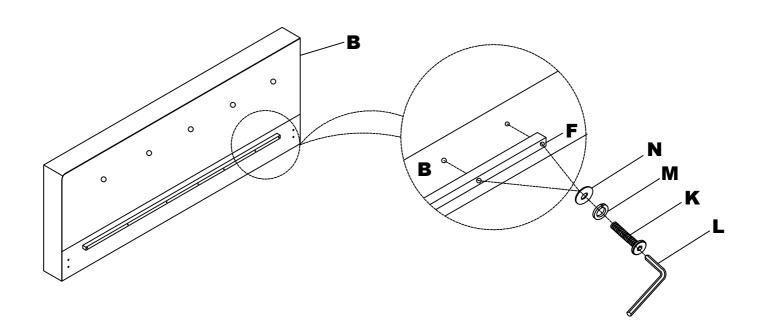


Attach Rail Support (F) to Side Rail (D) using Allen Bolt (K), Spring Washer (M), Flat Washer (N) and Allen Key (L).

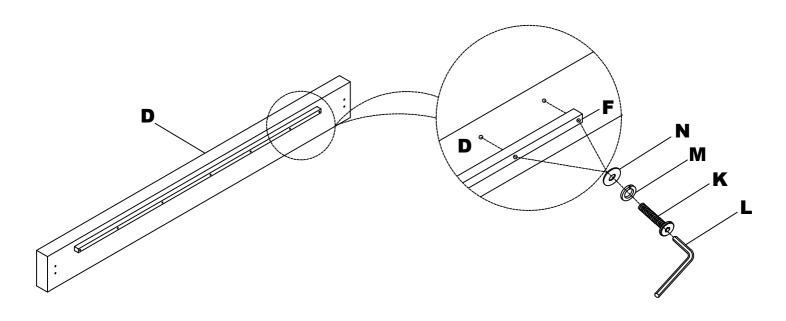


Attach Metal Connector (R) to Headboard (A), Back Panel (B), Footboard (C) & Side Rail (D) using Allen Bolt (J), Spring Washer (M), Flat Washer (N), Screw (Q), and Allen Key (L).

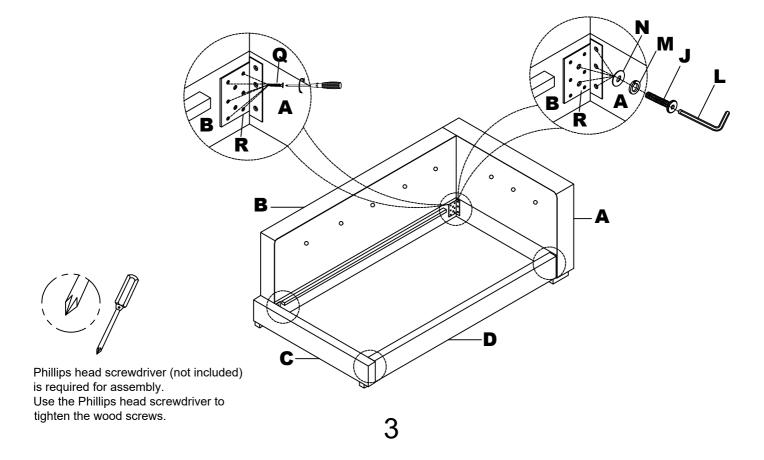


Attach L Shape Metal Connector (P) to Headboard (A) and Back Panel (B) using Allen Bolt (J), Spring Washer (M), Flat Washer (N) and Allen Key (L).

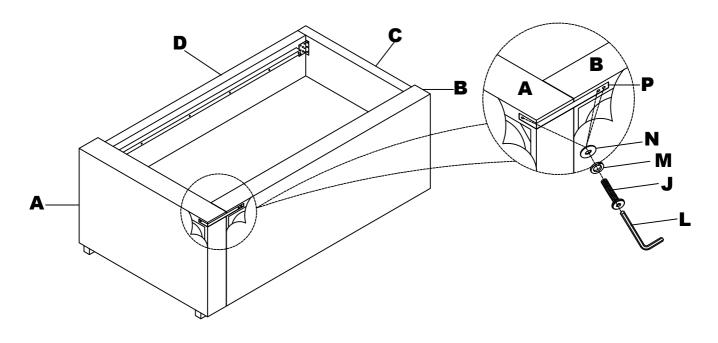

Attach Support Leg (H) to Center Slat Support (G) and Slat Roll (E). Then place Slat Roll (E) on Side Rail (D) with Screw (Q).

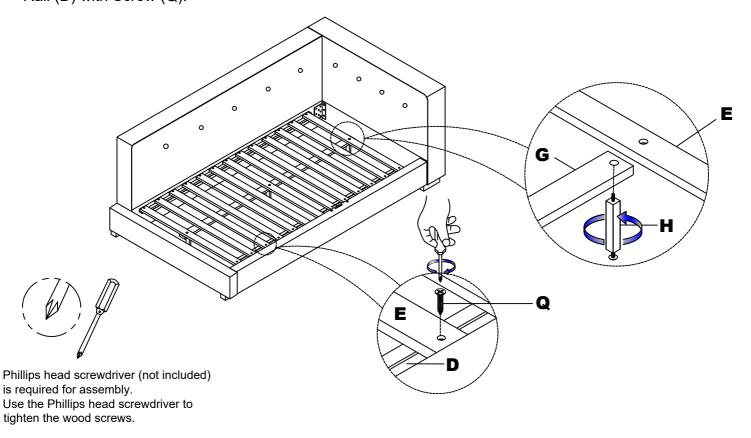

Remark: The Headboard (A) can interchange from right side to left side.

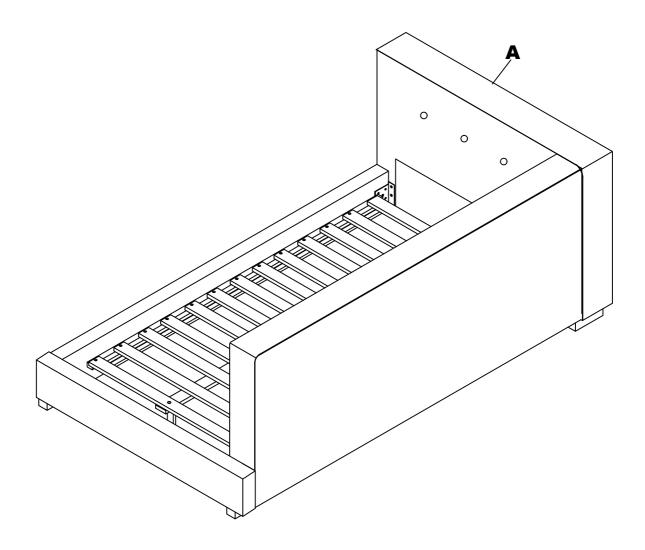

# Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.