

Specifications

Product code: LA041258

Input: 220–240 V ~ 50–60 Hz

Output: 1000 W

Beldray Guarantee

Subject to the care and use being followed, the Beldray guarantee promises to replace, substitute or refund any product that fails due to faulty workmanship or materials. This guarantee does not cover any damage caused by accident or misuse and is in addition to your statutory rights. Should any defects due to faulty workmanship or materials appear within 12 months from the date of purchase, please return the goods with proof of purchase to the retailer. For any further queries, visit www.beldray.com. To be eligible for the extended guarantee, go to guarantee.upplc.com/beldray and register your product within 30 days of purchase.



Disposal of Waste Batteries and Electrical and Electronic Equipment



This product is labelled with this crossed out wheel bin symbol in accordance with European Directive 2012/19/EC to indicate that it must not be disposed of with your other household waste. Due to the presence of hazardous substances, mixtures or components, electrical and electronic devices that are not subject to selective sorting are potentially dangerous to the environment and human health. Please check your local city office or waste disposal service for the return and recycling of this product.


Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

©Beldray trademark. All rights reserved.
CD110325/MD130325/V2

User manual

Heated airer

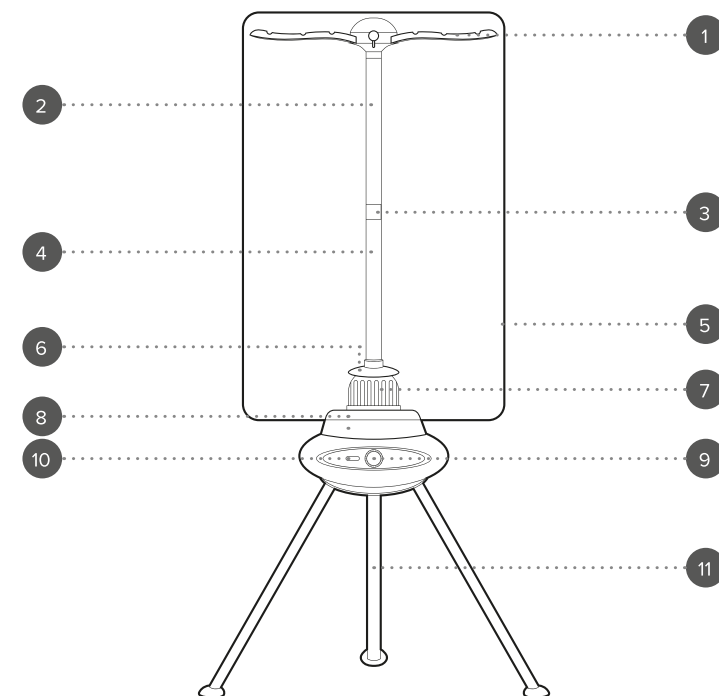

- | | |
|--------------------------------|-------------------------|
| 1. Folding clothes rack | 7. Air flow outlet |
| 2. Upper support pole | 8. Heater |
| 3. Support pole connector | 9. Timer |
| 4. Lower support pole | 10. Power indicator |
| 5. Heat insulated tube cover | 11. Dryer legs (qty. 3) |
| 6. Waterproof protection plate | |



UK ONLY
To register for your extended guarantee, scan the QR code or visit guarantee.upplc.com/beldray and register your product within 30 days of purchase.
For any further queries, visit www.beldray.com.

beldray®
Est.1872

SAFETY INSTRUCTIONS

- When using electrical products, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the product to the mains power supply.
- Children younger than 3 years old should be kept away from the product unless continuously supervised.
- Children aged from 3 years and less than 8 years should not plug in, regulate or clean the product or perform user maintenance.
- Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this product, only if it has been installed in its intended operating position and they have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved.
- Children should not perform cleaning or user maintenance unless they are older than 8 years and supervised.
- This product is not a toy – children should be supervised to ensure that they do not play with the product.
- Always unplug the product and allow to cool fully after use and before any cleaning or maintenance.
- Nominal voltage is still present in this product as long as the product is connected to the electrical source.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the product and its power supply cord out of the reach of children and away from heat or sharp edges that could cause damage. This includes any parts of the product that may become hot during use and other heat emitting products.
- Do not run the supply cord under carpets, rugs etc. or anywhere where it may present a trip hazard.
- Use of an extension cord with this product is not recommended.
- Do not immerse the product or plug in water or any other liquid.
- Do not operate the product with wet hands.
- Do not use this product in the immediate surroundings of a bath, a shower or swimming pool.
- Do not leave the product unattended whilst connected to the mains power supply or when in use.
- Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.
- Do not use this product over the recommended period of time.
- Do not leave the product plugged in or operating overnight.
- Do not use the product for anything other than its intended use.
- Do not use this product outdoors.
- Do not attempt to move the product whilst it is in use.

- Do not put objects into any of the openings.
- Do not use the product with a programmer, timer, separate remote-control system or any other device that will switch the product on automatically other than that supplied with the product, as there is a risk of fire if the heater is covered or positioned incorrectly.
- Do not clean the product with abrasive chemicals or materials such as scourers as they may damage the product and impair future function. This includes insecticide and chemical solvents.
- The product should be used on a stable, heat-resistant surface.
- Do not use on carpets, rugs or other flammable floor-based textiles.
- The product must not be located immediately below or next to a mains power supply.
- Never use accessories that are not recommended or supplied by the manufacturer. It could cause danger to the user and damage to the product.



CAUTION: Hot surface – do not touch the hot section or heating components of the product. This product is intended for domestic use only. It should not be used for commercial purposes.

Dos and don'ts

DO:

Allow at least 150 cm either side of the ailer to prevent any fire hazards. Pay particular attention to children and vulnerable people where present, as some parts of this heated ailer can become very hot and cause burns. Only dry clothes and other articles that can endure at least 75 °C or above. Only attempt to dry clothes that have undergone a normal spin cycle after washing or are thoroughly wrung out after handwashing. This is to avoid excess water dripping underneath and damaging the unit.

DON'T:

Exceed the maximum load of 10 kg.
Overload the heated ailer beyond the recommended maximum weight.
Touch or cover the motor with clothes at any point.

Care and maintenance

Before attempting any cleaning or maintenance, unplug the heated ailer from the mains power supply and allow it to cool fully.
Clean the heated ailer with a soft, damp, lint-free cloth and dry thoroughly. Do not immerse the heated ailer in water or any other liquid.
Do not use harsh or abrasive detergents or scourers.
To clean the dust gauze, first remove the screw from the base of the heater unit using a screwdriver.
Pull out the dust gauze and wipe clean with a cloth.
Insert the dust gauze back into the slot and secure by replacing the screw and tightening with a screwdriver.

Instructions for use

Assembling the heated ailer

STEP 1: Insert the three dryer legs (11) firmly into the holes in the base of the heater (8). Place the unit upright on a level, dry, heat resistant surface.

STEP 2: In a clockwise motion, screw the lower support pole (4) into the air flow outlet (7) on top of the heater (8).

STEP 3: In a clockwise motion, screw the upper support pole (2) into the connector on top of the lower support pole (4).

STEP 4: Firmly secure the folding clothes rack (1) onto the upper support pole (2).

STEP 5: Hang the heat insulated tube cover (5) on the folding clothes rack (1). The heated ailer can now be plugged into the mains power supply and is ready for use.



CAUTION: Take care when assembling the heated ailer, as it is possible for loose clothing or fingers to become trapped and cause injury to the user.

Using the heated ailer

Once the heated ailer has been assembled following the instructions in the section entitled '**Assembling the heated ailer**', it is ready to use.

STEP 1: Hang up the damp garments as required. Only machine-spun washing should be added. Take care not to exceed the maximum weight and load evenly across the folding clothes rack to avoid the heated ailer tipping over.

STEP 2: Unzip the heat insulated tube cover and place it over the clothes. Zip up the cover, ensuring that it is pulled down enough to cover the heater.

STEP 3: Once the heated ailer is loaded, plug it in and turn it on using '**ON/OFF**'; this will illuminate indicating that the heated ailer is turned on.

STEP 4: To set the timer (30–180 minutes), turn the dial clockwise to the desired time. To use without the timer, turn the dial to '**ON**'.

STEP 5: Once the garments are dry, switch off the heated ailer by switching '**ON/OFF**' to the off position, the light on the switch will turn off. If the timer has been set, the heated ailer will automatically switch off once the time has elapsed.

STEP 6: Remove the garments with care, as the heated ailer may still be hot. Take care to unload the garments evenly to prevent the ailer tipping over.



NOTE: Only for use with garments that have been spun in a washing machine prior to hanging to avoid damaging the unit. This will ensure the most efficient drying.



CAUTION: Do not load the heated ailer beyond 10 kg.



WARNING: Max operating time is 3 hours – please let the heated ailer cool down fully before using again.