


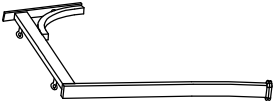

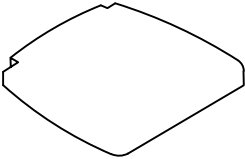




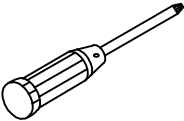
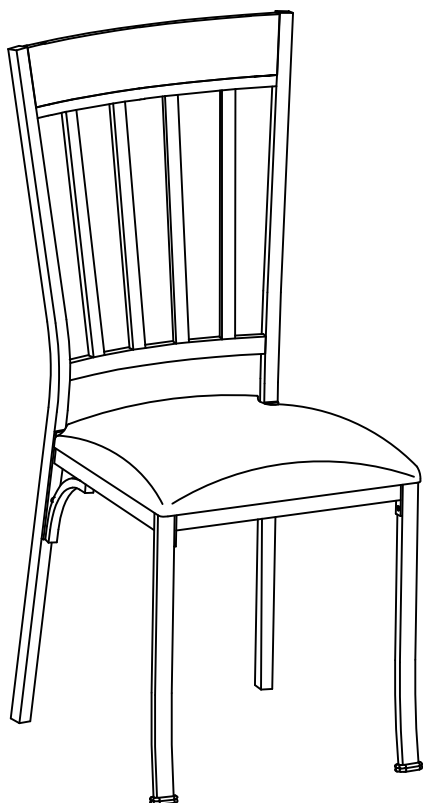


# ASSEMBLY INSTRUCTION


## E427C DINING CHAIR

<b>A</b> Chair Back	<b>B</b> Left Leg	<b>C</b> Front Cross Bar	<b>D</b> Right Leg
			
1pc	1pc	1pc	1pc
<b>E</b> Middle Cross Bar	<b>F</b> Seat Cushion	<b>G</b> Bolt Ø6x15mm	<b>H</b> Flat Washer Ø6x17x1.5mm
			
1pc	1pc	10pcs	10pcs
<b>I</b> Allen Key M4	<b>J</b> Screw M5x14mm	<b>K</b> Screwdriver (Not Provided)	
			
1pc	4pcs	1pc	

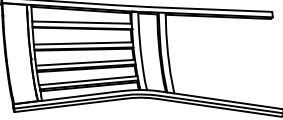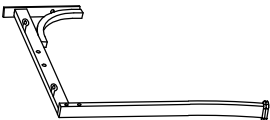

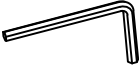
This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- 1** Attach Front Cross Bar (C) & Middle Cross Bar (E) to Left Leg (B) & Right Leg (D) using Bolt (G) & Flat Washer (H) by Allen Key (I) as below shown.

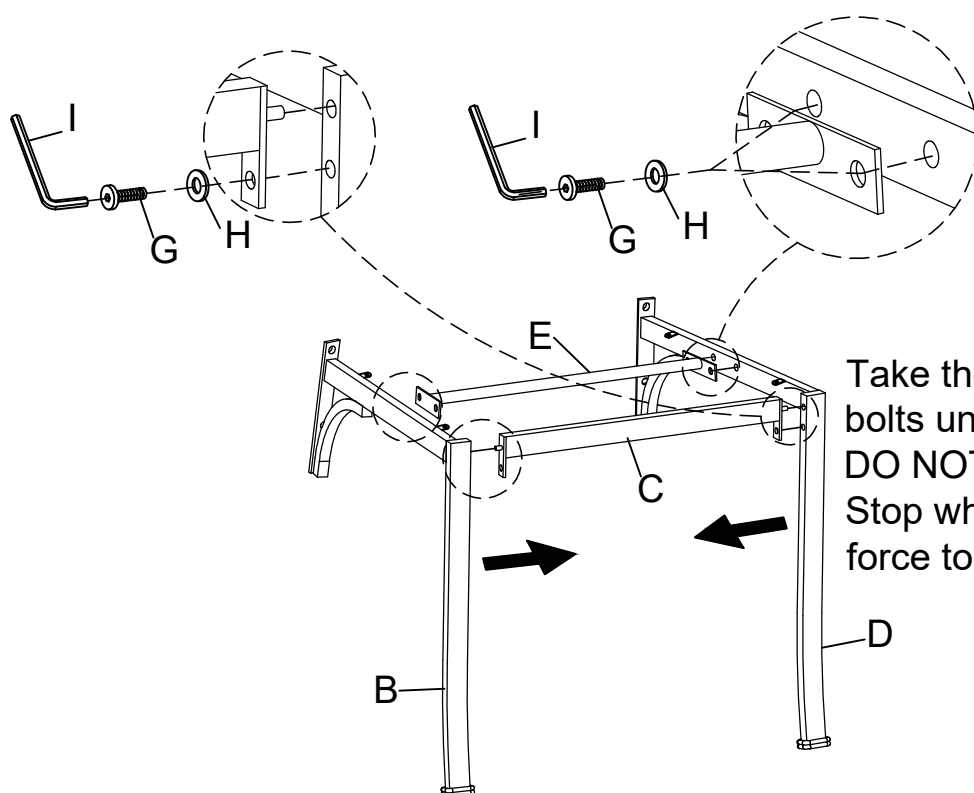

Take the Allen Key, and turn the bolts until the legs are secure. **DO NOT TIGHTEN COMPLETELY.** Stop when you feel you are adding force to tighten the bolt.

- 2** Attach assembled Left Leg (B) & Right Leg (D) to Chair Back (A) using Bolt (G) & Flat Washer (H) by Allen Key (I) as below shown.

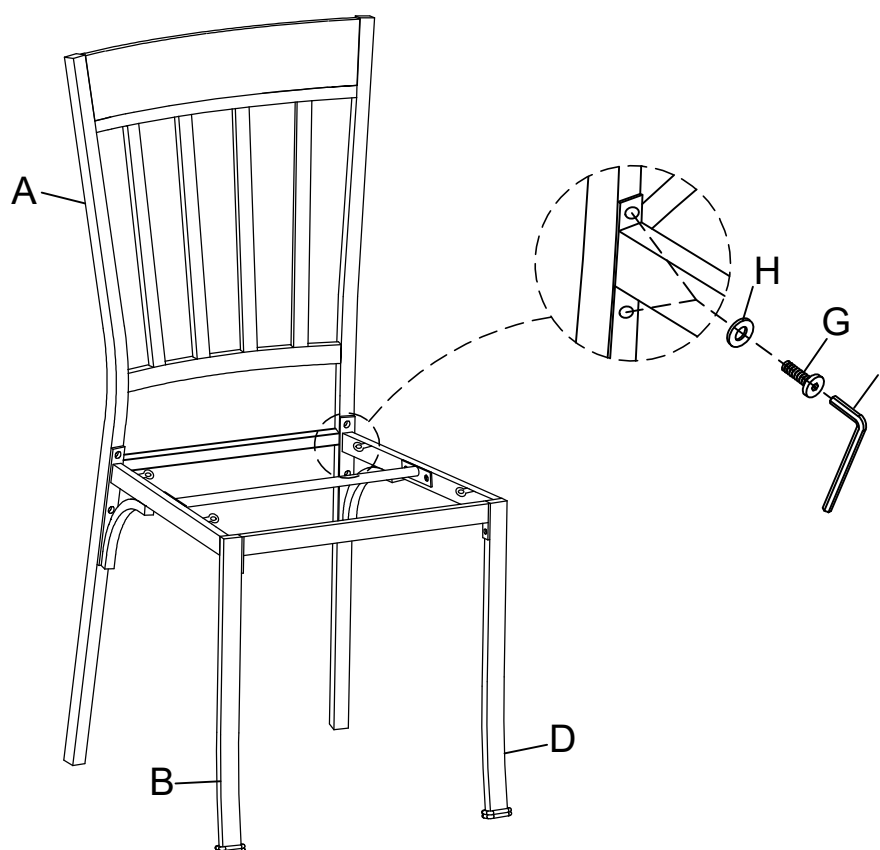


- 3** Attach Seat Cushion (F) to the frame of Left Leg (B) & Right Leg (D) using Screw (J) by Screwdriver (K) as below shown.

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

Helpful Tip:

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

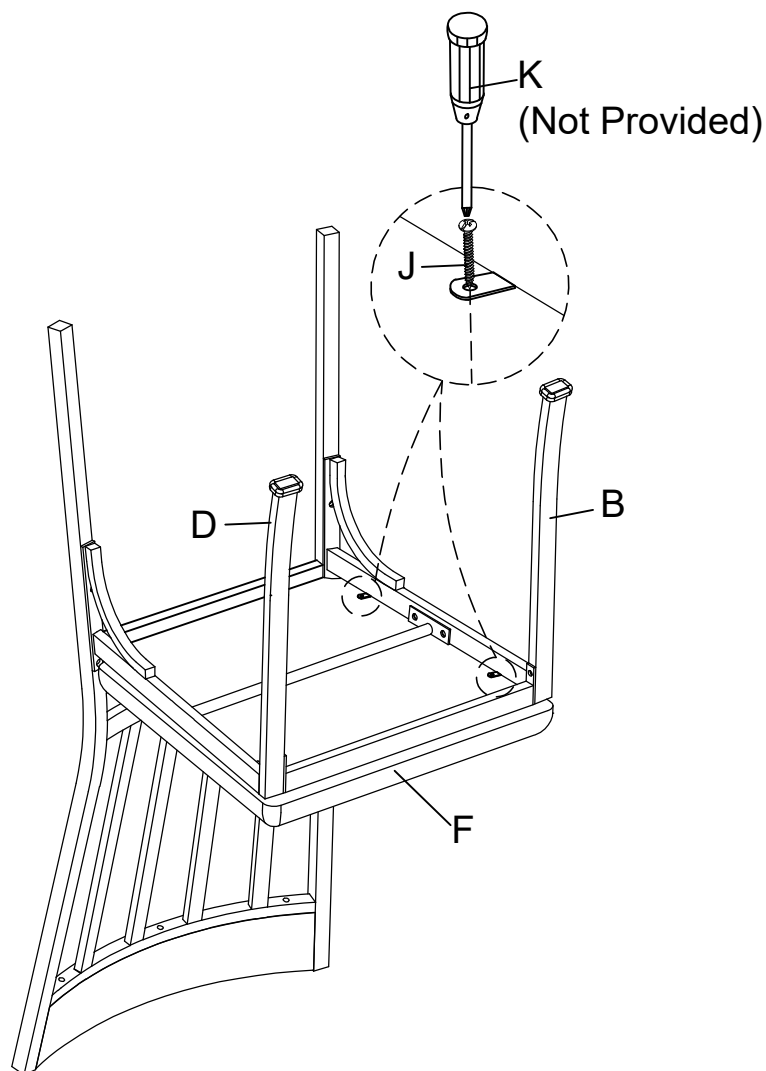

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.