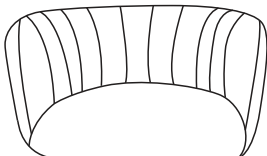
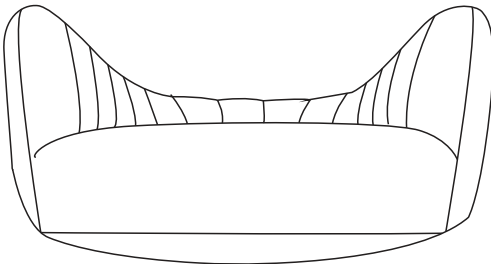
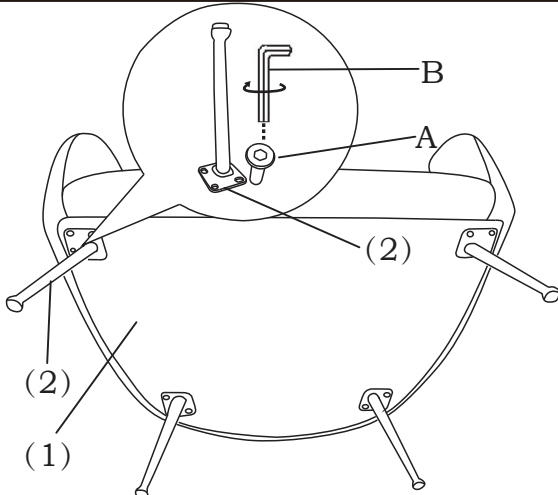
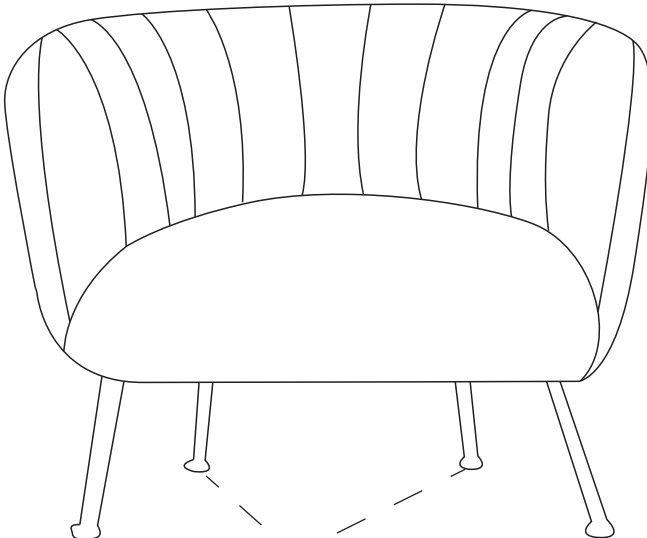


ITEM NAME/ NOM D'ITEM: DECO ACCENT CHAIR		
ITEM#/NO.ITEM: 101851/101852/111088		
PARTS LIST/LISTE DES PIÈCES		
(1)	(2)	(3)
 x1	 x4	A.  M8x30mm x12 B.  M6 x1
ASSEMBLY INSTRUCTIONS/ INSTRUCTIONS D'ASSEMBLAGE		
I 	II 	
III  Please use the attached adjustable footglides to level the chair on an uneven surface.  Assembled		