



INSTRUCTION MANUAL

Dining Table Set with Bench

Ver. 3 SKY4588



As shoppers, we're always trying to find the perfect balance between quality & value. At BCP, we believe we've achieved that. Our diverse catalog of everyday essentials is tailored especially to our customers & guaranteed to hit that sweet spot of high quality & low price.

Always.

(!) NOTICE

Please retain these instructions for future reference.

- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Improper installation may cause damage to the product.
- · Product is intended for indoor use only.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- To wipe down the furniture, use a damp cloth. Then, wipe it down once more with a dry cloth.
- · Be aware that extra hardware may be included.

TOOLS REQUIRED





BENCH

CAPACITY



CHAIR

CAPACITY



TABLE

CAPACITY





1 PERSON UP TO 60 MIN. ASSEMBLY ASSEMBLY

HARDWARE












PARTS

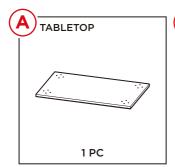



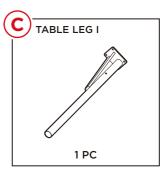

PARTS

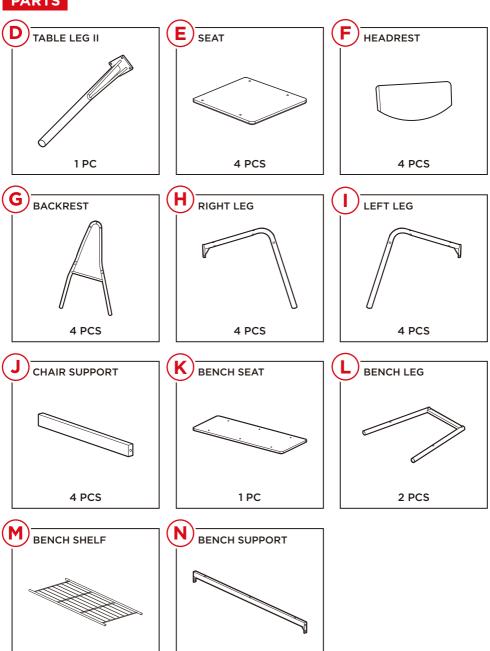


2 PCS

1 PC


PRODUCT ASSEMBLY

1

Assemble the table frame.

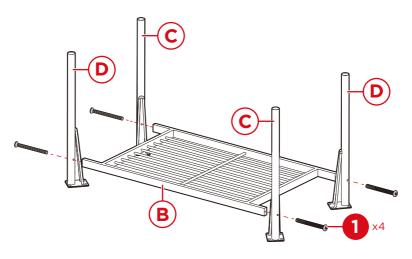


Attach the table frame to part A tabletop with sixteen part 4 screw.

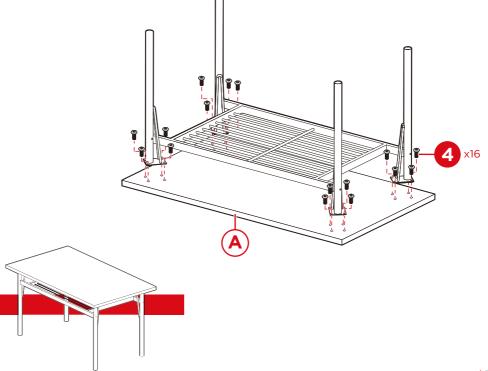


PRODUCT ASSEMBLY

3

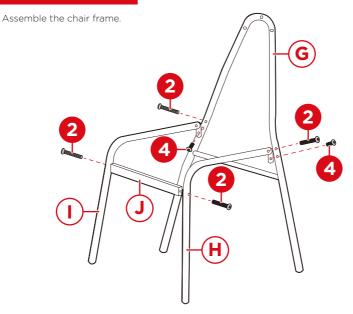

4


Attach part F headrest and part E seat to the chair frame with seven part 3 screws. Repeat steps to assmble the remaining chairs.

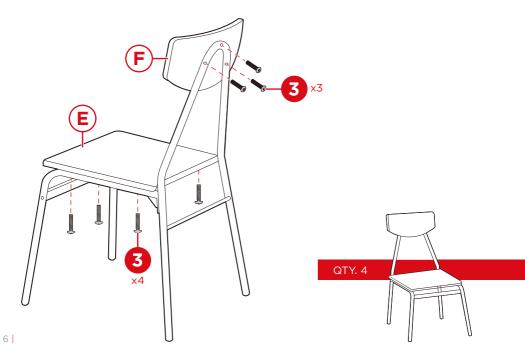


PRODUCT ASSEMBLY

5

Assemble the bench frame.

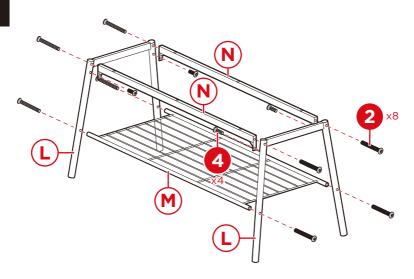

Attach assembled bench frame to part K bench seat with six part 2 screws.

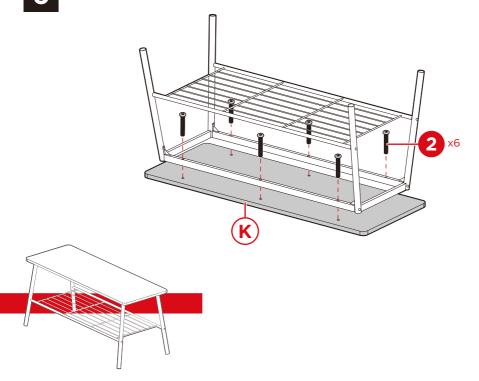



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com











Chat Support

Product Inquiry

Orders FAC

roduct Assembly Return

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

△WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.