 
 

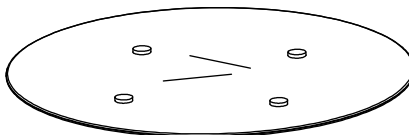 
 
 
 


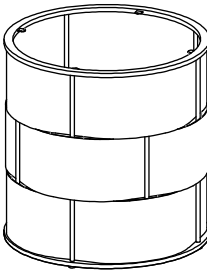


# ASSEMBLY INSTRUCTION

## DRUM SHAPE DINING TABLE
 
<b>A</b>	Metal Base	<b>B</b>	Round Pedestal W / Cross Bar	<b>C</b>	Mirror	<b>D</b>	Glass Top		
									
1pc		1pc		1pc		1pc			
<b>E</b>	Screw 1/4"x1/2"	<b>F</b>	Screw 1/4"x3/4"	<b>G</b>	Leveler	<b>H</b>	Mirror Pad	<b>I</b>	Allen Wrench
									
4pcs		4pcs		4pcs		4pcs		1pc	

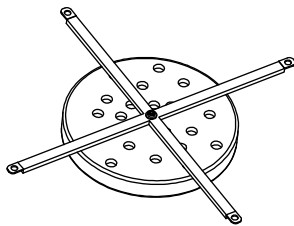

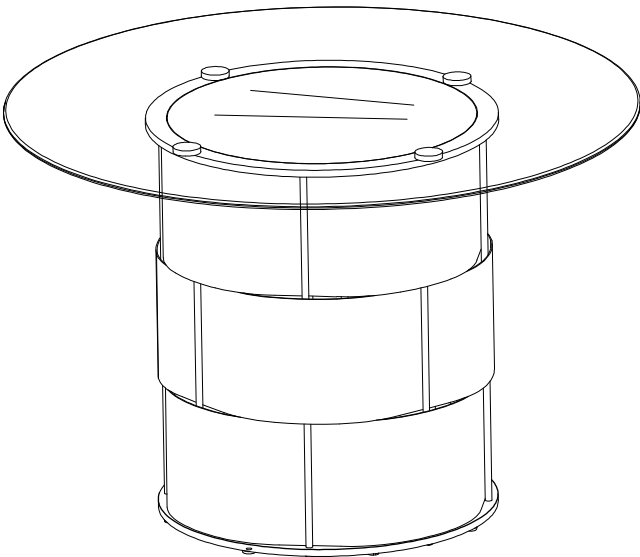
This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**1**

 
Unit assembly should begin with parts turned upside down for Step 1.

Attach metal base (A) to round pedestal w/ cross bar (B) using screw (E) and allen wrench (I).

Then attach leveler (G) to the metal base (A) as shown.

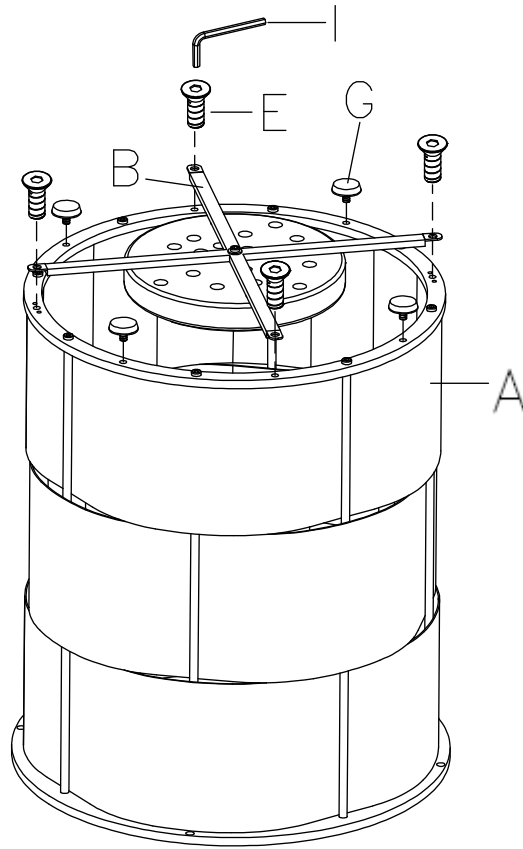
**2**

 Turn the assembled metal base (A) upright. Then, put mirror pad (H) onto metal base (A) before placing mirror (C) as shown below.

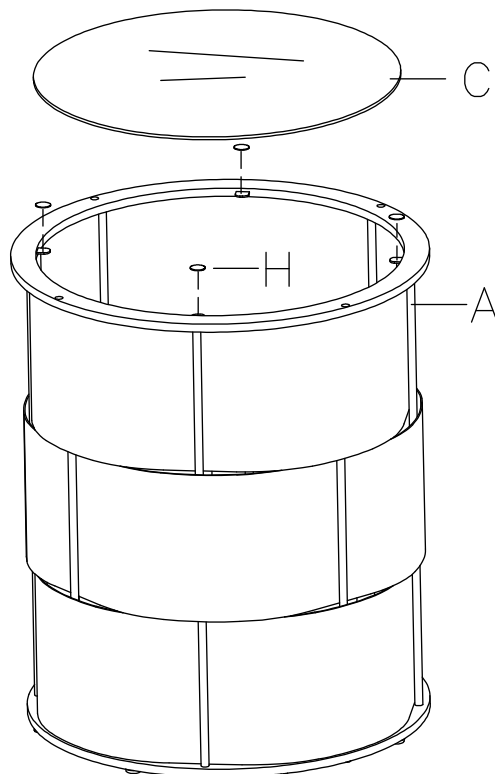

**3**

 Carefully attach glass top (D) to metal base (A) using screw (F) and allen wrench (I).  
Your dining table assembly is now complete.

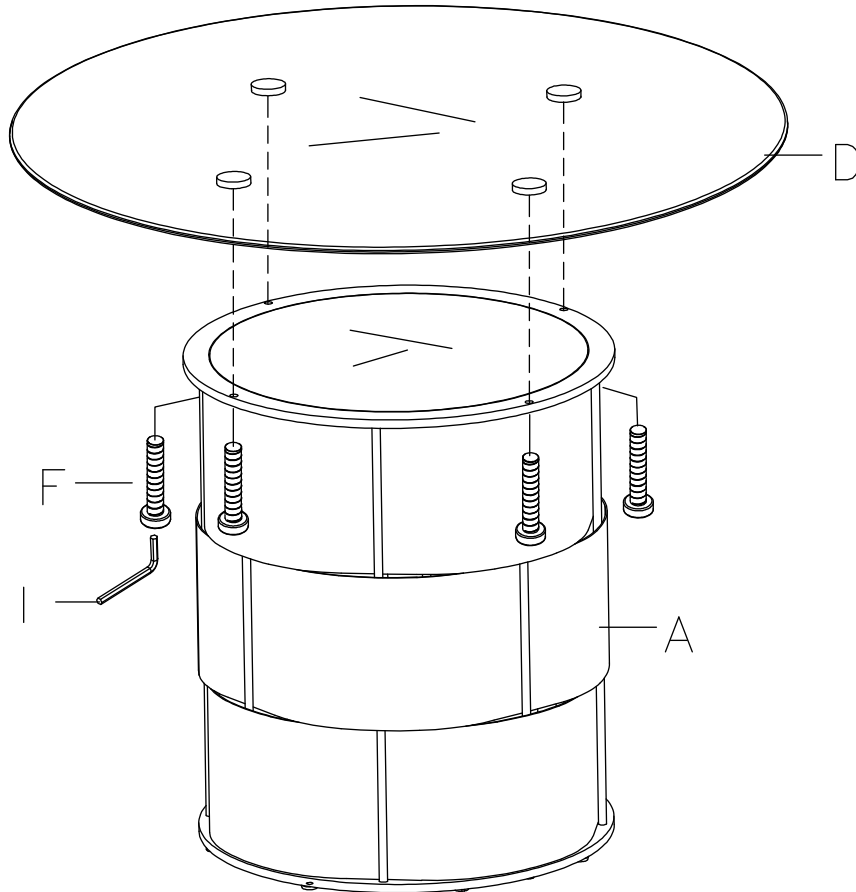

---

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

 


# INSPIRE

## ASSEMBLY INSTRUCTION


### WAVE BACK PARSON CHAIR

**A** Chair Back

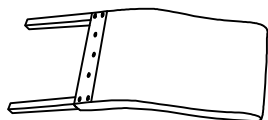


1pc

 **B** Seat

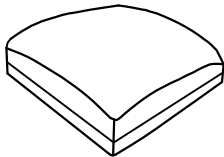

1pc

 **C** Front Leg




2pcs

**D** Lock Washer




10pcs

 **E** Flat Washer




10pcs

 **F** Bolt  
5/16"x3-1/2"




4pcs

 **G** Bolt  
5/16"x2"



2pcs

 **H** Bolt  
5/16"x2-1/4"




4pcs

**I** Allen Wrench



 
1pc

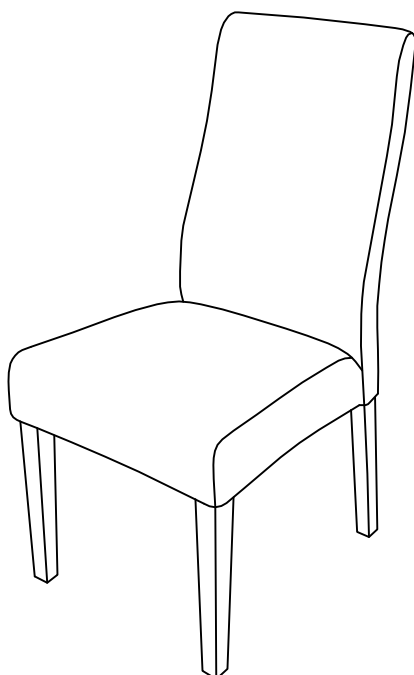


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

**1**

 Put the seat (B) on a smooth flat surface, attached one front leg (C) to the seat (B) use bolt (H), lock washer (D) and flat washer (E) on both of hole of seat. Turn the allen wrench (I) in bolt (H). But not too tight.

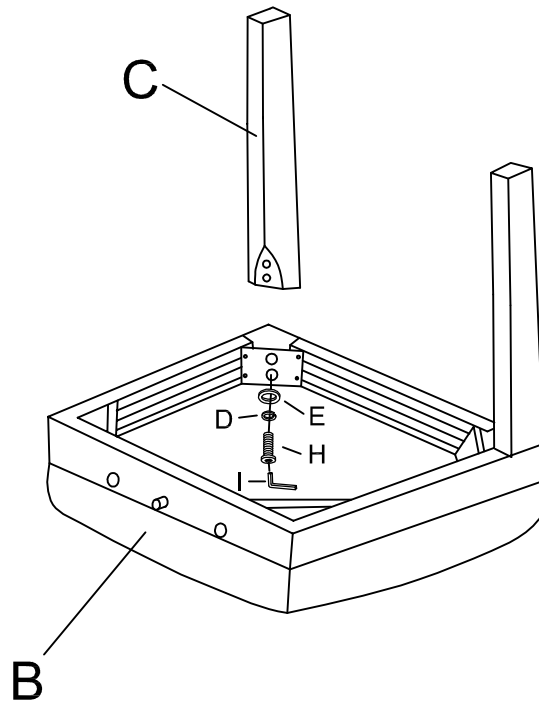**2**

 
Put chair back (A) on a smooth flat surface, attached the seat (B) the chair back (A) use the bolt (F), lock washer (D), flat washer (E) in both of hole of seat (B) and chair back (A), turn the allen wrench (I) in bolt (F). But not too tight.

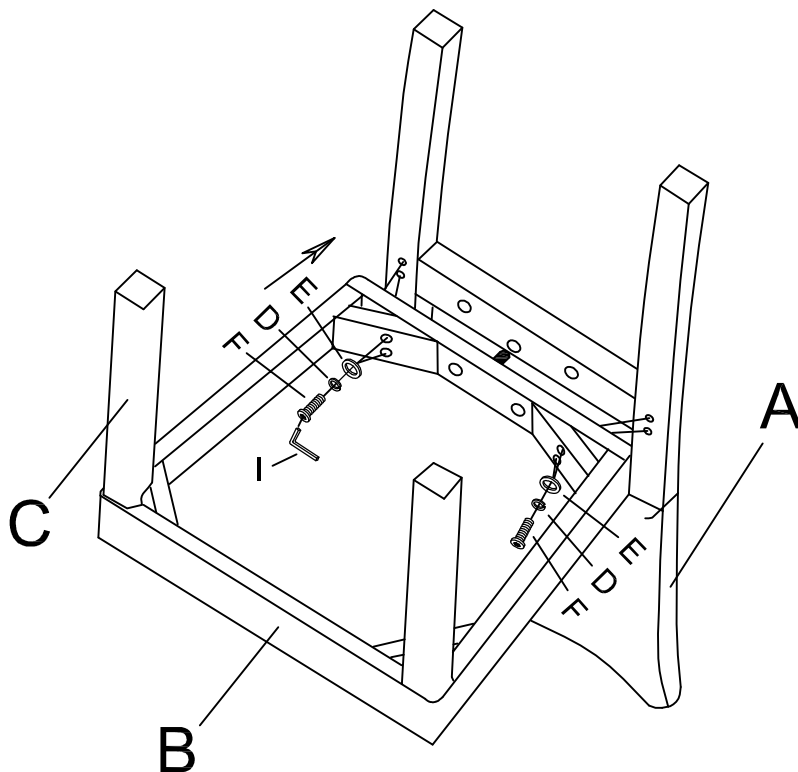

---

**3**

 Use the bolt (G), lock washer (D), flat washer (E) in both of hole of seat (B) and chair back (A), turn the allen wrench (I) to tighten the bolt (G).

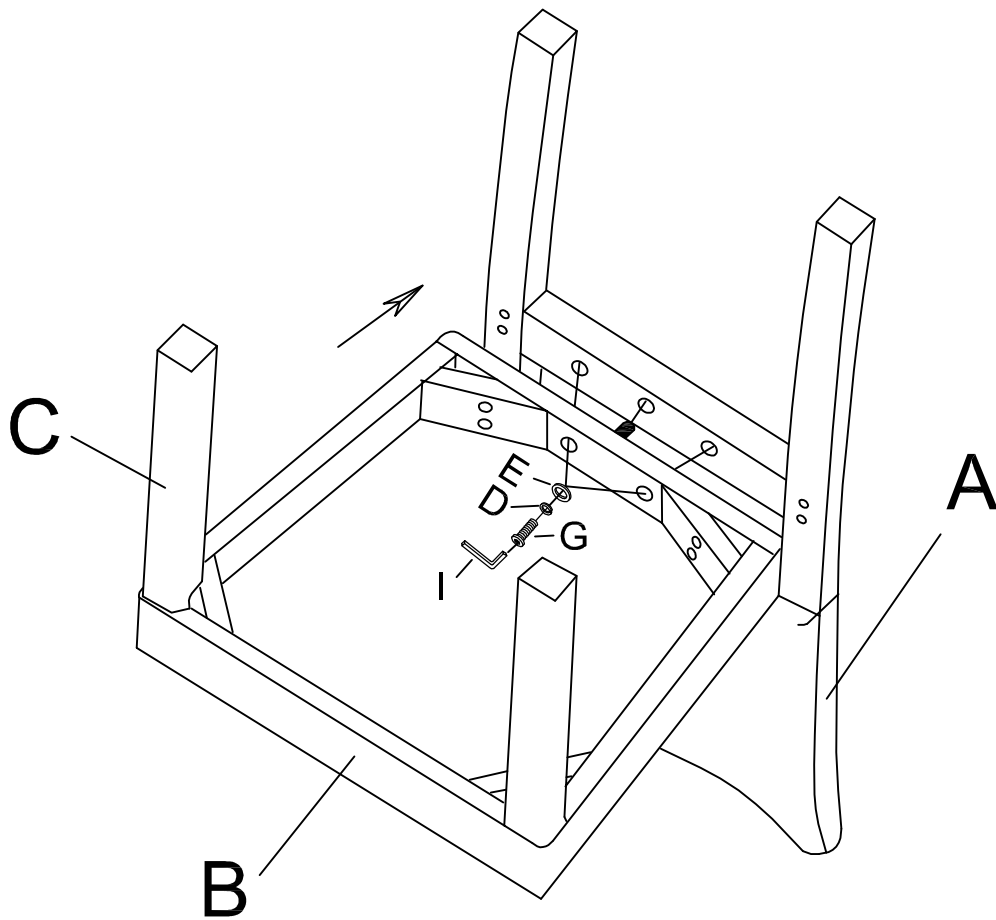

---

### Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.