


10x10ft Deluxe One Button Pop-Up **Canopy With Sidewall**

SKY7908 + SKY7909 + SKY7910 + SKY7911 + SKY7912 + SKY7913 + SKY7914 SKY7915 + SKY7916 + SKY7917 + SKY7918 + SKY7919 + SKY7920 + SKY7921

SKY7922 + SKY7923 + SKY7924 + SKY7925 + SKY7926 + SKY7927 + SKY7928 SKY9659 + SKY9660 + SKY9661 + SKY9662 + SKY9663 + SKY9664 + SKY9665

SKY9666 + SKY9667

PARTS

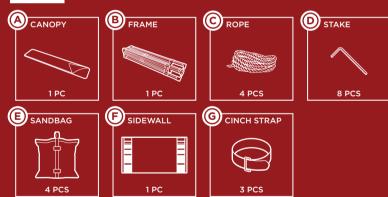


▲ WARNING

- Be careful not to pinch hands or appendages during assembly.
- It is recommended that you use the ropes and stakes to secure the canopy.
- Canopy should not be left up in the rain. This product is not intended to withstand constant rain or inclement weather.
- This product is not intended to withstand periods of extreme/high wind or inclement weather.
- · When not in use, this product should remain closed and stored away to avoid potential damage.
- This product is intended for residential use only.

PRODUCT ASSEMBLY

bag to each part A canopy leg.


1 PERSON ASSEMBLY | UP TO 10 MIN. ASSEMBLY Push the middle button into the pole until it locks. Secure the canopy with the attached adhesive strips. UNLOCK

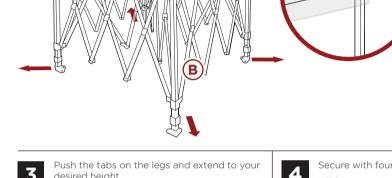


Make sure to secure the corners with the attached adhesive strips.

Drape part A canopy over part B frame.




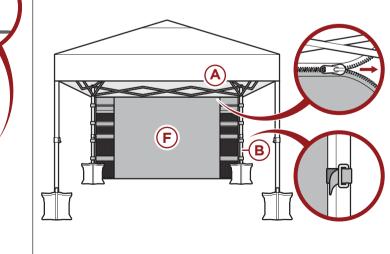


STORAGE

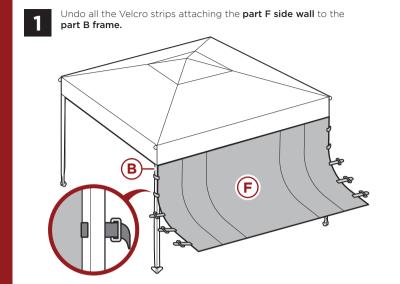

Press the button on each leg to adjust them to their lowest setting.

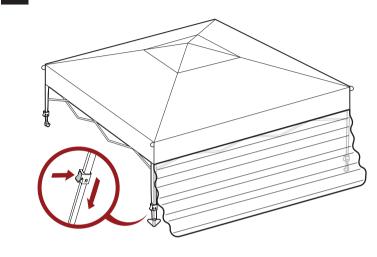

Lower the red sleeve on the central button to release the lock. Pull down the central button mechanism and collapse the frame. Push the legs together.

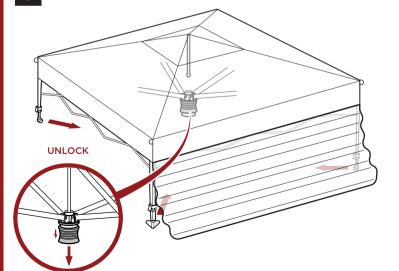

Use three part G cinch straps to compact the frame. Place the compacted assembly into its wheeled carrying case.

