


ASSEMBLY AND INSTALLATION INSTRUCTIONS

PD5027BN / PD5027OBB

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER WHILE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save this instruction.

Hardware Package (included):

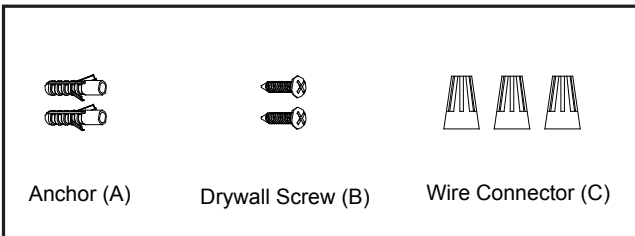

Installation Steps

Turn off the power at fuse or circuit box.

1. Unscrew the set screws from the bar, and attach the canopy and the mounting plate to the ceiling:

a. If the ceiling material is concrete:

Aim the middle hole of the mounting plate at the center of the outlet box. Mark the two setting holes of the mounting plate on the ceiling, drill these two marks, and then thread the wall anchors into the two holes of the ceiling. Thread the wires of the power source through the canopy and the mounting plate. Attach the canopy and the mounting plate to the ceiling by threading the drywall screws (B) through the setting holes of the mounting plate into the wall anchors (A).

b. If the ceiling material is wooden:

Thread the wires of the power source through the canopy and the mounting plate. Attach the canopy and the mounting plate to the ceiling by threading the drywall screws (B) through the setting holes of the mounting plate into the ceiling.

c. If the ceiling material is sheetrock:


Thread the wires of the power source through the canopy and the mounting plate. Attach the canopy and the mounting plate to the ceiling by threading the small steel nails (not supplied) through the setting holes of the mounting plate into the ceiling.

2. Take the proper numbers of the rods from three single pendants which just be dismantled to install.

Rod connections:

- Thread the fixture wire from the glass holder through the down rod, and secure the down rod to the glass holder.
- Thread the fixture wire from the down tube through the middle rod and secure the middle rod with the threaded pipe.
- Thread the fixture wire through the upper rod, and then secure the upper rod with the threaded pipe.
- Thread the fixture wire through the set threaded pipe of the bar and secure the upper rod to the bar.
- Complete the same steps for the other glass holders and rods.

* The height can be adjustable by adding or reducing one or two rod from upper rods and middle rods.

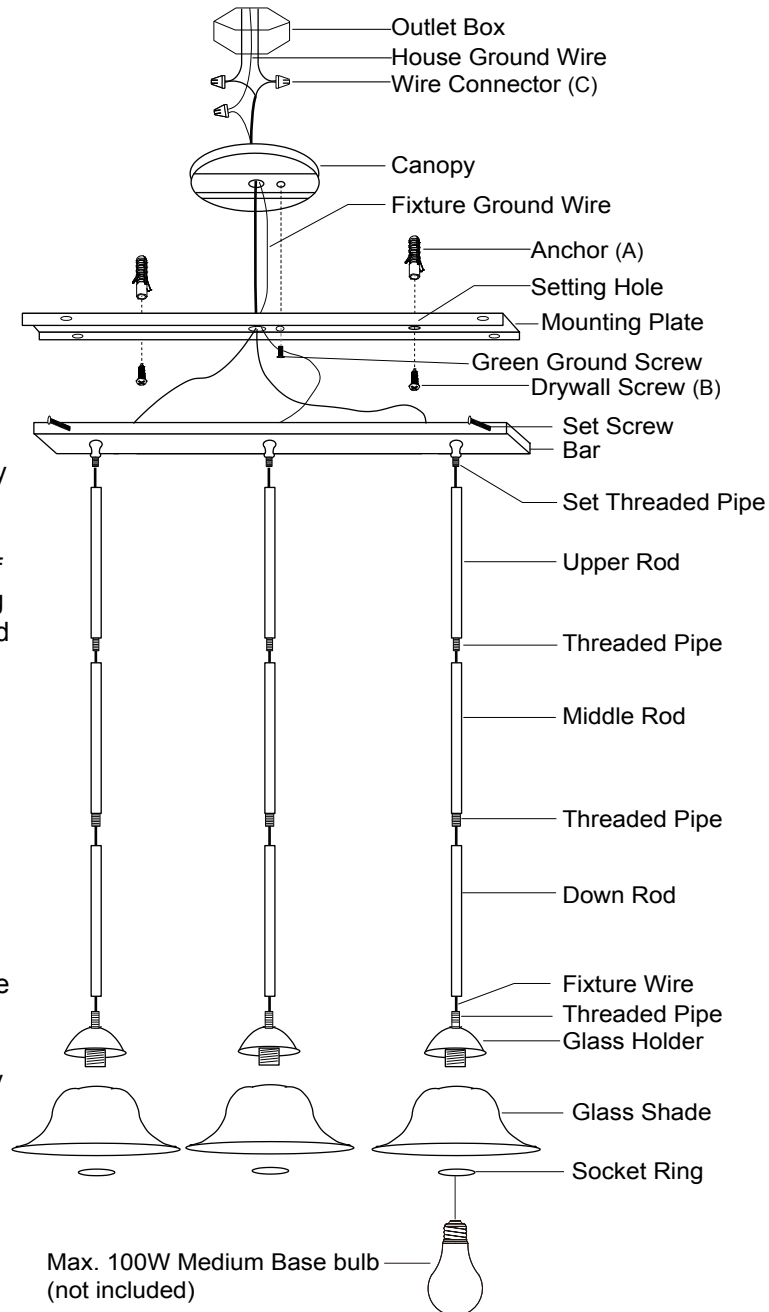


3. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
 - Connect the hot wire (black insulation) from the fixture to the black wire from the power source.
 - Connect the neutral wire (white insulation) from the fixture to the white wire from the power source.
 - Attach the fixture ground wire (bare wire) to the mounting plate with green ground screw, then depending on local code, connect it to the house ground wire with the wire connector (C).
 Carefully put all of the wires back into the outlet box.
4. Attach the bar to the mounting plate, and secure it with the set screws.
5. Attach the glass shades to the glass holders, then secure them with the socket rings.
6. Install 3 x 100W Max. medium base bulbs (not included). Check relamping label at socket area or packaging for maximum wattage allowed.

Turn on the power at fuse or circuit box.

The following parts are available for reorder if damaged or missing.

Spare Parts List:

 Anchor (A)	 Drywall Screw (B)	 Wire Connector (C)	 Mounting Hardware 6662MM (1 SET)	 9-1/2" Rod 3267RD for PD5027BN 3268RD for PD5027OBB	 Glass Shade 60087A
----------------	-----------------------	------------------------	-----------------------------------------	---------------------------------------------------------------	---------------------------

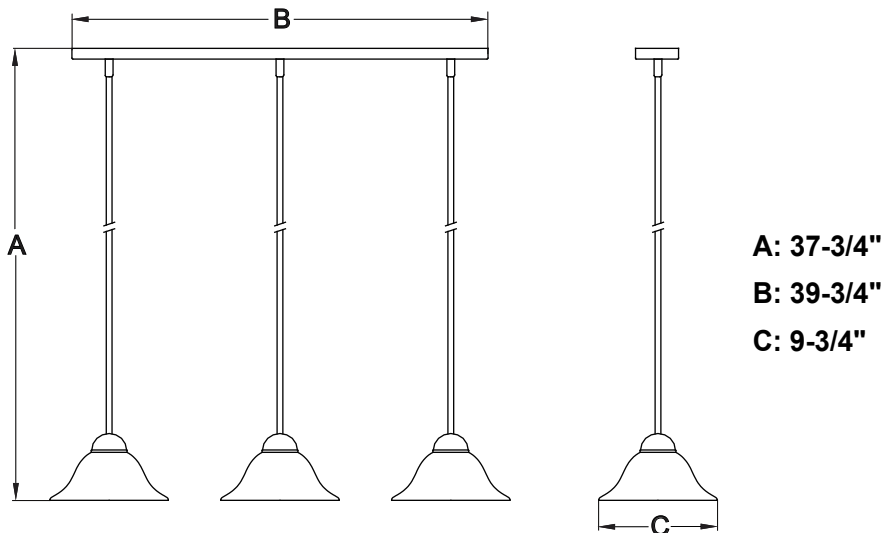

1 Year Warranty

Vaxcel warrants all of our products against defects in workmanship and finishes for one year following the date of shipment.

Exclusions: This warranty does not include the failure of products from extreme acts of nature; environmental conditions not suited for the products intended use; operation in temperatures outside of the range specified in the instruction manual; usage with improper power supply, power surges or dips. For coastal locations, some corrosion is considered normal for the environment.

Vaxcel reserves the right to repair, replace or issue a credit for any properly installed product, provided it is returned per RMA instruction. This warranty is limited to the cost of the product only and does not extend to transportation, installation or replacement costs.

How can warranty service be obtained?
info@vaxcel.com
 1-800-482-9235