

PREP YOUR MAXX

1

Remove all plastic, tape and stickers from inside and outside the MAXX, and from the french doors.

2

Remove all stickers from accessories.

3

Prep the cavity by searing at 500°F:

a

Press START/STOP [A] to turn on your MAXX.

b

Press the AIR FRY [B] button, and turn the knob [C] to select the STEAK [D] setting.

c

Press the knob [C] to select. Then, turn the knob [C] to the right to increase the time to 20 minutes, and press the knob [C] again.

d

Press START/STOP [A] to begin the cycle. It is normal if some smoke or smell emanates from the appliance as some packing oil may remain after production.

MIN

°F

AIR FRY CHICKEN FISH PIES SHRIMP STEAK WINGS

BACON EGGS CORN FRIES VEGETABLES DEFPROST REHEAT

BAKE BROIL PASTRY PIZZA PROOF ROAST TOAST

B

AIR FRY

OVEN

A

START / STOP

C

MAXX gets hot when used for the first time. Wear oven mitts when handling. See page 8 of the manual to learn more.

GET TO KNOW YOUR MAXX

MEET YOUR ACCESSORIES

A



Crumb tray

B



Baking tray

C



Air rack

D



Air frying basket

E



Rotisserie spit and forks

F



Rotisserie handle

G



Rack handle

See page 14 of the manual for more details.

LEARN WHERE TO USE THEM

Cooking levels

4

3

2

1

0

D

D

B C

B C

A

QUICK COOKING GUIDE

							
	CHICKEN BREAST	CHICKEN THIGHS (BONE IN)	FROZEN CHICKEN NUGGETS	MEATLOAF (BEEF)	FISH	FROZEN PIZZA (THIN CRUST)	CHOCOLATE CHIP COOKIES
Time	15-20 min	15-20 min	6-7 mins	35-40 mins	6-7 mins	10 mins	10 mins
Temp.	400°F	450°F	360°F	400°F	360°F	400°F	360°F
Setting	Air Fry	Air Fry	Air Fry	Air Fry or Bake	Air Fry	Bake (Pizza)	Bake
Accessory	Air Frying Basket	Air Frying Basket	Air Frying Basket	Baking tray	Air Frying Basket	Air Rack	Baking tray
Level	Level 3	Level 3	Level 3	Level 1	Level 3	Level 2	Level 2

See page 22 of the manual for a complete cooking guide.

PRO TIP: Customize presets while cooking by pressing the knob once to adjust time, and again to adjust temperature. The MAXX will automatically accept changes after 3 seconds.

V.210408

CONNECT WITH US

CLAIM YOUR WARRANTY

To register your product, simply complete the included form, visit [Kalorik.com/register](https://www.kalorik.com/register) or scan the QR code below.

EXCITED TO THE MAXX?

If you're enjoying the benefits of fast, healthy cooking, and delicious MAXX-made meals, share your love by leaving us a review!

NOT DELIGHTED AS YOU'D HOPED?

If you're unhappy with your product, or have any comments or concerns, reach out to our customer happiness team anytime at service@kalorik.com or 1-888-KALORIK. We will make it right!

SPREAD THE WORD

Follow us on social media @kalorik for new recipes and tips from the pros! Share your culinary creations with the hashtag #MAXXMADE