

Description of Parts



1. Revo Pet Plus+ Cordless main unit
2. Power button
3. Boost button
4. Charging base
5. Charging port
6. HEPA filter
7. Filter cone
8. Crevice tool
9. Upholstery tool
10. Brush tool
11. Dust container
12. Dust container front release button
13. Dust container rear release button(s)
14. Dust container cover
15. Indicator light
16. Filter cleaning brush
17. Pet tool
18. Pet tool release button
19. Brush bar
20. Brush bar release tab

Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed. Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should be supervised to ensure that

they do not play with the appliance. Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury. This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Do not remove the adaptor from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not use the adaptor to recharge non-rechargeable batteries or any other appliance. Do not use the appliance for anything other than its intended use.

Take care when equipping accessories with rotating parts as this could cause entrapment. Switch off the appliance, disconnect it from the mains power supply and allow to cool fully before changing or fitting accessories and before cleaning or user maintenance. Use of an extension cord with the appliance is not recommended.

Only use the appliance with the power supply unit provided.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Battery Safety

The supply terminals are not to be short-circuited.

In the event of a battery pack leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash

the affected area with copious amounts of water and seek medical advice.

Secondary cells and batteries need to be charged before use. After extended periods of storage, it may be necessary to charge and discharge the battery pack several times to obtain maximum performance.

Do not leave a battery pack on prolonged charge when not in use.

Do not use any charger other than that specifically provided for use with the product.

Do not use any cell or battery which is not designed for use with the product.

Keep batteries out of the reach of children.

Do not crush, puncture, dismantle or otherwise damage battery packs.

Do not store above 60 °C.

Avoid storage in direct sunlight.

Do not expose battery packs to heat or fire as they may explode.

Do not subject battery packs to mechanical shock.

Do not dispose of exhausted battery packs in household waste.

Once the batteries have been exhausted, dispose of the product at a local recycling station. Contact the local government offices for further details.

This product is fitted with an 11.1 V 2200 mAh Li-ion battery pack (non-removable)

Care and Maintenance

Keep the HEPA filter clean after every removal of the dust container.

Dos and Don'ts

DO:

Check that the HEPA filter is kept clear of obstruction.

Make sure that the dust container and HEPA filter are cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.

DON'T:

- Use the vacuum cleaner without the HEPA filter or dust container in position.
- Use the vacuum cleaner to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.
- Use the vacuum cleaner to pick up water or any other liquid, as this poses risk of an electric shock.

Instructions for Use

Before First Use

Before using the vacuum cleaner for the first time, clean it with a soft, damp cloth and dry thoroughly.
Do not immerse the vacuum cleaner in water or any other liquid.

Charging the Revo Pet Plus+ Cordless

Before first use, the vacuum cleaner must be charged for approx. 4-5 hours. Subsequent charging times will vary dependent on use.
STEP 1: Check that the vacuum cleaner is switched off.
STEP 2: Secure the vacuum cleaner into position in the charging base and connect the mains power adaptor to the charging port.
STEP 3: Plug the mains power adaptor into the mains power supply; the indicator light will flash red during charging. Once the battery is fully charged, the indicator light will stop flashing and turn blue.

NOTE: Whilst charging, the vacuum cleaner main unit may become warm. Always make sure that the mains power adaptor is unplugged from the mains power supply once the battery is fully charged.

Using the Revo Pet Plus+ Cordless

The crevice tool is ideal for cleaning radiators, corners, recesses and other hard-to-reach areas. The upholstery and brush tools are useful for removing dust and dirt from folds in fabrics, curtains and upholstery, as well as from shelves, cupboards and windowsills.
STEP 1: If required, fit the selected attachment by firmly inserting it into the air inlet. The brush tool does not insert into the air inlet directly; it must first be attached to the crevice tool.

STEP 2: Turn on the vacuum cleaner by pressing the power button. Press the boost button to use the maximum power setting; the indicator light will illuminate blue. To use the minimum power setting, press the boost button again; the indicator will illuminate red.

NOTE: The indicator light will flash when the battery is running low and needs to be charged.

WARNING: Do not use the vacuum cleaner without the HEPA filter, filter cone and dust container in position.

Fitting the Pet Tool

- STEP 1:** Check that the vacuum cleaner is switched off and remove it from the charging base.
- STEP 2:** Remove the dust container cap by pushing the dust container front release button and sliding the cap away from the unit.
- STEP 3:** Fit the pet tool by first aligning the metal pins on the pet tool with the inlet holes on the main unit. Slide the pet tool onto the main unit and firmly insert into place.

WARNING: Do not use the pet tool on pets.

Emptying the Dust Container

To maintain optimum performance, the dust container must be emptied regularly. If there is a reduction in suction power, empty the dust container.

Cleaning the HEPA Filter and Filter Cone

The HEPA filter and filter cone should be thoroughly cleaned at least once every two weeks.

Always clean the HEPA filter and filter cone with the brush provided and only when the dust container is empty.

For further cleaning instructions, see the online instruction manual.

Storage

The vacuum cleaner must be cool, clean and dry before storing in a cool, dry place.

Store the mains power adaptor separately, checking that it is not bent at the connections, as this could cause damage to the wires.

Specifications

Product code: BEL01111
Battery: 11.1 V \equiv 2200 mAh Li-ion (included)
Adaptor input: 100-240 V \sim 50/60 Hz 0.4 A
Adaptor output: 14 V \equiv 0.5 A 7.0 W
Average active efficiency: 81.38 %
Efficiency at low load (10 %): 71.43 %
No load power consumption: 0.066 W
Dust container capacity: 100 ml

If this product does not reach you in an acceptable condition please contact our Customer Services Department at www.beldray.com. Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Go to www.beldray.com/manuals.html and search BEL01111 to access the instruction manual for your product.

*To be eligible for the extended guarantee, go to

guarantee.upgs.com/beldray and register your product within 30 days of purchase.

Rechargeable batteries are not included in the extended manufacturer's guarantee (after the first 12 months).

Disposal of Waste Batteries and Electrical and Electronic Equipment

This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



FULL INSTRUCTION MANUAL AT
www.beldray.com/manuals.html
PRODUCT CODE: **BEL01111**

Beldray^{est 1872}
REVO
PET PLUS⁺ CORDLESS
QUICK START GUIDE

Find us on 

www.facebook.com/Beldray



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.
MADE IN CHINA.
www.beldray.com

©Beldray trademark. All rights reserved

CD190321/MD200622/V2