 




BEST CHOICE
PRODUCTS

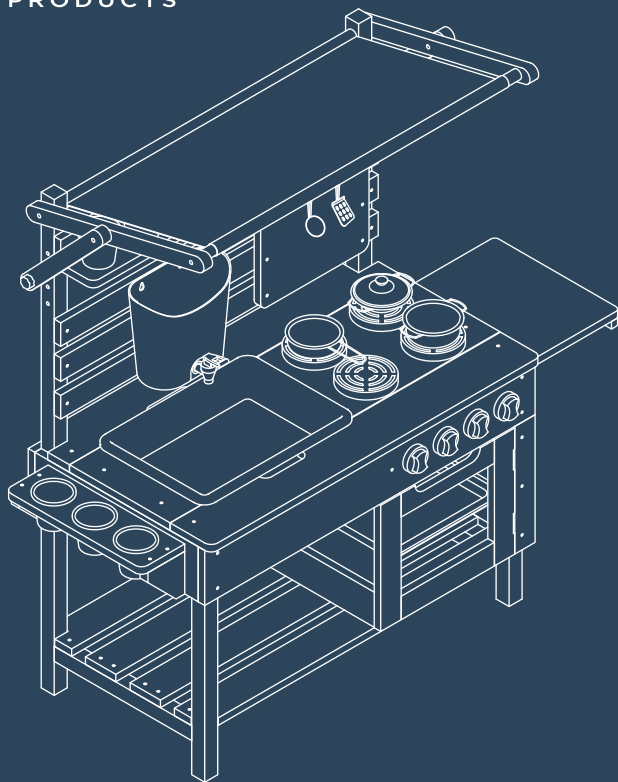

INSTRUCTION MANUAL

Pretend Play Outdoor
Mud Kitchen

⚠ WARNING
ADULT ASSEMBLY REQUIRED

⚠ WARNING
CHOKING HAZARD - Small parts.
Not for children under 3 years old.

⚠ NOTICE | Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not fully tighten screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be aware that moving parts can injure, crush, and cut.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- This product is intended for residential use only.

TOOLS REQUIRED



PHILLIPS
SCREWDRIVER



POWER DRILL
(RECOMMENDED)



3 YEARS
OLD & UP

 
 
 
 
 
 
 
 
 
 
 
 


 
 
 
 
1 PERSON
ASSEMBLY












UP TO 45 MIN.
ASSEMBLY













HARDWARE & ACCESSORIES

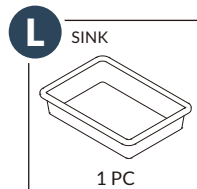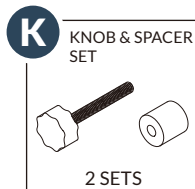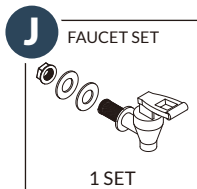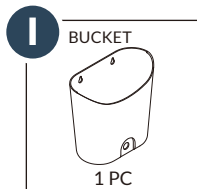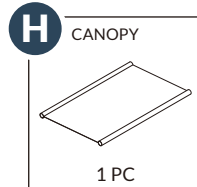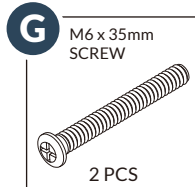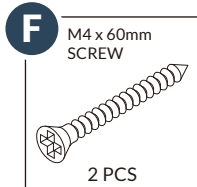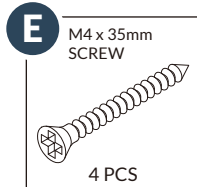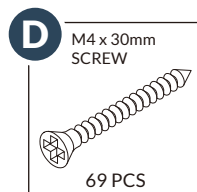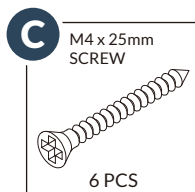
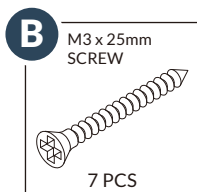
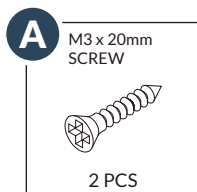


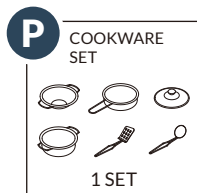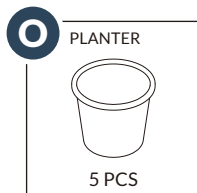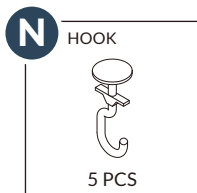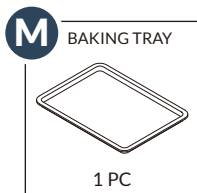

PARTS

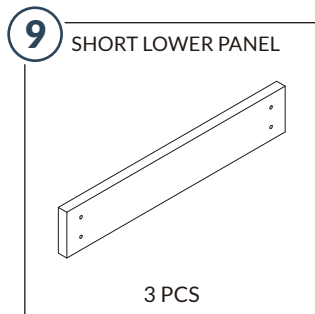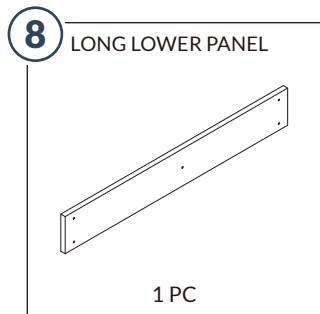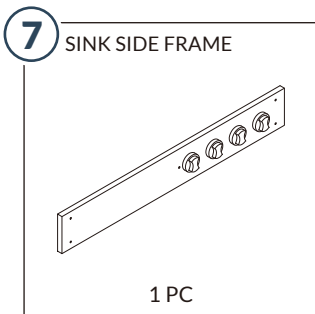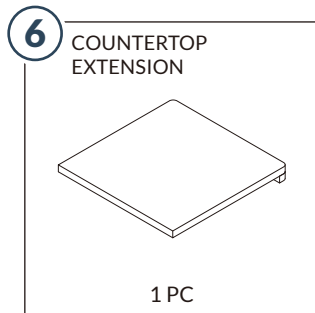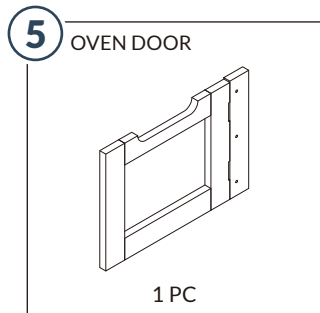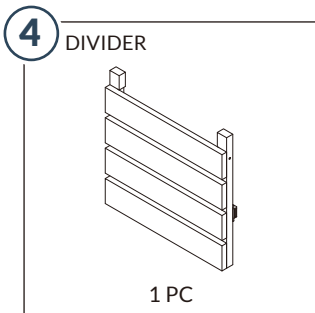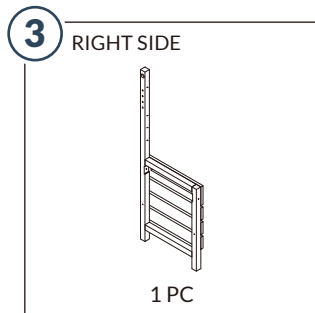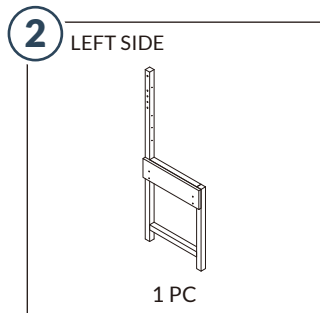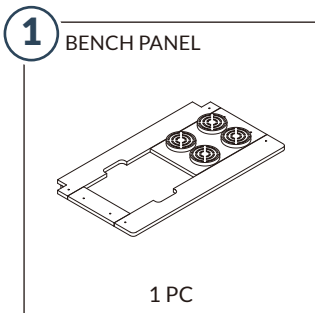         


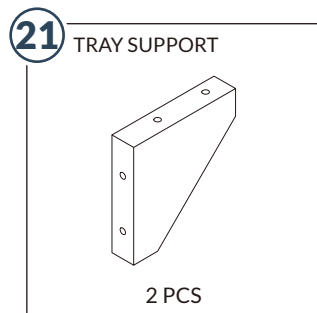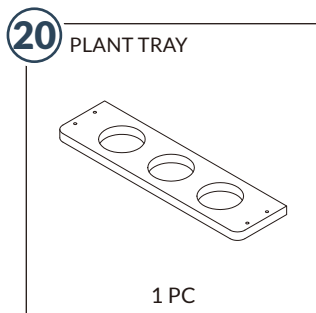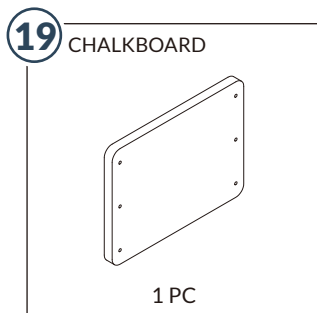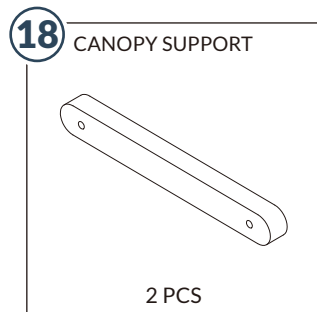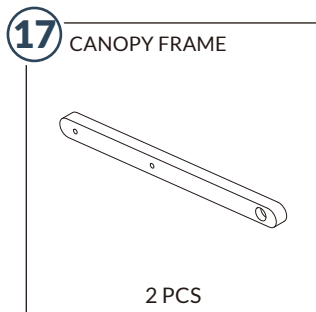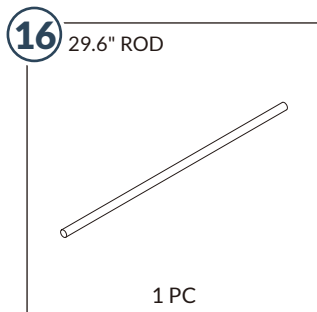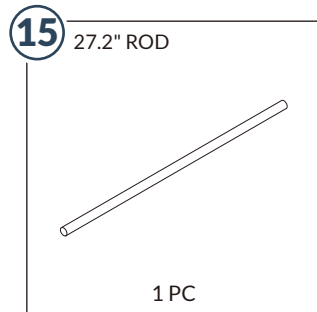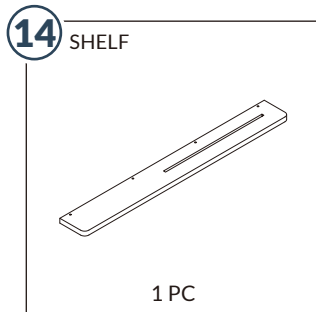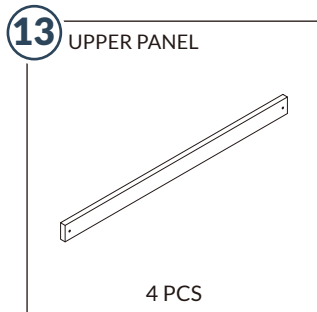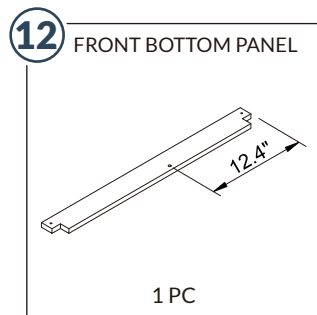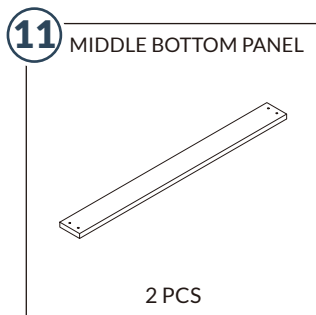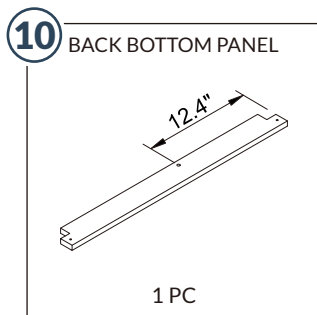            

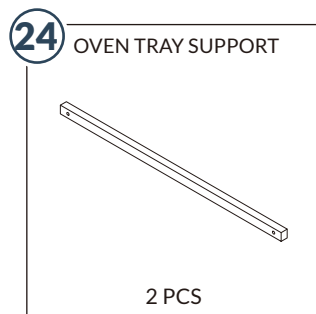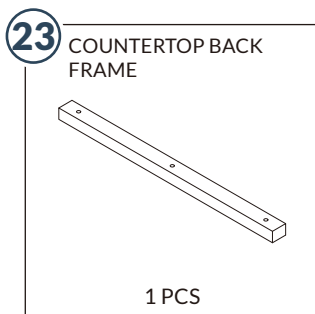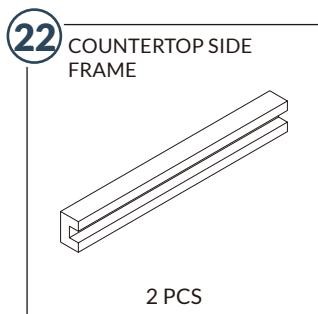   


PRODUCT ASSEMBLY


- 1** | Attach two **part 21** tray supports to the **part 20** plant tray with four **part D** screws.
 Attach the assembled plant tray to **part 2** left side with four **part D** screws.

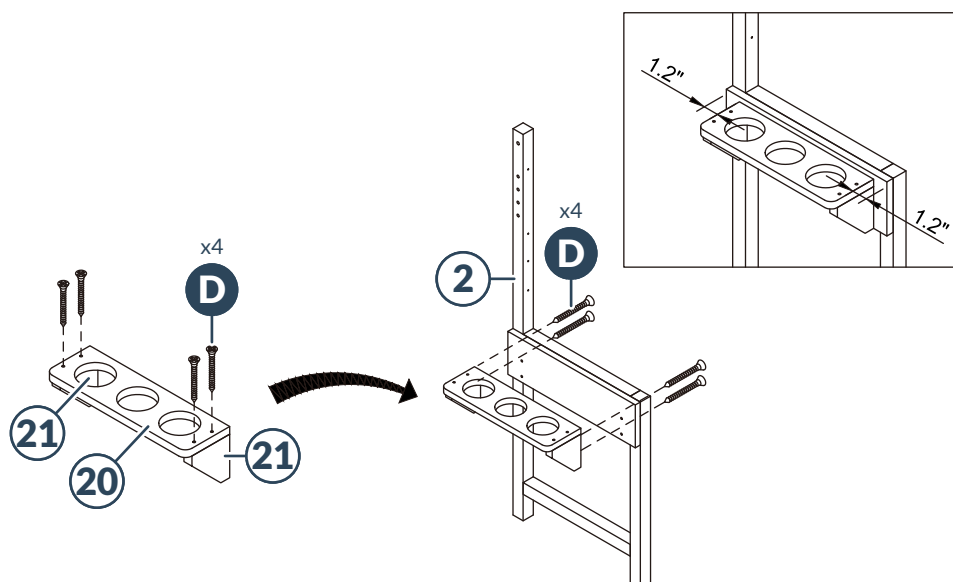 


- 2** | Slide **part 15&16** rods into **part H** canopy, then attach the assembled canopy between **part 2** left side and **part 3** right side.
Secure the canopy with two **part 17** canopy frames, two **part F** screws, and two **part D** screws.

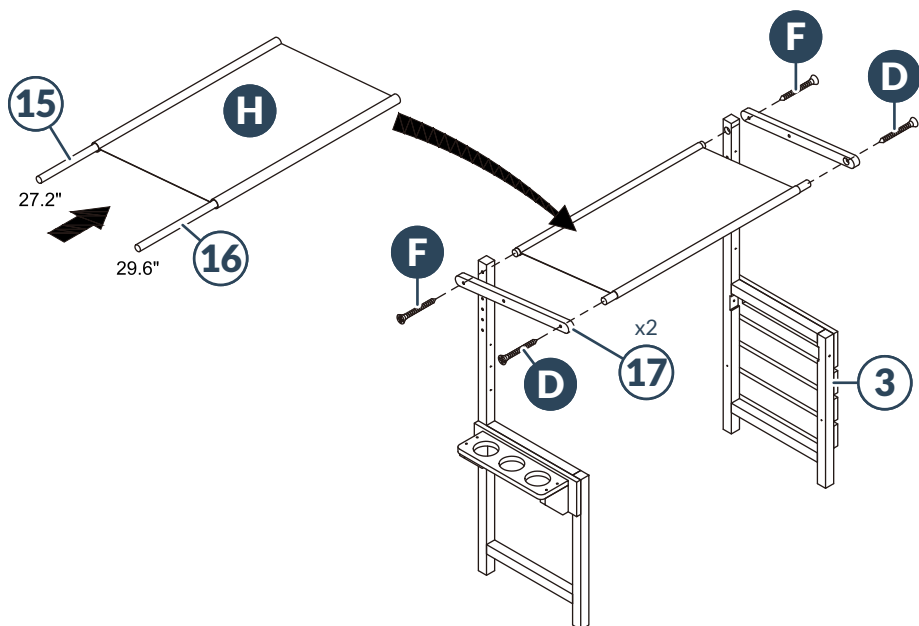 


- 3** | Attach one **part 18** canopy support to **part 2** left side and **part 17** canopy frame with one **part G** screw and one **part K** knob & spacer set.
Repeat the step on **part 3** right side.

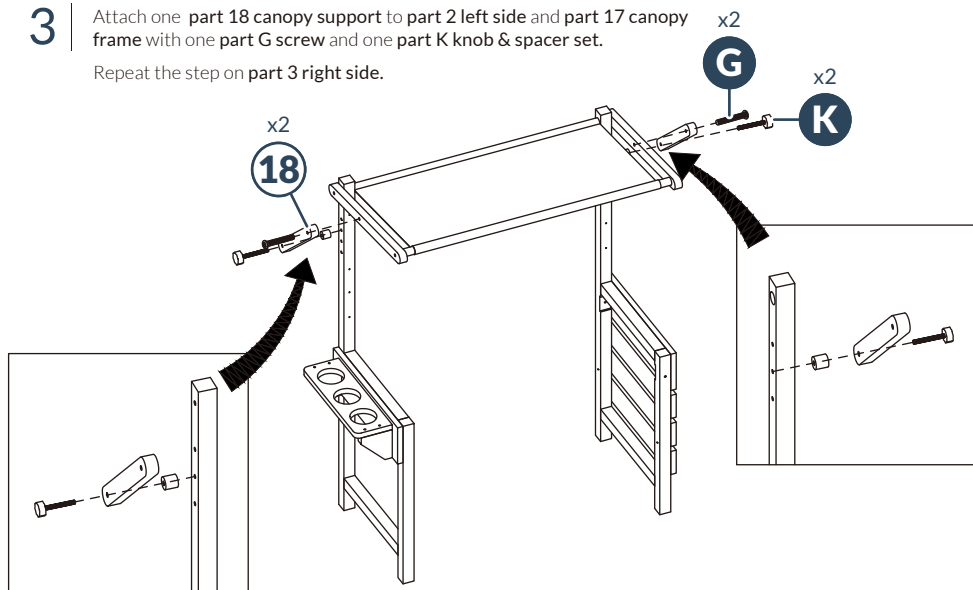 


- 4** | Place the **part 12** front bottom panel, two **part 11** middle bottom panels, and the **part 10** part back bottom panel as shown below.
Secure the bottom panels with twelve **part D** screws.

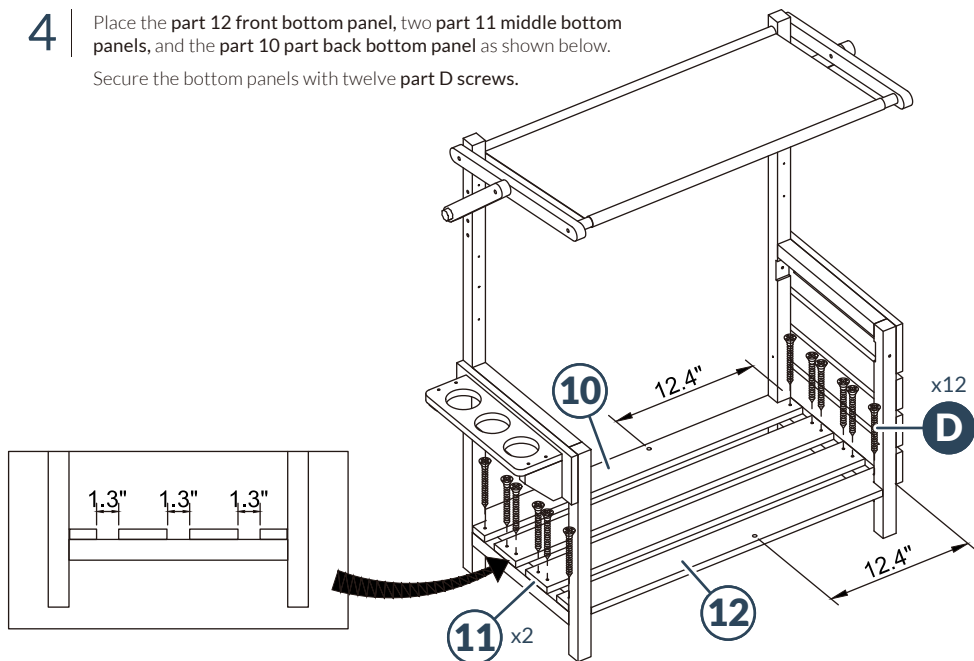 



- 5** | Attach one **part 24** oven tray support to the right side with two **part B** screws.

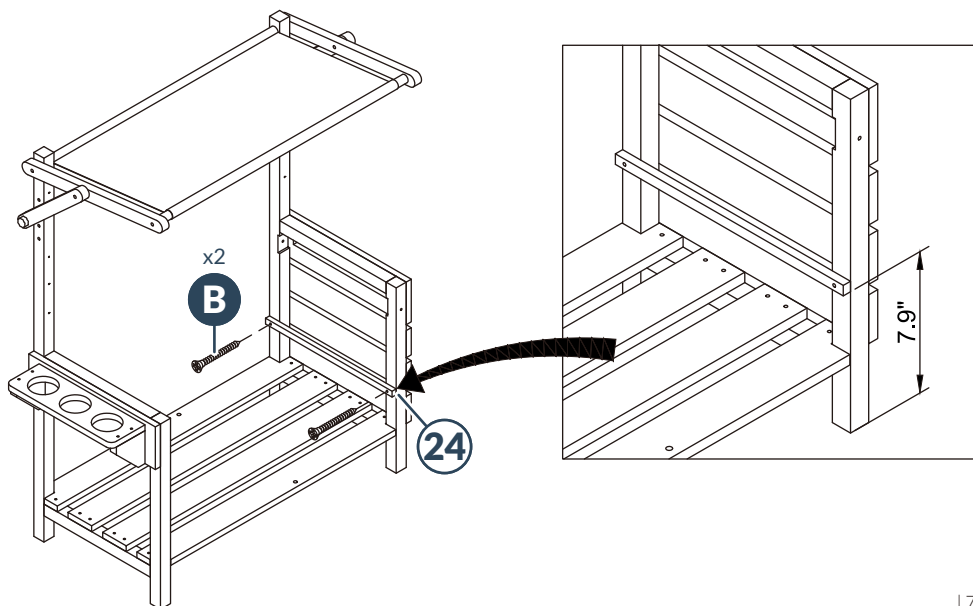 


- 6 | Attach the **part 4 divider** to the bottom panels with two **part D screws**.

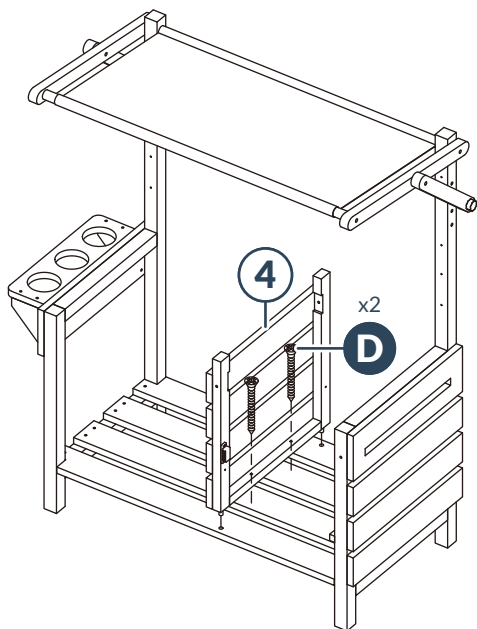 



- 7 | Attach another **part 24 oven tray support** to the divider with two **part B screws**.

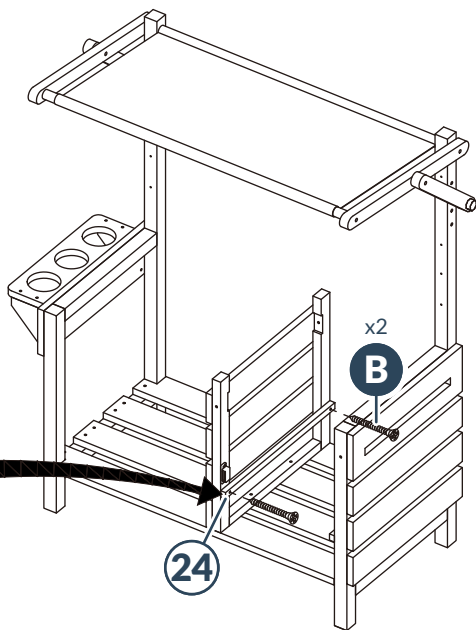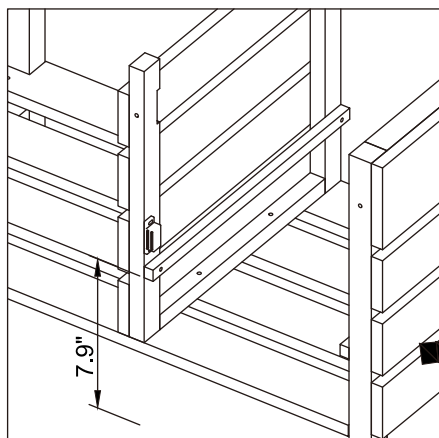  


- 8 | Attach two **part 22** countertop side frames with four **part E** screws.

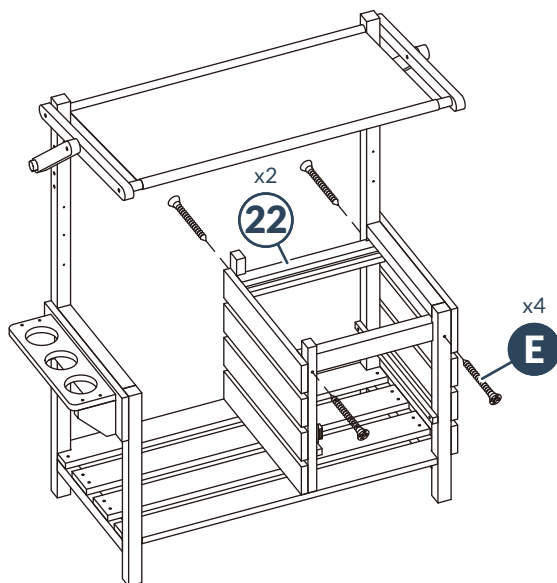 


- 9 | Insert the **part 6** countertop extension between the side frames, then attach the **part 23** countertop back frame with three **part B** screws.

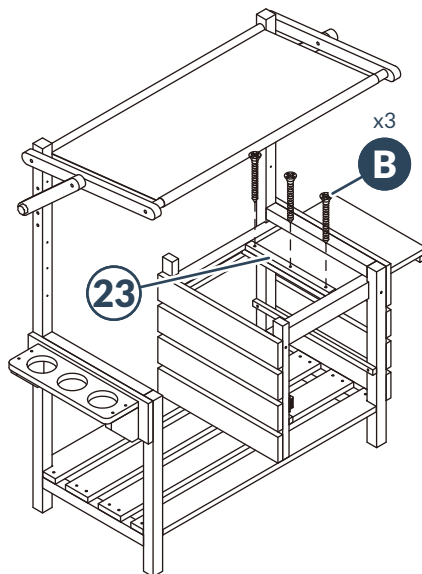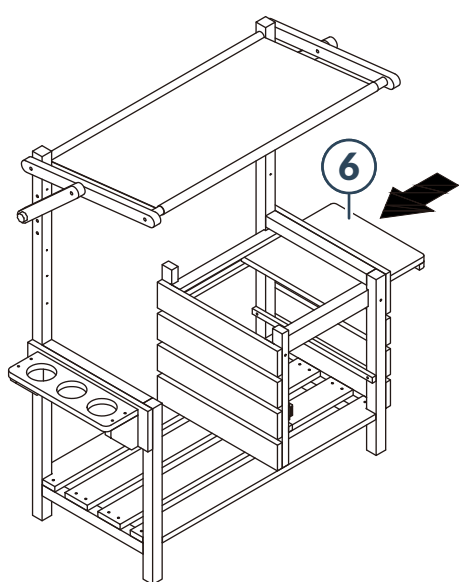  

10 | Attach the **part 7** stove control panel with five **part D** screws,

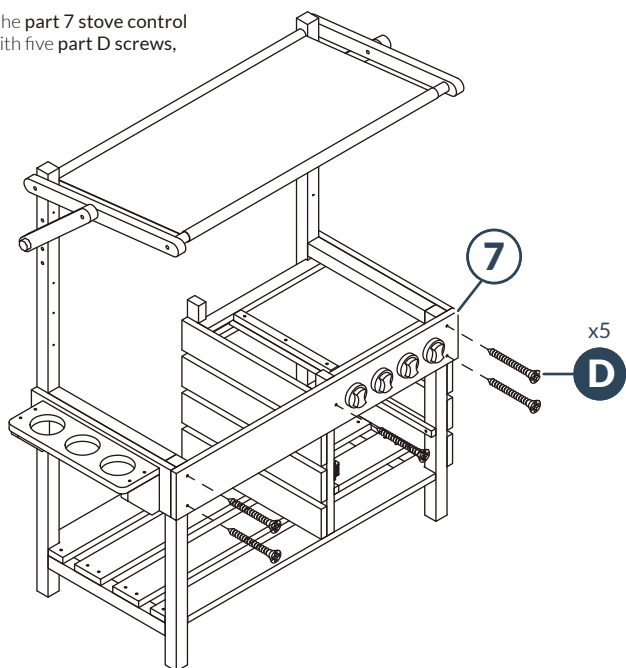 


11 | Attach the **part 5** oven door with three **part D** screws.

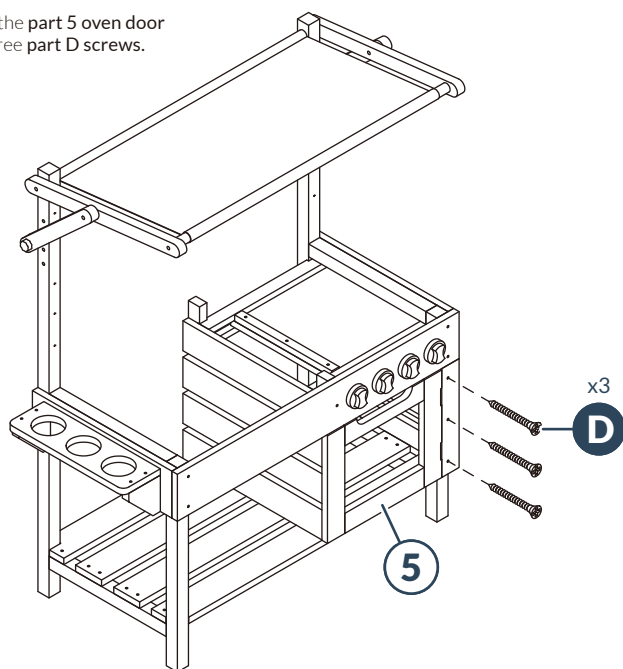 

12


Attach the **part 8** long lower panel with five **part D** screws.

 Attach three **part 9** short lower panels with twelve **part D** screws.

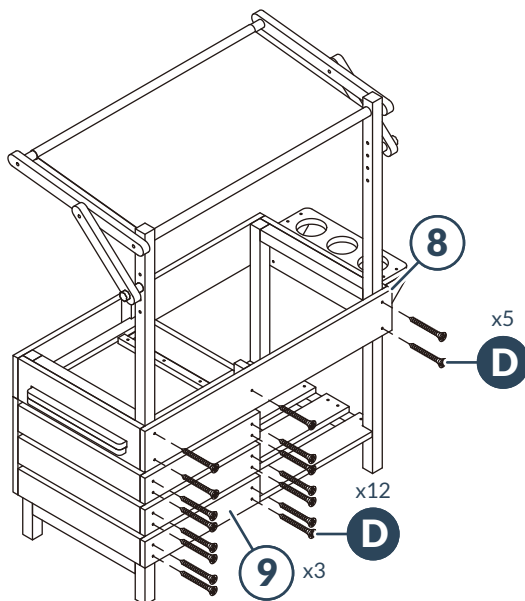


13

 Attach the **part 1** stovetop with eight **part D** screws.

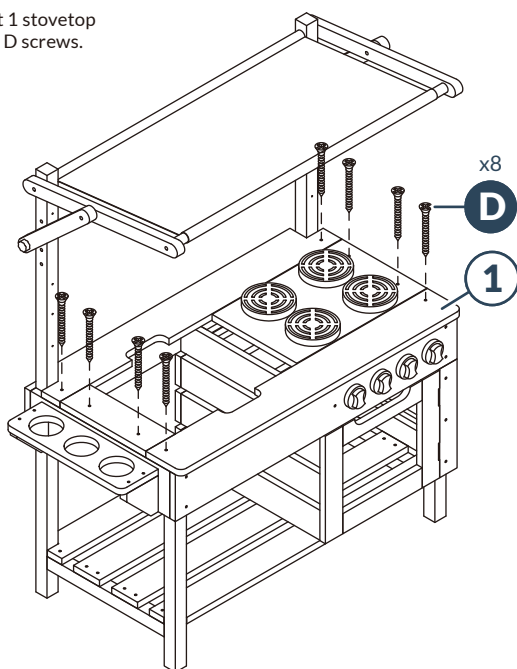


14

 Attach three **part 13** upper panels with six **part D** screws.

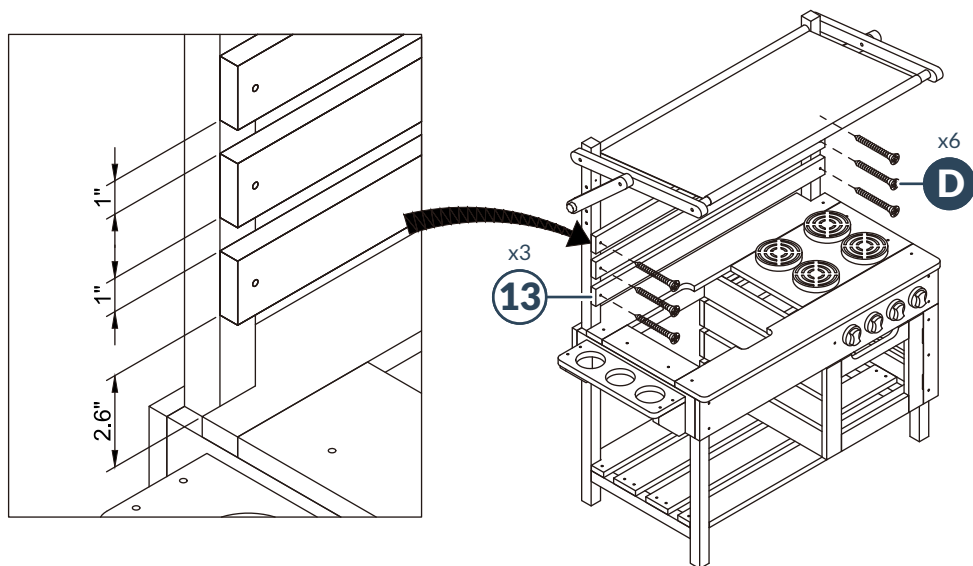

15

 
Attach the **part 19** chalkboard with six **part C** screws.

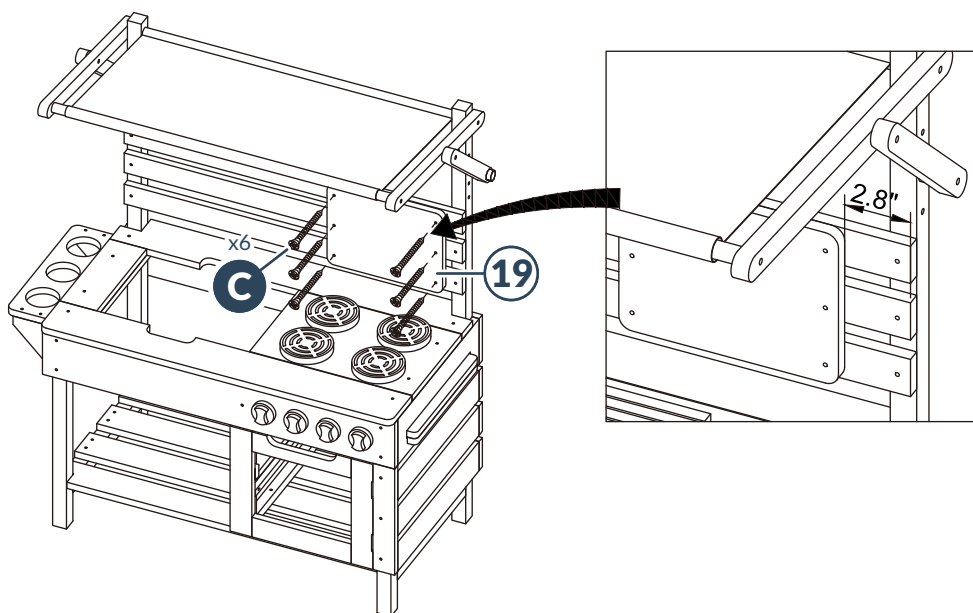

16

Attach the **part 14 shelf** to one **part 13 upper panel** with four **part D screws**.

 Attach the assembled shelf top opening of the playset with two **part D screws**.

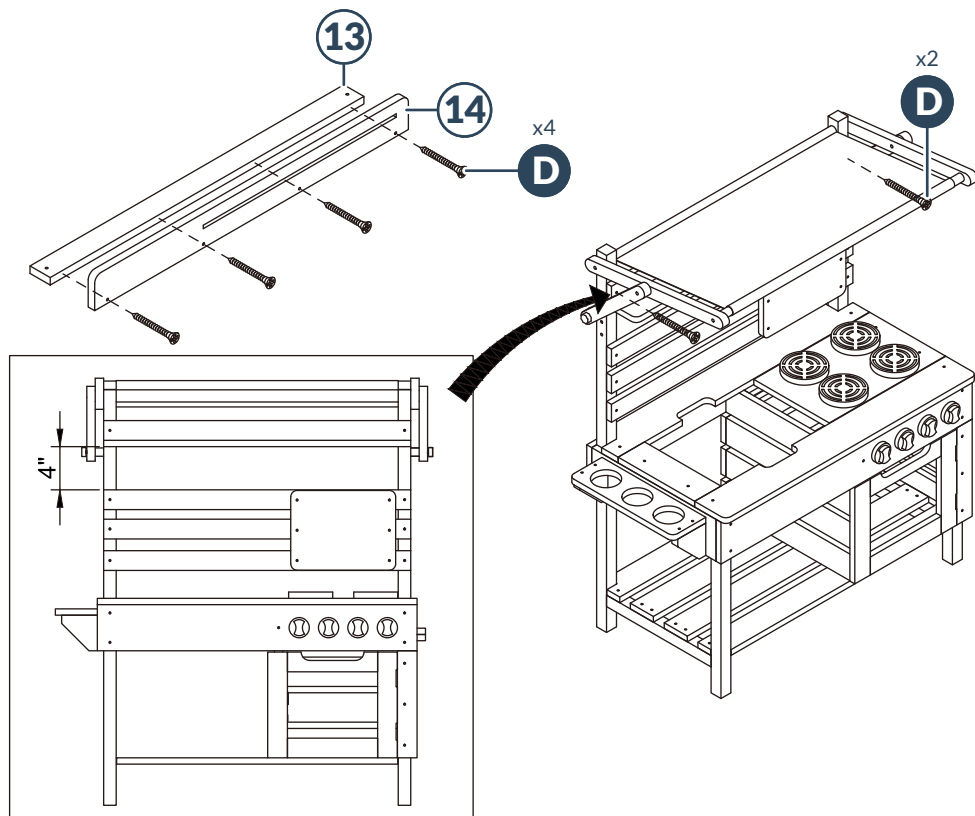


17

Secure the **part J faucet set** to the **part I bucket**, then attach the assembled faucet bucket to the upper panels with two **part A screws**.




Insert the **part L sink** into the opening of the stovetop.

 Place three **part O planters** into the plant tray, then place the remaining planters onto the top shelf.

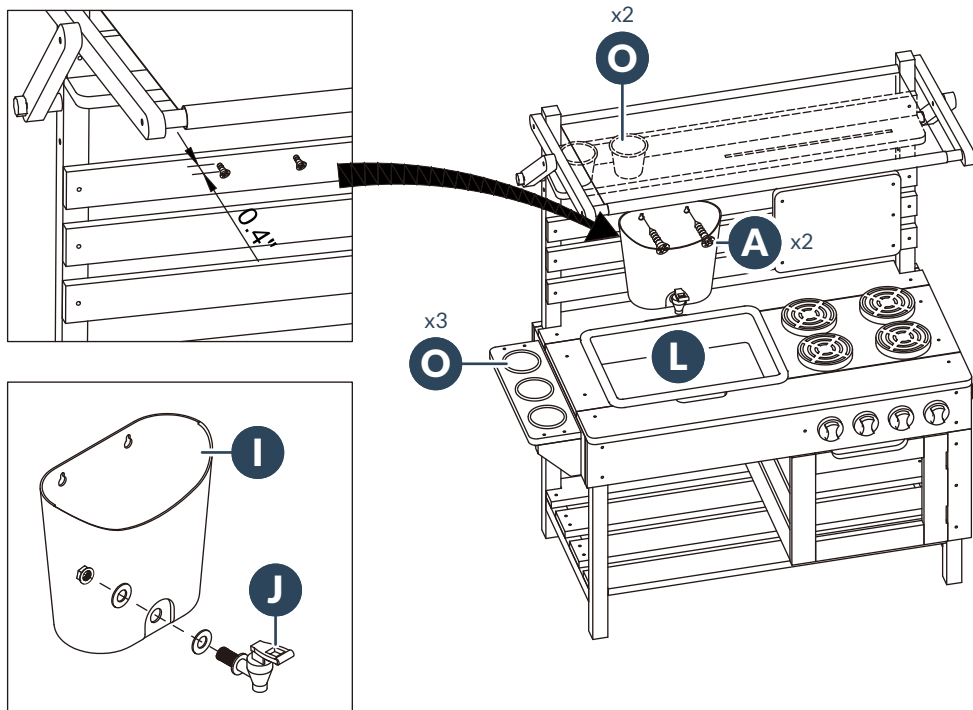

18

   
Insert five **part N** hooks into the top shelf.

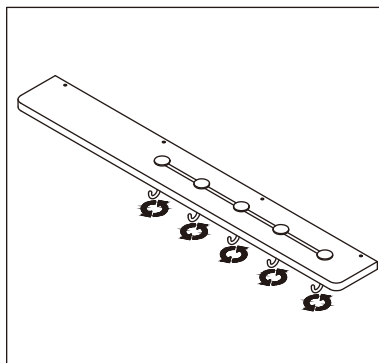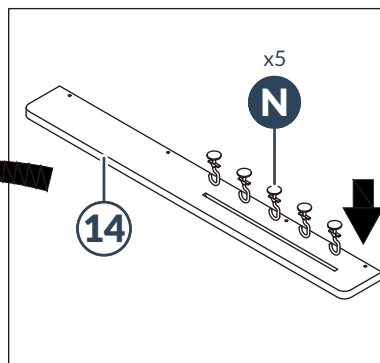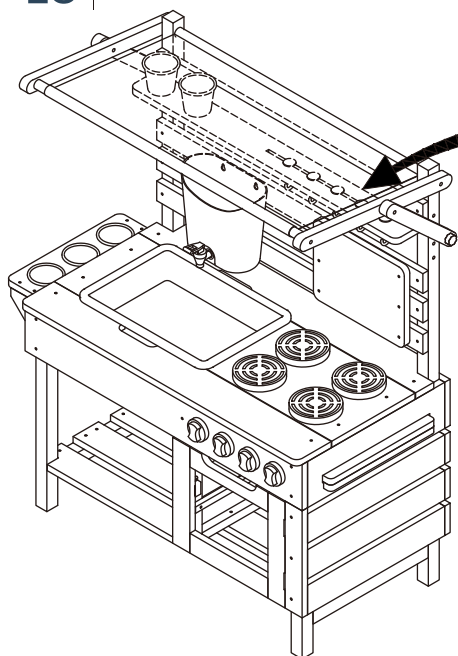

19

Arrange the **part P** cookware set as desired.

 Open the oven door and insert the **part M** baking tray.

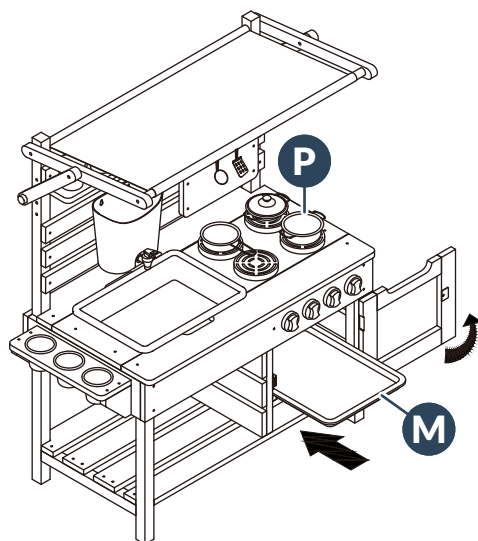



HELP CENTER

Question about your product? We're here to help. Visit us at:

bestchoiceproducts.com/pages/help



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

© Best Choice Products, Inc. All rights reserved. Distributed by Best Choice Products, Inc. Newport Beach, CA 92660

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.