


ASSEMBLY INSTRUCTION

 
2615DC-24 (3A)

DARK CHERRY FINISH NAILHEAD COUNTER HEIGHT CHAIR


A Chairback **B** Seat **C** Left Front Leg **D** Right Front Leg

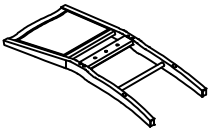


1 pc



1 pc

 

1 pc

 

1 pc

E Center Stretcher **F** Side Stretcher **G** Bolt 3" **H** Bolt 2"



1 pc



2 pcs



4 pcs



4 pcs

I Bolt 1-1/2" **J** Lock Washer **K** Flat Washer **L** Screw



2 pcs



10 pcs



10 pcs




6 pcs

M Allen Wrench




1 pc

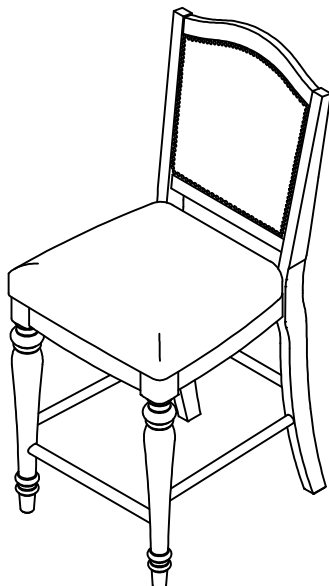

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1


Place the seat (B) upside down smooth carpet surface. Put the center stretcher (E) between the front leg. Tighten the left front leg (C) and right front leg(D) on the corner blocks by bolts(H), lock washers(J) and flat washers(K) with allen wrench(M).

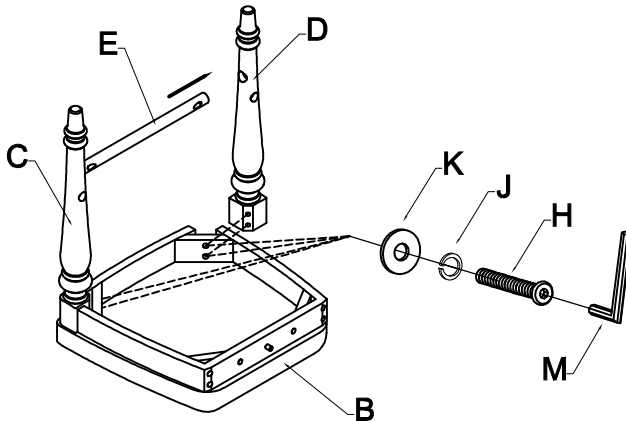


Take the Allen Wrench, and turn the bolts until the legs are secure. **DO NOT TIGHTEN COMPLETELY.** Stop when feel you are adding force to tighten the bolt.

2

Put the side stretcher (F) between the back leg and front leg. Tighten the seat(B) on the chairback(A) by bolts(G)(I), lock washers(J) and flat washers(K) with allen wrench(M).

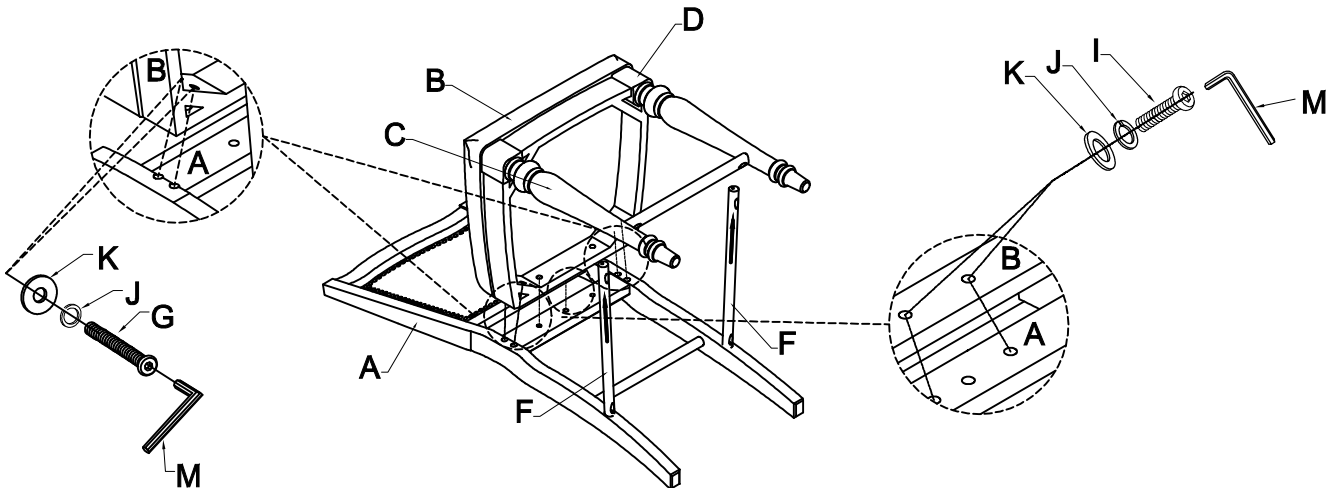**3**

Fixed the center stretcher (E) and side stretcher (F) on the legs by screw (L).

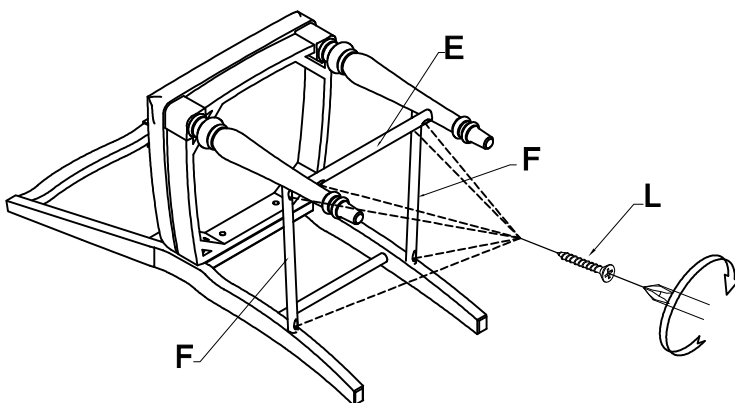

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

Helpful Tip:

-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit on the chair while you tighten the bolts.

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.