




Outdoor Pop-up Party Tent

Ver. 1

SKY9699 + SKY9700 + SKY9701

PARTS






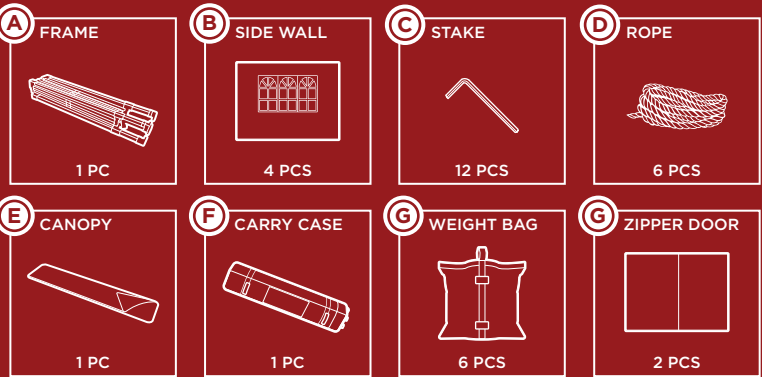


⚠ WARNING

- Be careful not to pinch hands or appendages during assembly.
- It is recommended that you use the ropes and stakes to secure the canopy.
- Canopy should not be left up in the rain. This product is not intended to withstand constant rain or inclement weather.
- This product is not intended to withstand periods of extreme/high wind or inclement weather.
- When not in use, this product should remain closed and stored away to avoid potential damage.
- This product is intended for residential use only.

PRODUCT ASSEMBLY

1 PERSON ASSEMBLY | UP TO 10 MIN. ASSEMBLY

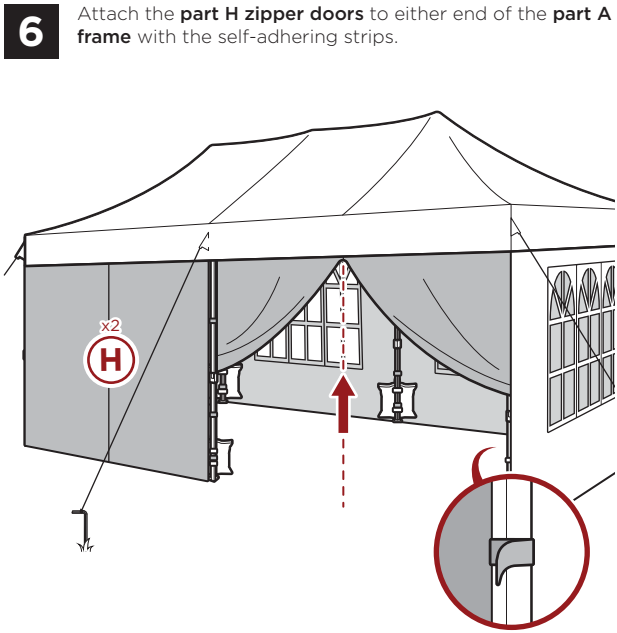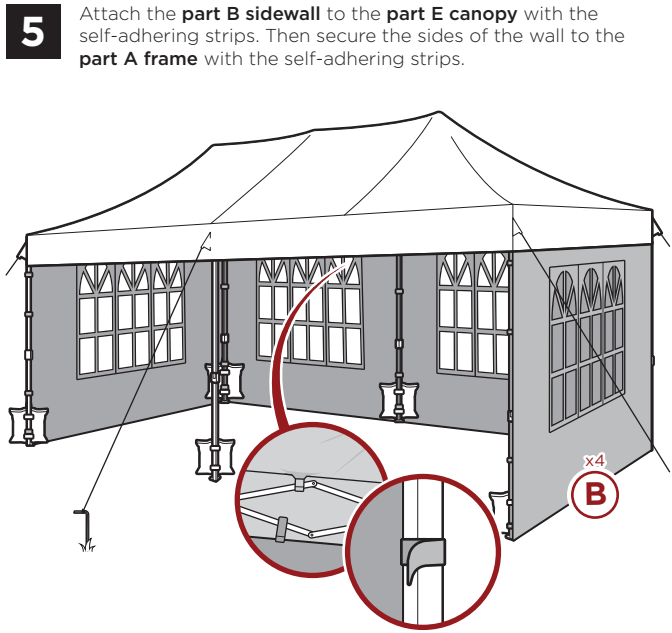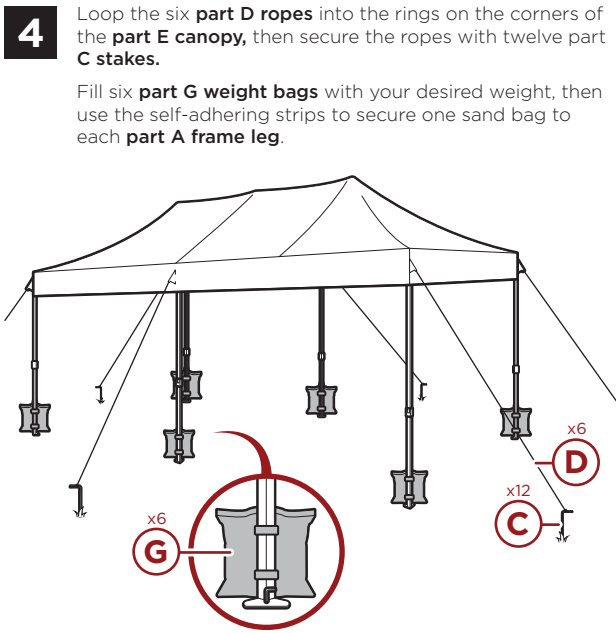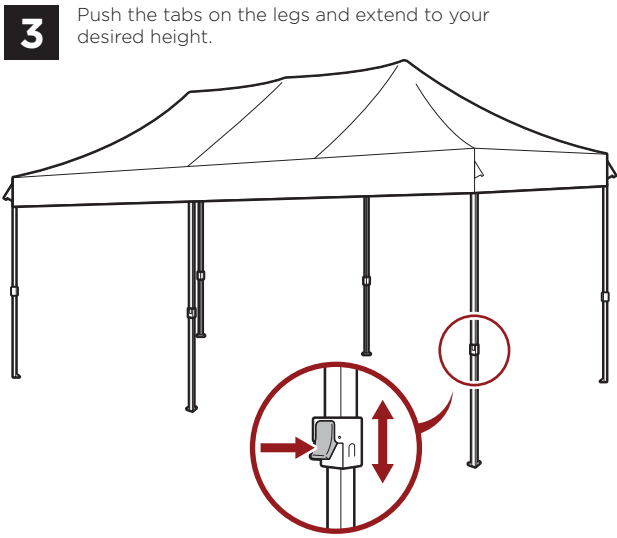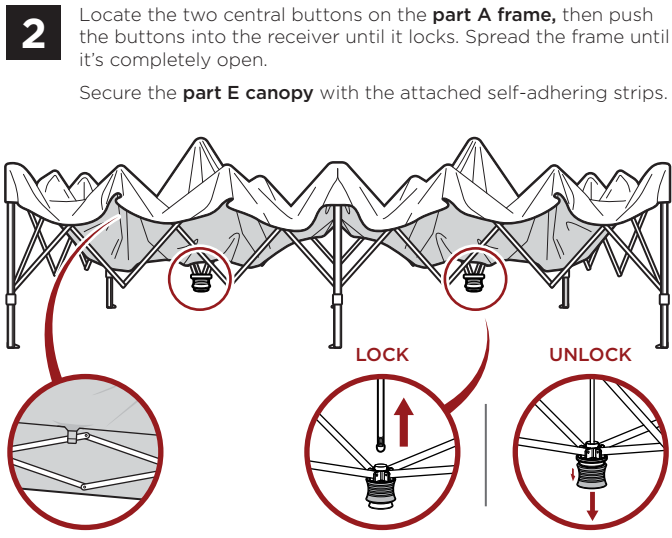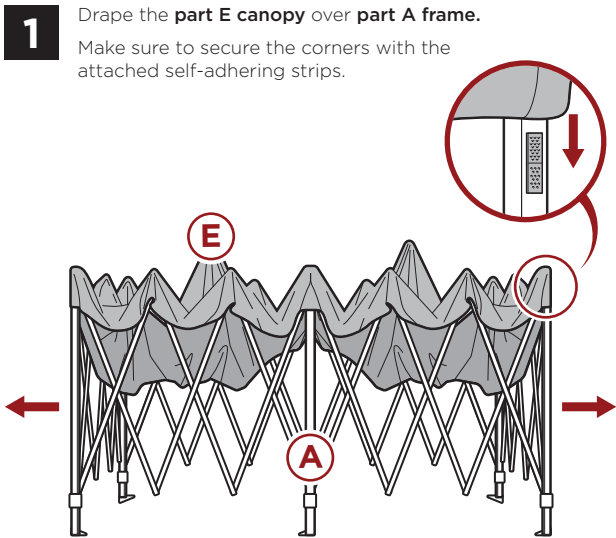

STORAGE

