

Installation Instructions

Steam Generator Drain Pan

Record your model number:

Noter le numéro de modèle:

Anote su número de modelo: _____

Français, page 6

Español, página 10

KOHLER®

Thank You for Choosing KOHLER

 
Need help? Contact our Customer Care Center.

- USA/Canada: 1-800-4KOHLER (1-800-456-4537)
- Mexico: 001-800-456-4537
- **For service parts information**, visit kohler.com/serviceparts.
- **For care and cleaning information**, visit kohler.com/clean.
- **Patents:** kohlercompany.com/patents

Warranty

This product is covered under the **KOHLER® Steam Generator Three-Year Limited Warranty**, found at kohler.com/warranty. For a hardcopy of warranty terms, contact the Customer Care Center.

Tools and Materials



Sealant Tape

Plus:

- Shallow Container to Drain the Steam Generator
- 3/4" Male NPT Drain Pipe Adapter
- Drain Pipe Rated for 212°F (100°C)

Important Information



WARNING: Risk of electric shock. Disconnect the power before performing the following procedures.



CAUTION: Risk of serious burns from steam. Turn off electrical power and allow steam generator to cool before performing this replacement procedure.

IMPORTANT! Do not drain the water from the drain pan into the showering space.

IMPORTANT! Do not drain the water from the generator drain valve or steam line directly into drain pan.


IMPORTANT! Do not connect the generator drain valve to the drain pan outlet.

IMPORTANT! Use drain piping rated for 212°F (100°C).

Use these instructions to install a drain pan to a new steam generator installation or replace an existing drain pan.


Follow all local plumbing and building codes.

1. Remove the Existing Drain Pan (If Applicable)

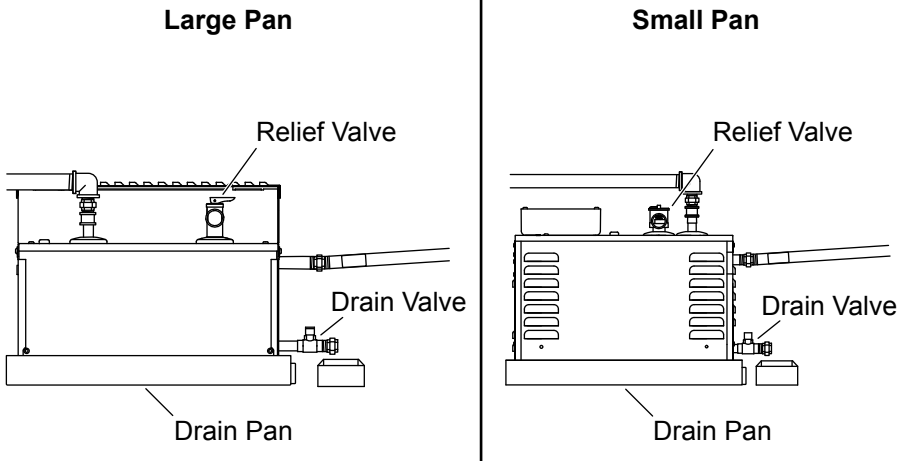

- Turn OFF the circuit breaker to the steam generator.
- Turn OFF the water supply.
- Allow the steam generator to cool below 120°F (49°C).
- Open the pressure relief valve on the steam generator to relieve any pressure in the system.
- Place a shallow container under the generator drain valve.
- Turn the drain valve handle to the open position to drain the water.
- Disconnect the drain pipe from the existing drain pan.
- With help, lift the steam generator just enough to slide the old drain pan out of the installation location.

2. Install the New Drain Pan

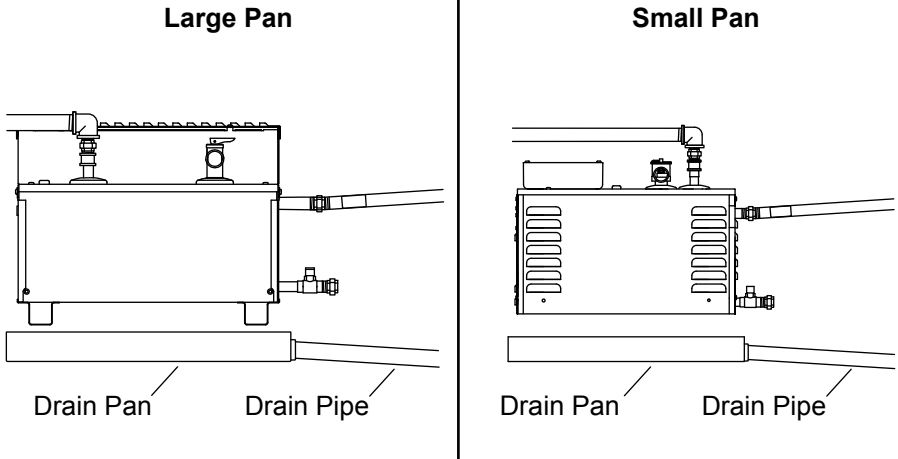

IMPORTANT! The drain pipe must have continuous downward slope to ensure drainage.

IMPORTANT! Use drain piping rated for 212°F (100°C).

NOTE: For new steam generator installations, refer to the steam generator installation instructions for proper drain pan placement.

- Position the new drain pan in the installation location.
- Connect piping from the drain pan to a suitable drain using a 3/4" NPT male adapter.
- Make sure that the drain piping has adequate slope for drainage according to local plumbing codes.
- For new steam generator installations, complete the generator installation following the instructions provided with the product.
- Verify that the steam generator is level and properly positioned inside the drain pan.
- Close the pressure relief valve.
- Turn ON the water supply.
- Turn ON the circuit breaker to the steam generator.