

## **ASSEMBLY INSTRUCTIONS**




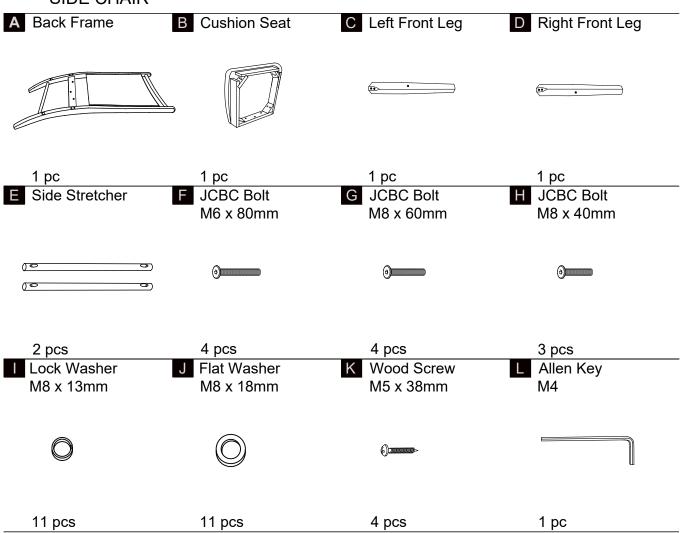

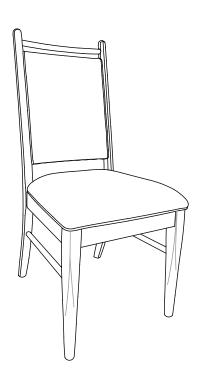


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage. Place the Back Frame (A) on a protective surface. Attach the Cushion Seat (B) to the Back Frame (A) using JCBC Bolt (H), Lock Washer (I) and Flat Washer (J) into the middle holes, and using JCBC Bolt (F), Lock Washer (I) and Flat Washer (J) into the corner holes, tightening with the Allen Key (L).

\*\*Do not fully tighten the bolt until all bolts are attached.

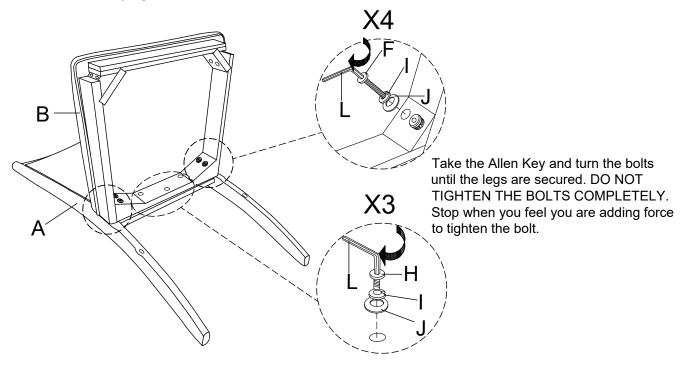

Attach the Left Front Leg (C) and the Right Front Leg (D) to the Cushion Seat (B) using JCBC Bolt (G), Lock Washer (I) and Flat Washer (J) with the Allen Key (L).


\*\*Do not fully tighten the bolt until all bolts are attached.

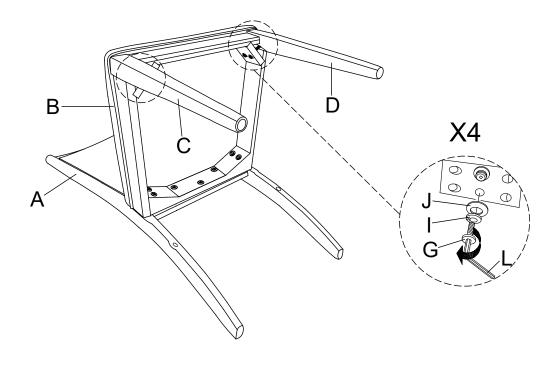

3

Attach the Side Stretcher (E) between the Back Frame (A) and the Left & Right Front Leg (C & D) using Wood Screw (K) with a screwdriver (not provided).

\*\*Fully tighten the bolts and screws in this Step.

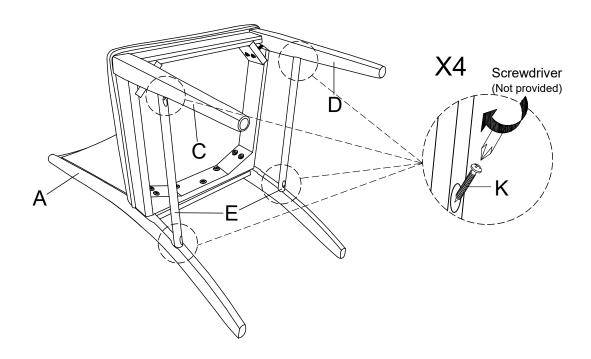

Stand the chair on an even surface and check for balance. If the chair wobbles slightly, apply downward pressure on the uneven leg and tighten the bolts to correct the imbalance. Once the chair is balanced, apply downward pressure evenly in the center of the chair and tighten all bolts, being careful not to over-tighten beyond the hole depth.

Helpful Tip: While tightening the bolts from underneath, have someone sit in the chair.

## Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.