

INSTRUCTION MANUAL

Set of 3 Non-Stick Pans and Accessories

Ver. 1 SKY4886



Max Oven Temperature 450°F

Recommended
Stovetop Use
Low to medium heat

bestchoiceproducts.com

NOTICE

Please retain these instructions for future reference.

MAX OVEN TEMPERATURE: 450°F

RECOMMENDED STOVETOP USE: Low to medium heat

- · This item is intended for household use only.
- · Never leave cookware unattended. Supervise children at all times around hot cookware.
- Do not touch hot surfaces. Wear heat-resistant gloves and use handles when cooking with this item.
- Use oven mitts or pot holders when handling hot pans in an oven.
- · Never leave cookware on a hot burner without ingredients or oil as this could ruin the pan.
- Never put cookware in the microwave or a toaster oven.
- If any parts are missing, broken, damaged, or worn, stop using this item until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

USAGE TIPS

- · Item is non-stick and dishwasher safe.
- · Before use, wash cookware with hot water and mild detergent.
- · Do not use in an oven hotter than 450°F.
- Low to medium heat setting is recommended for most cooking. If using a gas burner, make sure the flame only touches the bottom of the pan (not the sides).
- · Do not use aerosol cooking sprays on pans.
- · For added cooking flavor, use natural oils such as olive, canola, or peanut oil.
- Only use non-metallic utensils made of plastic, silicone, wood, or bamboo.
- · Do not cut or slice food directly on pans.

CLEANING


- · Clean cookware after every use.
- Allow cookware to completely cool before washing. Never immerse a hot pan in cold water as this could warp the pan.
- Items are dishwasher safe, but hand washing is recommended.
- · Wash with warm water, mild detergent, and a non-metallic sponge or cloth.
- · To make washing easier, soak pan in hot water and mild detergent.
- For stubborn residue, boil water in pan with a tablespoon of detergent, then loosen residue with a sponge or plastic spatula.
- · Do not use an abrasive cleaner.
- Do not clean with a wire brush, steel wool, or other abrasive objects.

STORAGE

- Do not stack or store this item with other cookware unless a protective layer is used. A cookware rack or pegboard is recommended.
- Store item in a dry and clean area.

ENJOY YOUR PRODUCT!



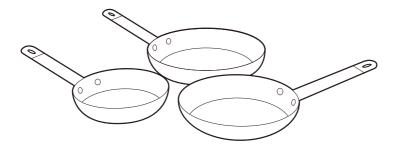

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

CONTACT US; WE'RE HERE 7 DAYS A WEEK TO HELP YOU!



bestchoiceproducts.com



customerservice@ bestchoiceproducts.com



844.948.8400



LEARN MORE!

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.