 




bestchoiceproducts

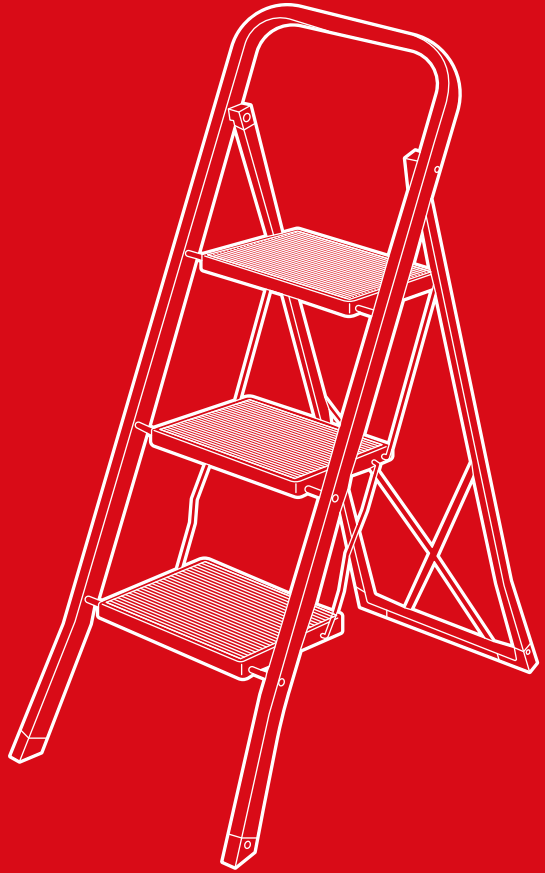

# INSTRUCTION MANUAL

---

3-Step Portable  
Folding Ladder

## ! NOTICE

Please retain these instructions for future reference.

 
- Please do not exceed the weight limitations of this item.
- Only use item on a stable and level surface.
- Item is intended for household use only.
- Do not allow children to climb the ladder. Keep children away from work area.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.

**WEIGHT CAPACITY:** 330 lbs.


## ! WARNING

- Before use, ensure ladder is fully unfolded and hinges, steps, and safety lock are securely in position.
- Only one person can use the ladder at a time.
- Be careful when mounting or dismounting the ladder. Always mount and dismount facing towards the ladder.
- Do not lean or reach when standing on the ladder; always move ladder to a more suitable position.
- Do not balance on the edge of a step.
- Always clear work area (including overhead) of hazards and obstacles before use.
- Always wear suitable footwear when using ladder.
- Periodically check that all hardware is secure and well lubricated.


## ! DANGER

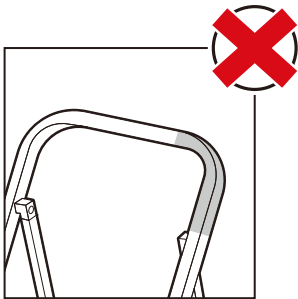

 Do not put weight on one side of the handle

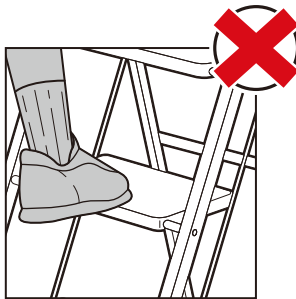

Do not balance on the edge of a step

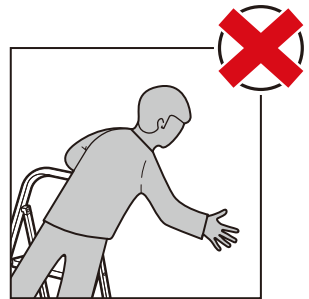 


Do not lean or reach when standing on ladder

## CLEANING & STORAGE

 - Wipe surfaces with a soft, dry cloth.
- Allow item to thoroughly dry before use.
- Store in a cool, dry place.

## MAIN DIAGRAM

**SAFETY LOCK:** Make sure the lock underneath the top step is secured in position.

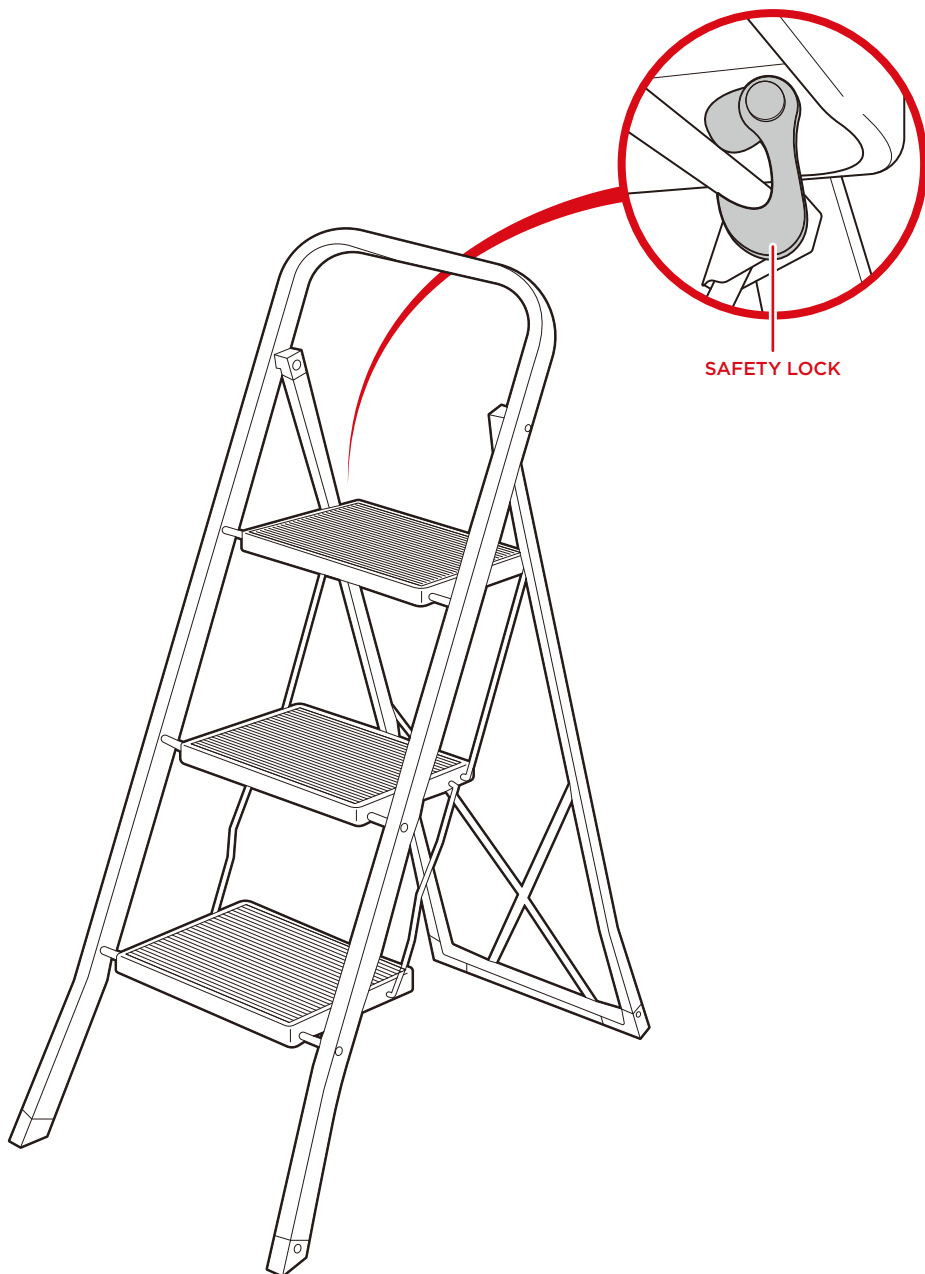



# HELP CENTER



Question about your product? We're here to help. Visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)



Chat Support



Product Inquiry



Orders FAQ



Product Assembly



Returns & Refunds

## PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.



## WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.