



bestchoiceproducts

# Standing **ANIMATRONIC WEREWOLF**



SOUND  
ACTIVATED




MOTION / TOUCH  
ACTIVATED



INDOOR/  
COVERED PORCH

bestchoiceproducts.com

SKY6239

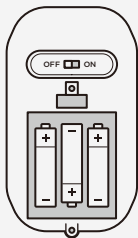

**BUTTON**

## BATTERY BOX INSTALLMENT

1. Locate the battery box in the back of the animatronic
2. Unscrew the battery cover and insert 3 AA batteries

## BATTERY BOX FUNCTION

**AUTOMATIC MODE:** Turn the switch ON to activate motion/touch sensor

**MANUAL MODE.** Turn the switch OFF. Press the button to activate the animatronic



Questions about your product? We're here to help.

Scan the QR code or visit us at:

[help.bestchoiceproducts.com](http://help.bestchoiceproducts.com)

SKY6239

## REQUIRES

- #0 or #1 Mini Screwdriver (Not Included)
- 3 AA Batteries (Not Included)

## STAND ASSEMBLY

1. Insert poles into connectors to build stand
2. Slide four legs into base connector
3. Attach figure to top of stand

