

ASSEMBLY INSTRUCTION

DINING TABLE

 
A Top



B Legs



C Rail



1pc

D Screw
Ø5/16"x2"



2pcs

E Flat Washer
Ø5/16"



1pc

F Spring Washer
Ø5/16"



12pcs

G Allen Wrench
Ø5/16"



12pcs

H Bolts
Ø5/16"x3-3/4"



12pcs

I Half Moon Screw Nut
Ø5/16"



 
1pc

J Screw Nut
Ø5/16"x6mm



4pcs

K Spanner
Ø5/16"



4pcs

4pcs

 
1pc




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

*** Do not tighten screws & bolts until the entire unit is completely assembled.

- 1 Attach Rail (C) to Legs (B) by using Bolts (H), Half Moon Screw Nut (I), Screw Nut (J) and Spanner(K) as shown.

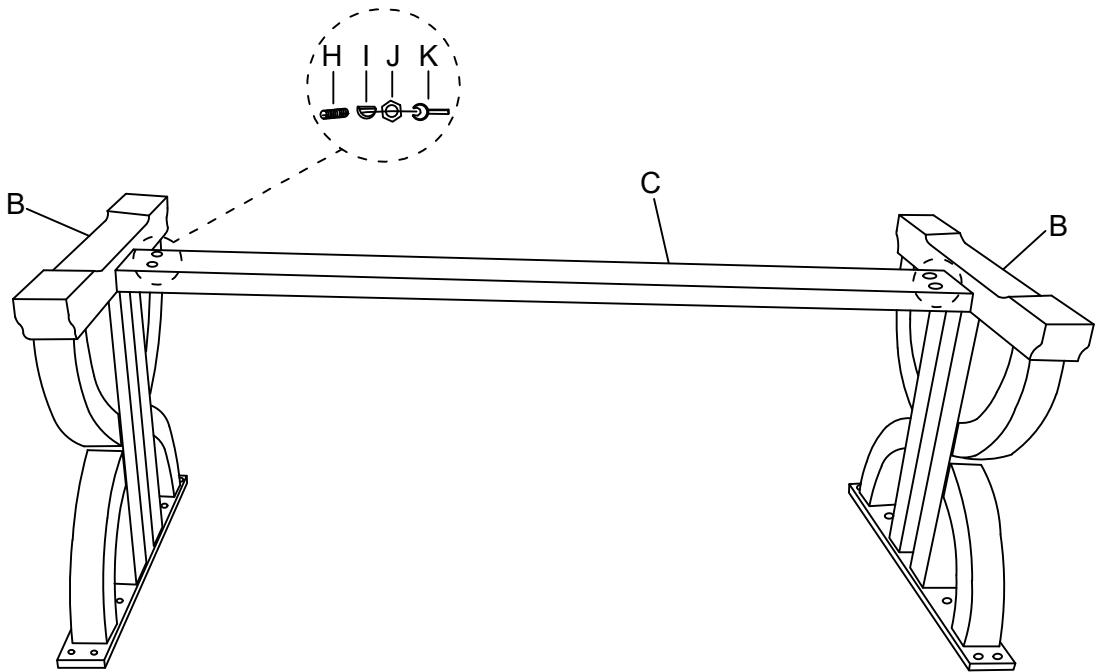

 - 2 Attach Legs (B) to Top (A) by using Screw (D), Flat Washer (E), Spring Washer (F) and Allen Wrench (G) as shown.

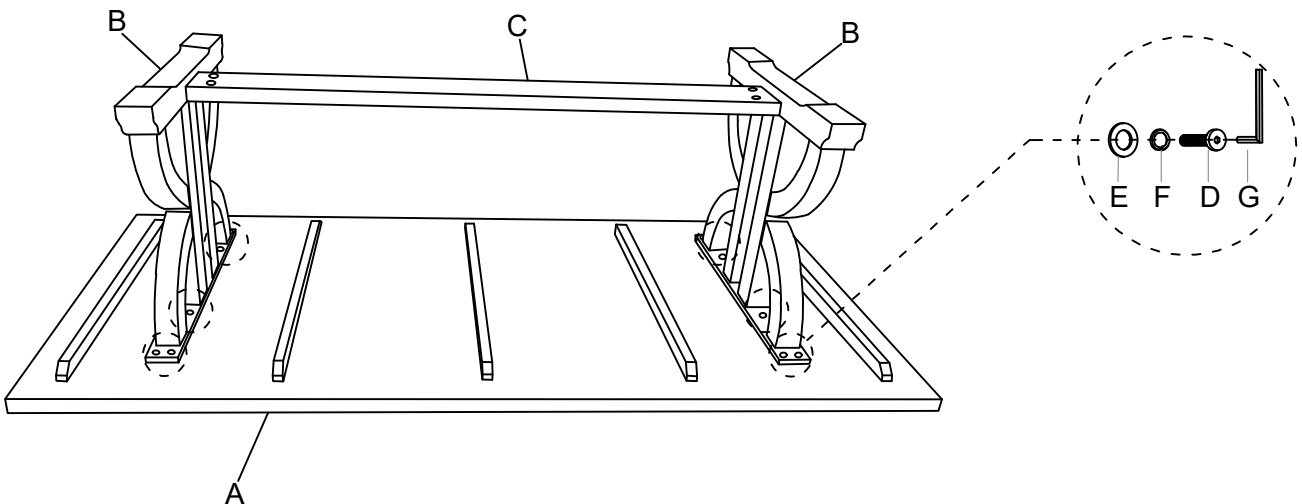 

 


 
 





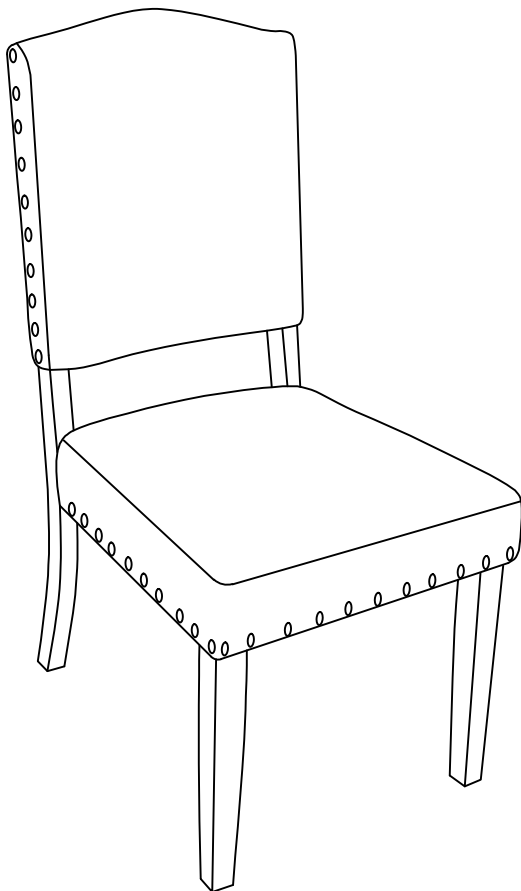 
Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION

NAILHEAD CHAIR


A Chair Back	B Seat	C Front Legs	D Lock Washer Ø5/16"	E Flat Washer Ø5/16"
				
1pc	1pc	2pcs	10pcs	10pcs
F Bolts Ø5/16"x3-1/2"	G Bolts Ø5/16"x2-1/2"	H Bolts Ø5/16"x2"	I Allen Key Ø5/16"	J Wood Dowel Ø10x30mm
				
4pcs	4pcs	2pcs	1pc	1pc



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

 Put the Seat (B) on a smooth flat surface, attached Front Legs (C) to the Seat (B) using Bolts (G), Lock Washer (D) and Flat Washer (E) in both holes of Seat (B). Turn the Allen Key (I) in Bolts (G). But not too tight. Attach Wood Dowel (J) to Seat (B) back.

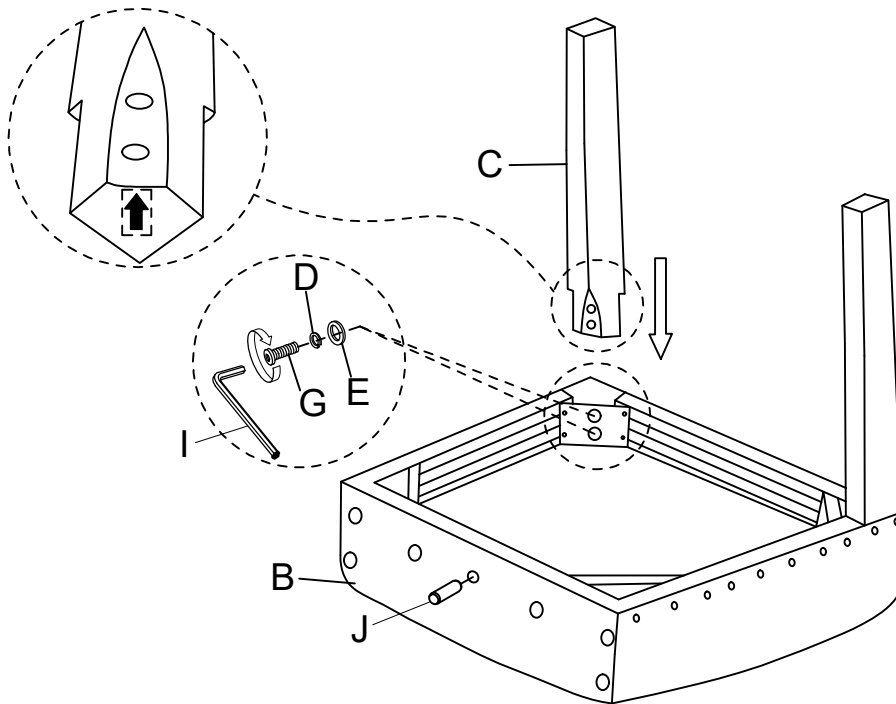


Take the Allen Key, and turn the bolts until the legs are secure. **DO NOT TIGHTEN COMPLETELY.** Stop when you feel you are adding force to tighten the bolt.


2

Put Chair Back (A) on a smooth flat surface, attached the Seat (B) to the Chair Back (A) using Bolts (F) & (H), Lock Washer (D), Flat Washer (E) in both holes of Seat (B) and Chair Back (A). Turn the Allen Key (I) in Bolts (F) & (H).

 Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

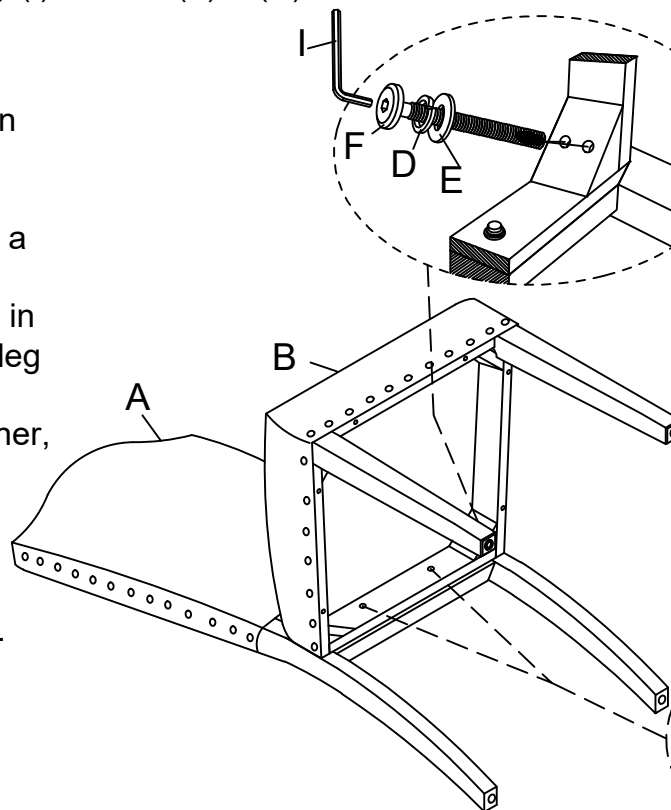

 Helpful Tip:
-Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

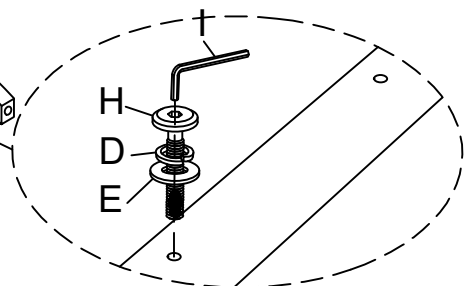

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.