


ELURA

SOUND + PERFORMANCE

**RED SERIES SUBWOOFER
OWNER'S MANUAL &
INSTALLATION GUIDE**

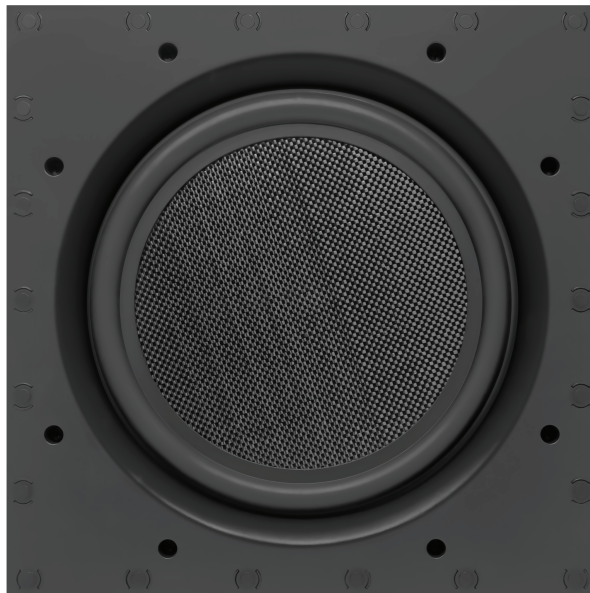

**ELURA SUBR10IW
IN-WALL SUBWOOFER**

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	ATTENTION RISQUE DE CHOC ELECTRIQUE NE PAS OUVRIR	
WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. AVIS: Pour réduire le risque d'incendie ou de choc électrique, ne pas exposer cet appareil sous la pluie et l'humidité. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus. <i>L'appareil ne doit pas être exposé aux écoulements ou aux éclaboussures et aucun objet ne contenant de liquide, tel qu'un vase, ne doit être placé sur l'objet.</i>			



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

Le symbole de l'éclair fléché dans un triangle équilatéral, est destiné à alerter l'utilisateur de la présence d'une "tension dangereuse" dans le boîtier du produit qui peuvent être des ampleur suffisante pour constituer un risque d'électrocution aux personnes.



This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.

Ce symbole est destiné à alerter l'utilisateur de la présence d'opération et de maintenance (entretien) dans la documentation accompagnant l'appareil.

Important Safety Instructions

1. Read these Instructions.
Lisez ces instructions.
2. Keep these Instructions.
Conservez ces instructions.
3. Heed all Warnings.
Respectez tous les avertissements.
4. Follow all instructions.
Suivez toutes les instructions.
5. Do not use this apparatus near water.
Ne pas utiliser cet appareil près de l'eau.
6. Clean only with a dry cloth.
Nettoyer uniquement avec un chiffon sec.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
Ne pas bloquer les ouvertures de ventilation. Installer conformément aux instructions du fabricant.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
Ne pas installer près de sources de chaleur telles que radiateurs, registres de chaleur, poêles ou autres appareils (y compris les amplificateurs) produisant de la chaleur.
9. Do not defeat the safety purpose of the polarized or grounding - type plug. polarized plug has two blades with one

wider than the other. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

Ne détruisez pas la sécurité de la terre ou polarisées - fiche. Une fiche polarisée possède deux lames dont une est plus large que l'autre. Si la fiche fournie ne rentre pas dans votre prise, consultez un électricien pour remplacer la prise obsolète.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
Protégez le cordon d'alimentation d'être piétiné ou pincé, particulièrement au niveau des fiches, des prises, et le point où ils sortent de l'appareil.
11. Only use attachments/accessories specified by the manufacturer.
N'utilisez que des accessoires spécifiés par le fabricant.
12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus, combination to avoid injury from tip-over.



Utilisez uniquement un chariot, stand, trépied, support ou table spécifiés par le fabricant ou vendu avec l'appareil. Quand un panier ou rack est utilisé, faites attention lorsque vous déplacez l'ensemble chariot / appareil, pour éviter d'éventuelles blessures en cas de chute.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
Débranchez cet appareil pendant les orages ou lorsqu'il n'est pas utilisé pendant de longues périodes de temps.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
Confiez toute réparation à un personnel qualifié. Une réparation est nécessaire lorsque l'appareil a été endommagé de quelque façon que ce cordon d'alimentation ou la fiche est endommagé, liquide a été renversé ou des objets sont tombés dans l'appareil, l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement, ou s'il est tombé.
15. **WARNING:** The appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.
AVERTISSEMENT: La fiche d'alimentation (appareil coupleur) est utilisé comme dispositif de déconnexion, le dispositif de déconnexion doit rester facilement accessible.
16. No naked flame sources, such as lighted candles, should be placed on the apparatus.
Aucune source de flamme nue, telle que des bougies allumées, ne doit être placé sur l'appareil
17. Protective earthing terminal. The apparatus should be connected to a mains socket outlet with a protective earthing connection. 
Borne de terre de protection. L'appareil doit être connecté à une prise secteur avec une prise de terre.

FCC Statement



NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

NOTE: These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Overview

Thank you for purchasing Elura speaker products.

Elura is a high-performance, custom-installed product line engineered for movie and music enthusiasts. Each Elura product is manufactured to the highest quality standards using state-of-the-art components and is built for years of enjoyment.

Contents

- Elura SUBR10IW In-Wall Subwoofer
- Magnetic grille
- Sound-deadening adhesive foam strips
- Installation Manual

Considerations

Before connecting, mounting, or installing any Elura products, please read all instructions carefully.

Careful consideration should be given to avoiding obstacles such as electrical wiring, plumbing, or HVAC components. If you are unsure or inexperienced with construction methods, consult a qualified professional installer.

Use the proper tools and pay close attention to detail when connecting speaker wires. Ensure all equipment is powered OFF while connecting or disconnecting any components. Improper use, failure to follow precautions, or incorrect installation may result in damage to property or equipment and could cause personal injury or electrocution.

Features

- In-wall subwoofer design hides the enclosure without sacrificing performance
- Can be installed behind furniture
- Low-profile design matches Elura in-wall speakers
- Built with high-quality, precision-matched components
- For optimal performance, use with the Elura SUBR10IW-BOX, pre-construction enclosure, however the SUBR10IW can be installed into a wall or ceiling without the Elura SUBR10IW-BOX

Connections

Connect the subwoofer to the amplifier using high-quality 14–16 gauge stranded CL3-rated speaker wire.

- Connect the stripped bare wire ends directly to the spring-loaded speaker terminals
- Twist wire strands tightly to prevent shorts
- Observe correct polarity (+ / -)
- Minimum total impedance: 4Ω

Speaker Placement

The versatility of the Elura SUBR10IW allows powerful bass performance while freeing up floor space.

- The subwoofer is designed to install in standard stud-bay construction.
- Fits walls with a minimum 4" of depth
- Locate the SUBR10IW within 5-10 feet of the high frequency speakers
- Keeping the SUBR10IW near high frequency speakers and closer to the listening environment will improve the sound quality
- The SUBR10IW can also be installed in ceilings
- For maximum performance, use the SUBR10IW-BOX pre- construction enclosure

Installation Notes

- Designed for installation into minimum 5/8" drywall or in the optional Elura SUBR10IW-BOX, pre-construction enclosure
- Use the provided cut-out template to cut a 11.12" x 11.12" hole where the speaker will reside
- After cutting the wall opening, position the subwoofer and secure it directly to the dry wall by tightening the dog legs. **DO NOT OVER TIGHTEN**

Do not over-tighten mounting screws or clamps. Hand-tighten or use a drill with a clutch setting. Over-tightening may damage the drywall or wall structure.

Specifications

Model	Elura SUBR10IW
Driver Configuration	Single 10" in-wall subwoofer
Impedance	4Ω
Power Handling	150 Watts
Sensitivity	86 dB
Frequency Response	32 Hz – 300 Hz
Cut Out Dimensions	Height: 11.12"
	Width: 11.12"
	Depth: 4.13"

General Maintenance

Clean the subwoofer and grille with a soft, damp cloth only.

The grille may be removed by gently pulling outward. Use caution to avoid damaging the grille or speaker components.

loss or damage in transit. Under no circumstances will a unit be accepted without a return authorization number.

The warranty is in lieu of all other warranties expressed or implied, including without limitations, any other implied warranty, all of which are expressly disclaimed. Proof of sale may be required in order to claim warranty.

Product Warranty

All Elura products include a one (2) year limited liability warranty covering parts and labor for defects in materials or workmanship under normal use.

This warranty does not apply to products that have been abused, modified, or disassembled. Speakers failing under conditions not covered by warranty may be repaired at the current parts and labor rates. Such repairs are warranted for 90 days from the date of reshipment.

Customers are responsible for insuring products shipped by mail. No unit will be accepted without a valid return authorization number. Proof of purchase may be required.

This warranty is in lieu of all other expressed or implied warranties, including warranties of merchantability or fitness for a particular purpose.

A unit that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for 90 days from the day of reshipment to the buyer. If the unit is delivered by mail, customers agree to ensure the unit or assume the risk of

The content of this manual has been carefully checked and is believed to be accurate. However, the seller assumes no responsibility for any inaccuracies that may be contained in this manual. Also, the technical information contained herein regarding the features and specifications are subject to change without further notice.

www.elura.com

MSTR