



GAINSBOROUGH
freestyle

USER GUIDE

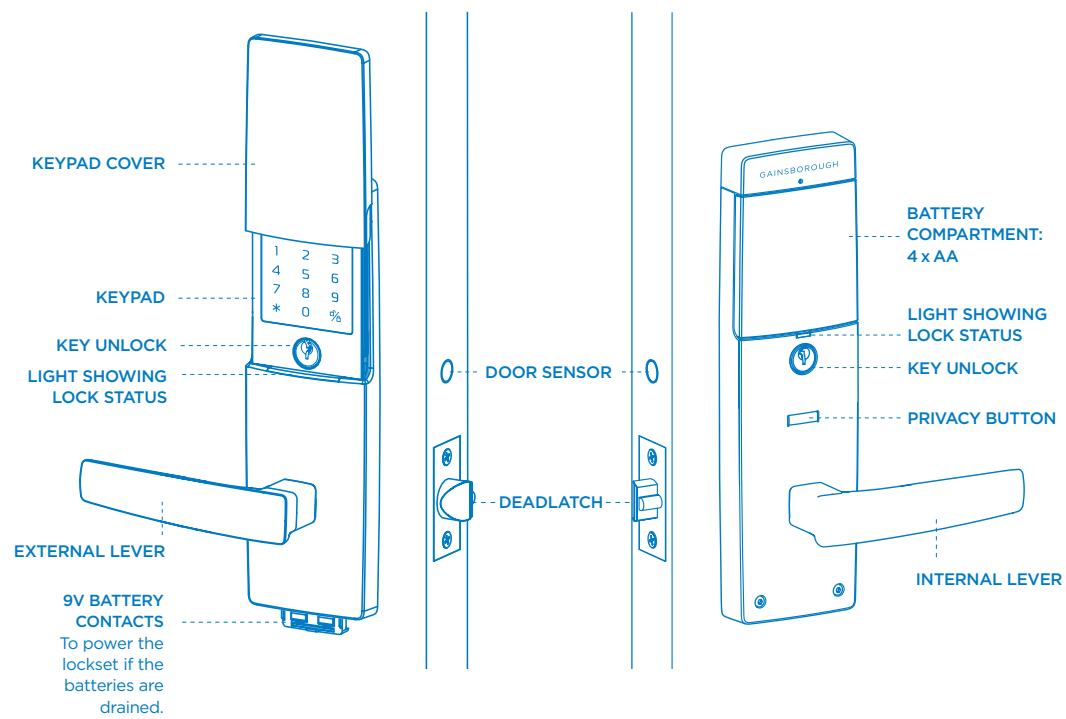

Your new lock:

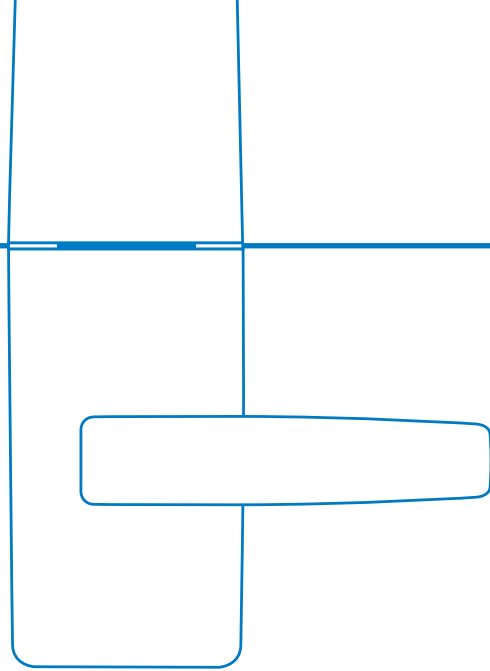

Welcome to Freestyle

Your new Trilock® combines Gainsborough's signature style with the latest technology.

Whether it's checking if you've locked the house, or if your family has arrived home, this smart lock gives you unparalleled convenience, peace of mind and the freedom to move.

Enjoy Trilock®'s 3-in-1 functionality, now with Bluetooth smart technology and built in Wi-Fi.



WORKS WITH:



the Freestyle App is available from your smart phone's app store.

WARRANTY

Allegion Australia PTY Ltd guarantees to repair or replace this product if within five (5) years from the proven date of purchase if it tarnishes, discolours or corrodes; or if within ten (10) years from the proven date of purchase any mechanical defects occur; or if within two (2) years from the proven date of purchase any electrical defects occur. Applies only when properly installed and subjected to no more than fair wear and tear. This guarantee does not extend to labour costs, personal costs, death or injury, or economic, consequential or property damage of any kind whatsoever.



BUILT-IN WI-FI



ENCRYPTED CONNECTION



VOICE CONTROL



OPERATE WITH SMARTPHONE



3-IN-1 FUNCTION
PRIVACY, PASSAGE
& DEADLOCK



KEYLESS ENTRY
VIA KEYPAD
OR APP



MONITOR YOUR
LOCK STATUS



BATTERY OPERATED
FOR UP TO
12 MONTHS USE



EASY TO
INSTALL



ASSIGN/INVITE/
SCHEDULE UP TO
20 USERS



EMERGENCY
OVERRIDE KEYS
INCLUDED



SUITS 35-45MM
DOORS

Let's get started


Step 1

If your lock is pre-installed, proceed to Step 2. If you installed your lock, start with battery installation in Step 1, then proceed to Step 3.

BATTERY COVER RELEASE TOOL

1a


Using the supplied tool push through the hole to release the battery cover.

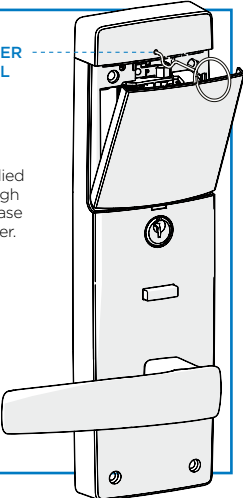

1b

Install the batteries and fit the battery cover.


- Use only quality AA ALKALINE batteries.
- Note orientation of the batteries.
- Do not mix old and new batteries.
- Battery life is dependent on door usage and quality of batteries

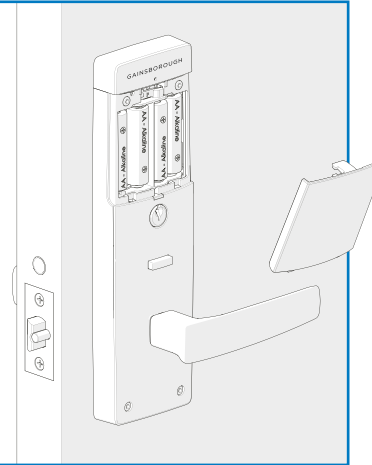

Step 2

If your lock was pre-installed, it is likely that there is a preset PIN code. For security and peace of mind reset lock as follows.

Make sure your door is ajar and unlocked before resetting. Facing the internal lockset, locate the Program Button above the batteries. Press and hold for 10 seconds until light blinks, and wait a few seconds while the lockset restarts. Successful reset is indicated by 2 beeps and 2 green blinks.

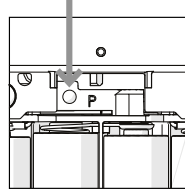

Step 3

Set up with the Gainsborough Freestyle™ app is easy. Scan the QR code to set up the lock on your smartphone. Alternatively, download from the App store.

With your door sensor installed, you can monitor not just your lock but also your door state.



NOW HERE'S THE FUN PART...

Go to Settings and then select 'Works With' from the menu. Follow the prompts so you can operate the lock via Alexa or Google.

Don't want to use the app? Follow these steps for keypad only use:

SETTING ADMIN CODE/ FIRST USER CODE

- 1** On the external side, slide cover up to energise keypad
- 2** Press '*', choose '1' then press '*'
- 3** Enter desired 4 digit PIN then press '*'
- 4** PIN code will repeat. Press '*' to accept, Press '%' to reject

SETTING UP USER CODES

- 1** Slide cover up to energise keypad
- 2** Enter Admin PIN then press '*'
- 3** Press '2' then '*'
- 4** Enter User Number (choose between 1-9) then press '*'
- 5** Enter desired 4 digit PIN then press '*'
- 6** PIN code will repeat. Press '*' to accept, or '%' to reject

Handy Hint: Use the back of this guide to log the users you've assigned PIN codes to. This makes tracking, managing and deleting users easy.

DELETING USER CODES

- 1** Slide cover up to energise keypad
- 2** Enter Admin PIN then press '*'
- 3** Press '3' then '*'
- 4** Enter User Number you wish to delete then press '*'
- 5** User to be deleted will be displayed. Press '*' to accept, or '%' to reject

VOLUME SETTING

- 1** Slide cover up to energise keypad
- 2** Enter Admin PIN then press '*'
- 3** Press '4' then '*'
- 4** Press '1' for Off, '2' for Low, '3' for High, then '*' to confirm

AUTO LOCK

- 1** Slide cover up to energise keypad
- 2** Enter Admin PIN then press '*'
- 3** Press '5' then '*'
- 4** Press '1' to deactivate, or '2' to activate, then '*' to confirm

GREEN LED + 3 BEEPS = SUCCESS.

RED LIGHT = TRY AGAIN

Activating Auto Lock means Privacy Lock will engage 20 seconds after user unlocks the door

Note: Installing and setting up the lock using the Gainsborough Freestyle™ App overrides all settings done via keypad. Plus allows you to set up to 20 User PINs.

Now your lock is set up, let's test your Gainsborough Freestyle Trilock®

Step 4


GAINSBOROUGH FREESTYLE TRILOCK® MODES:

UNLOCK (Passage Mode)
 Outside: Unlocked
 Inside: Unlocked


PRIVACY LOCK (Privacy Mode)
 Outside: Locked
 Inside: Unlocked

DEADLOCK (Deadlock Mode)
 Outside: Locked
 Inside: Locked

FROM THE EXTERNAL SIDE:

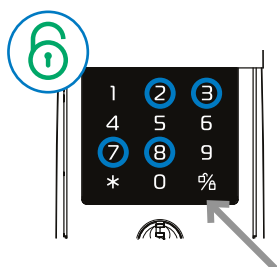


Slide cover up to energise keypad. Enter 4 digit PIN then press %.

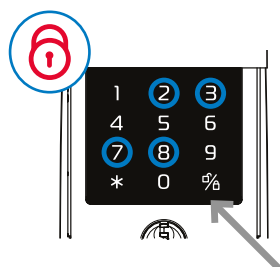

To Privacy Lock: Press % when leaving.

To Enter: Slide cover up to energise keypad. Enter 4 digit PIN then press %.

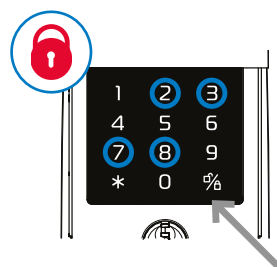

To Deadlock: Enter 4 digit PIN and press % when leaving.


To Enter: Slide cover up to energise keypad. Enter 4 digit PIN then press %.

(Warning: never use deadlock when there are occupants inside).

FROM THE INTERNAL SIDE:



To exit, operate the internal lever.

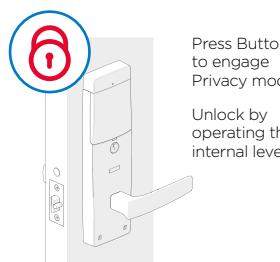

Press Button to engage Privacy mode.

Unlock by operating the internal lever.



You cannot set the Deadlock Mode from inside the house, it can only be set through the keypad.

Unlock with internal key.

THROUGH THE GAINSBOROUGH FREESTYLE APP:

Your app will show you your lock state. Simply choose an action for your lock:


UNLOCK (Passage Mode)

PRIVACY LOCK (Privacy Mode)

DEADLOCK (Deadlock Mode)

What do the colours and beeps on my lock mean?	
	PROGRAMMING
+ 1 Beep	UNLOCK
+ 2 Beeps	PRIVACY LOCK
+ 3 Beeps	DEADLOCK
Rapid beeps	ERROR
5 low tone beeps	LOW BATTERY

Emergency Power Supply

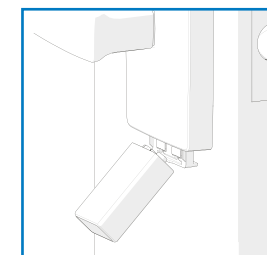

9V battery connections are located in a slide down tray under the front of the outside escutcheon.

In the case that the 4 AA alkaline batteries are completely discharged, a 9V battery can be used to supply power to the lock. While connecting the 9V battery, the lock can be operated as normal, granting access so the AA alkaline batteries can be replaced.

IMPORTANT

It is important not to engage the Deadlock function when there are people inside the house. Only use good quality alkaline batteries with your Gainsborough Freestyle Trilock®.

USE & CARE INSTRUCTIONS

This lockset is designed to provide the highest standard of product quality and performance. Care should be taken to ensure a long-lasting finish. When cleaning is required use a soft, damp cloth. Using lacquer thinner, caustic soaps, abrasive cleaners or polishes could damage the coating and result in tarnishing. Do not clean screen with any cleaning products containing bleach. Do not install the lock in close proximity to caustic vapours or where it may be subjected to extreme weather conditions.

WARNINGS

IMPORTANT: The accuracy of the door preparation is critical for the proper functioning and security of this product. Misalignment can cause premature wear and a lessening of security. The lock should only be serviced by a qualified technician.

Any unauthorised modifications will void your warranty and compromise your security.

You're set up! Enjoy the convenience and security knowing you have a Gainsborough Freestyle Trilock®

Questions about your new Gainsborough Freestyle Trilock®? Let us help you! Visit www.gainsboroughhardware.com.au/freestyle/faq

GAINSBOROUGH
freestyle

IS GAINSBOROUGH'S SMART TECHNOLOGY

User No.	Assigned to
1	
2	
3	
4	
5	
6	
7	
8	
9	

SERIAL NUMBER:



Allegion (Australia) Pty Ltd
Phone 1800 098 094
Gainsboroughhardware.com.au
© Allegion 2024

Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc or its affiliates. Google is a trademark of Google LLC.

PDGAO115-R1