


ASSEMBLY INSTRUCTION

E427-44 DINING TABLE

A Table Top

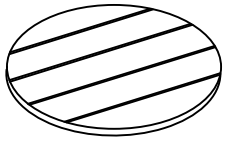

 
1pc

B Leg



4pcs

C Stretcher



1pc

D Bolt
Ø6x12mm



24pcs

E Lock Washer
Ø6mm



8pcs

F Flat Washer
Ø6x13mm



8pcs

G Allen Key
M4




1pc




This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1 Attach Leg (B) to Stretcher (C) using Bolt (D) by Allen Key (G) as below shown.

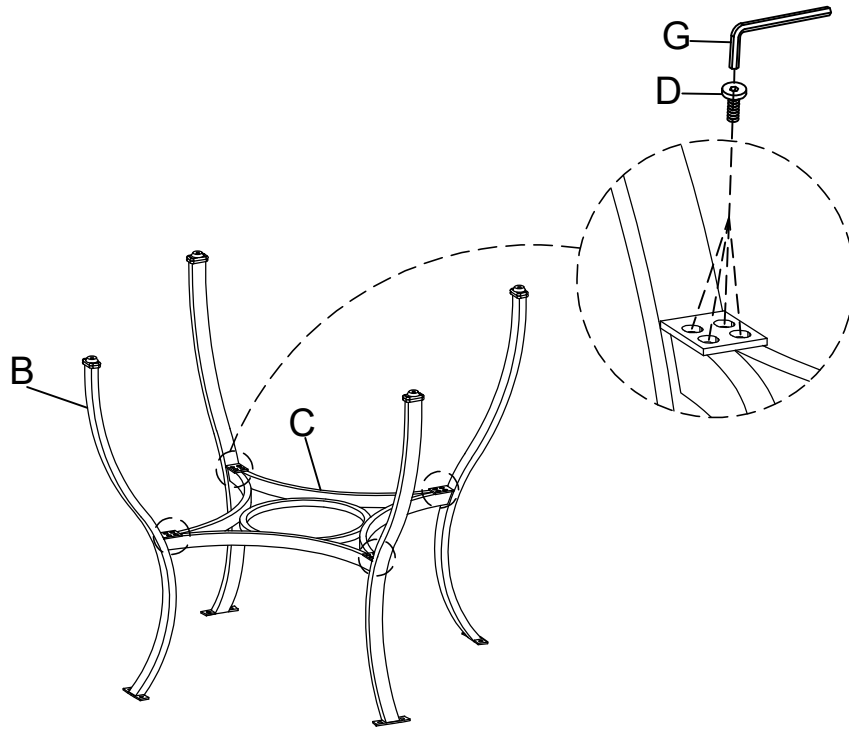

2 Attach assembled Leg (B) to Table Top (A) using Bolt (D), Lock Washer (E) and Flat Washer (F) by Allen Key (G) as below shown.

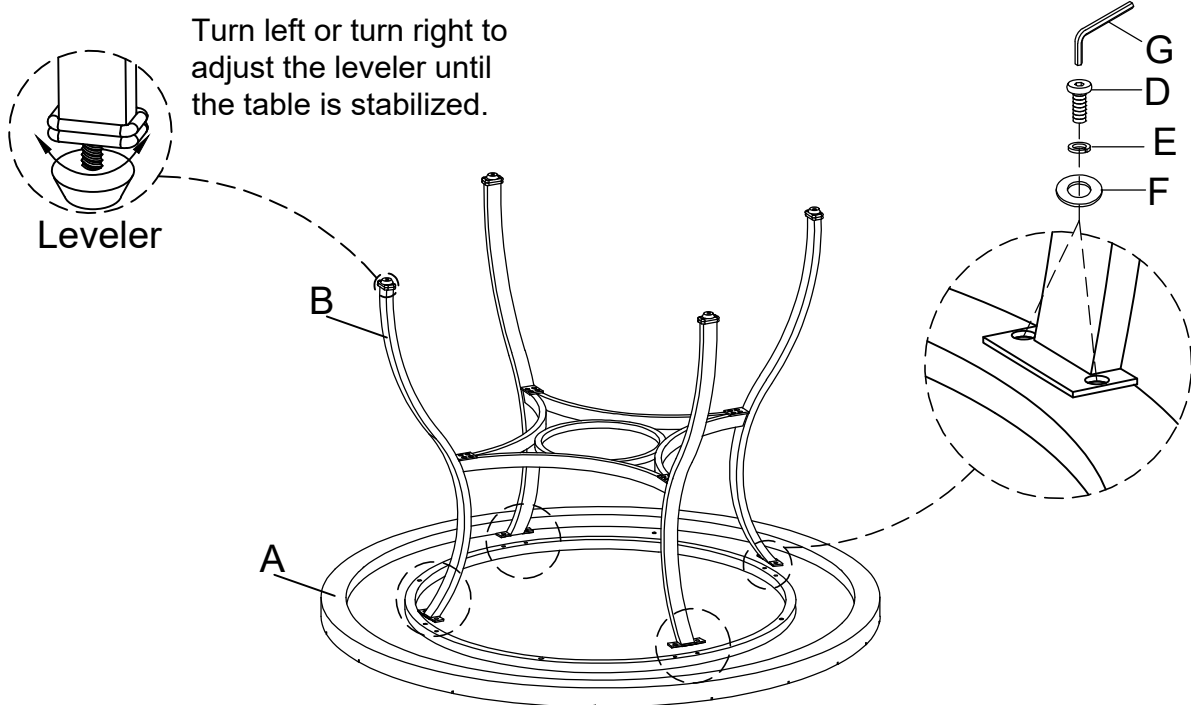

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.