


Twist Shaft to TURN ON and OFF

Please confirm that the LED light is correctly inserted into the battery, and make sure the light pin wire is on the outer side of the battery.

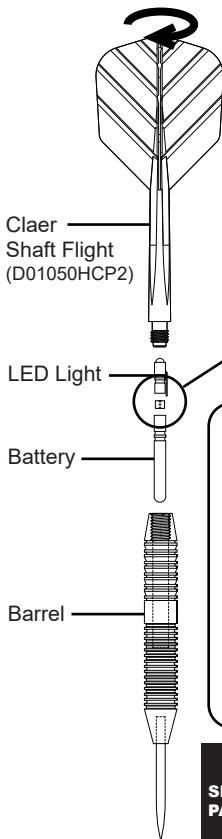

LED Light

Light Pin Wire

Battery

FAQ

1. Make sure you twist the shaft enough so the light is clearly on or off.
2. If the LED light cap falls off, it can be installed back into the battery.
3. If the LED turns on continuously and won't shut off, you may need to separate the light cap from the battery, pull the wire outward on the light cap so that it is on the outside of the battery when connected again.

SERVICE PARTS

DA1050-RP1	Red LED Light with Battery
DA1050-GP1	Green LED Light with Battery
DA1050-BP1	Blue LED Light with Battery
DA1050HCP2	Clear Shaft Flight

Please Do Not Return This Product To The Store!

Contact Escalade Sports customer service department at:

Phone: **1-800-467-1421** Toll-Free!

Mailing Address (correspondence only):

Escalade Sports

PO Box 889

Evansville, Indiana 47706-0889

E-mail: customerservice@escaladesports.com

Physical Location:

Escalade Sports

817 Maxwell Ave.

Evansville, Indiana 47711