



INSTRUCTION MANUAL

Counter Height Baker's Rack with Removable Wheels

Ver. 3 SKY6266 + SKY6267

(!) NOTICE

- Do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws, and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Do not use or store this item in the proximity of an open flame or flammable/combustible materials and chemicals.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warrant.
- This product is intended for residential use only.

17.6 LBS 44 LBS 5.5 LBS 28.6 LBS BASKET LOWER SHELF CAPACITY **UPPER SHELF TABLE TOP CAPACITY** CAPACITY CAPACITY 147 LBS TOTAL 2 PERSON UP TO 45 MIN. ASSEMBLY **ASSEMBLY**

TOOLS REQUIRED















HARDWARE

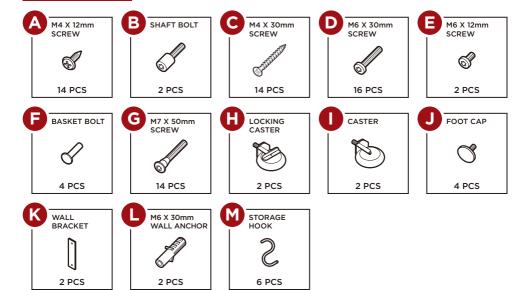

PARTS

2 PCS

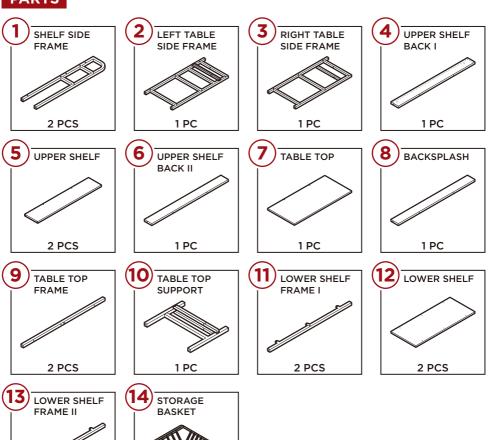


2 PCS

PRODUCT ASSEMBLY Please retain these instructions for future reference.




Attach two part 1 shelf side frames to one part 2 & 3 table side frames with two part D & part E screws. Set aside these assemblies.

NOTE: Insert the part D screws from the bottom of the shelf frames, through the table frame.

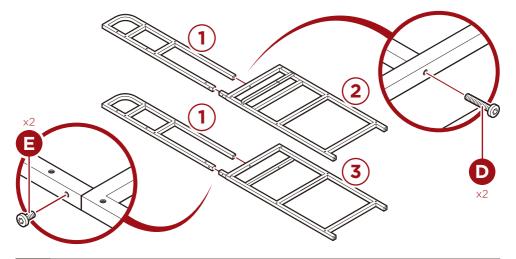


Locate one part 12 lower shelves and attach two part 11 Lower shelf frames with six part A screws.


Repeat to attach two part 13 shelf frames to one part 12 lower shelf. Set aside these assemblies.

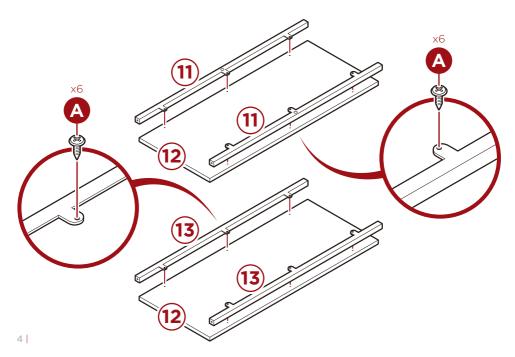

Locate the part 10 table top support and attach two part 9 table top frames with two part B shaft bolts. Set aside this assembly.

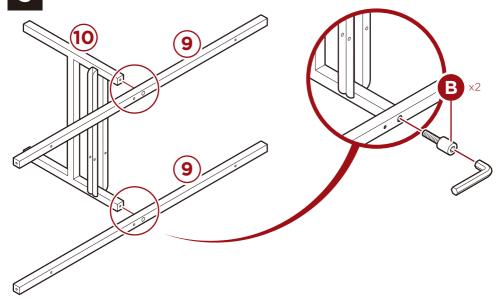


Attach one part 7 table top to one part 8 backsplash with two part C screws.

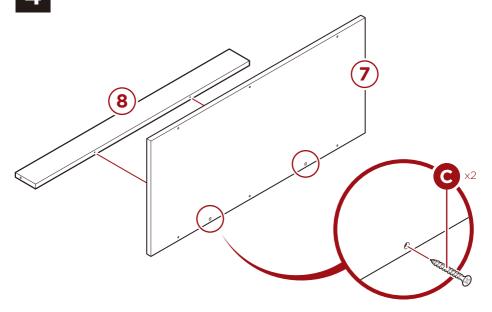




Attach the two part 9 table top frames (see step 3) to the part 7 table top with six part ${\it C}$ screws.

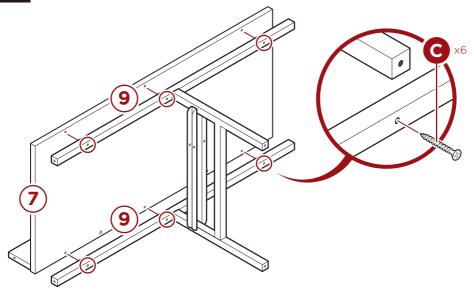


Attach the part 12 lower shelf assembly to the part 10 table top support with two part D screws.

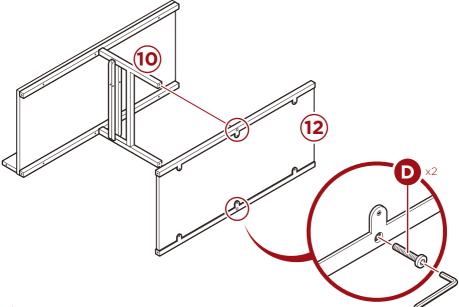




Attach one part 5 shelf to the part 4 upper shelf back with two part C screws.

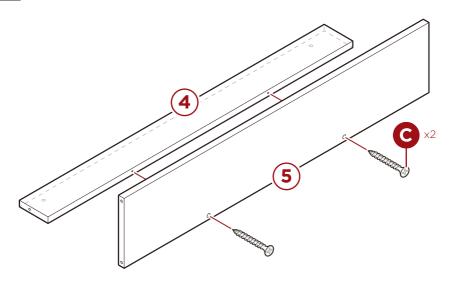

8

Attach one part 5 shelf to the part 6 upper shelf back with two part C screws.

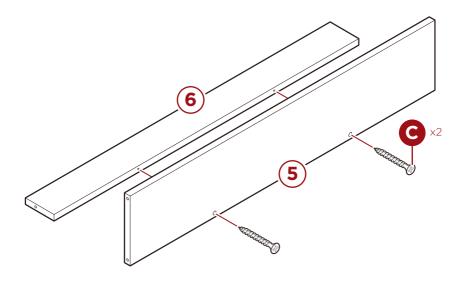




Locate the right shelf & side frame assembly (see step 1) and attach the two part 5 upper shelf assemblies with six part G screws.

Attach the part 7 table top assembly with two part D screws & one part G screw.

Attach the two part 12 lower shelf assemblies with four part D screws.

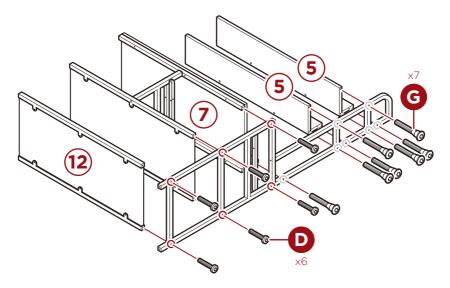


10

Locate the left shelf and side frame assembly (see step 1) and attach the two part 5 upper shelf assemblies with six part ${\sf G}$ screws.


Attach the part 7 table top assembly with two part D screws & one part G screw.

Attach the two part 12 lower shelf assemblies with four part D screws.

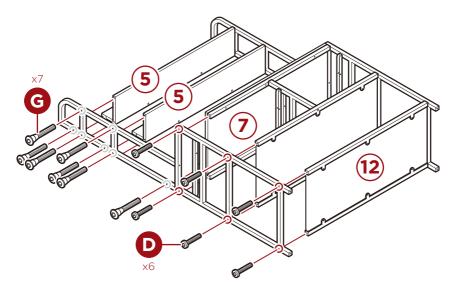


11

Attach four part H & I casters to the part 2 & 3 side frames.

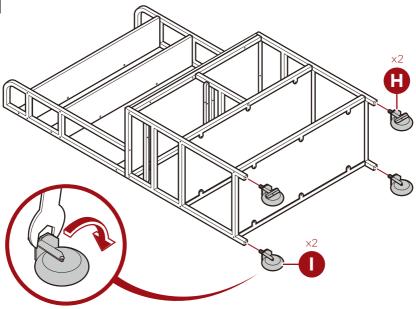

OR


Insert four part J foot pads.

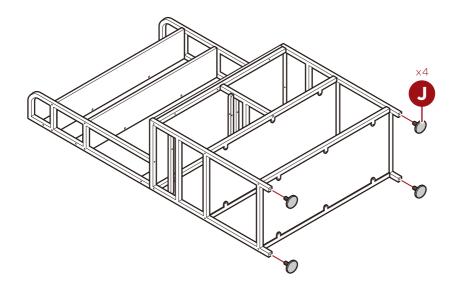

PRODUCT ASSEMBLY (OPTIONAL)




Attach the two part K wall brackets to the part 4 shelf back with two part A screws. Then attach the product to an existing structure with two part L wall anchors and two part C screws.

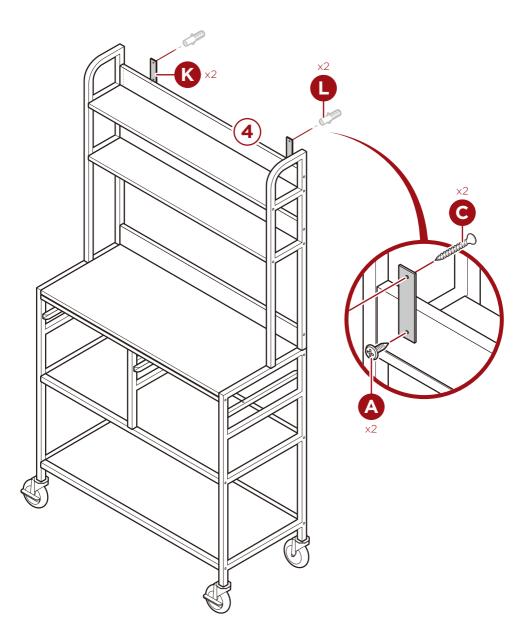

PRODUCT ASSEMBLY (OPTIONAL)



Hang six part M storage hooks on the side frame and attach two part 14 baskets with four part F basket bolts.

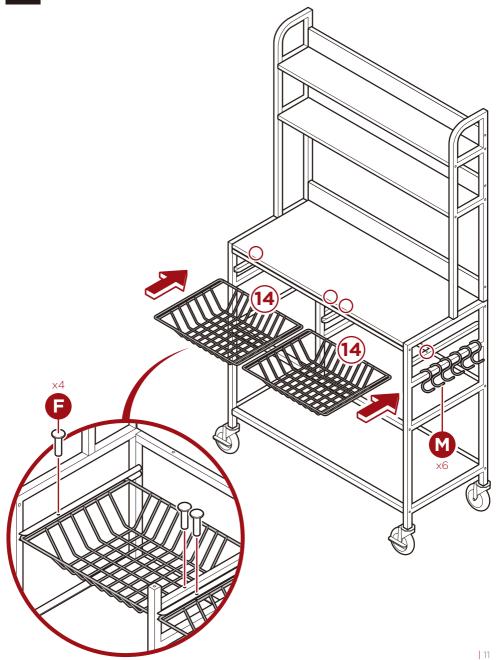



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com











Product Assembl



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.