 
 





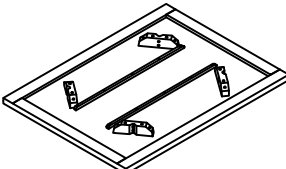





ASSEMBLY INSTRUCTION

 
5PC PACK DINING SET - DINING TABLE

A Table Top  1pc	B Table Leg  4pcs	C Upper Stretcher  1pc	D Lower Stretcher  1pc
E JCBC Bolt Ø5/16" x 2-3/8"  8pcs	F JCBC Bolt Ø5/16" x 2"  1pc	G Lock Washer Ø5/16" x 13mm  9pcs	H Flat Washer Ø5/16" x 19mm  9pcs
I Allen Key M4 x 60mm  1pc	J CSK-CB Screw #8 x 45mm  4pcs		

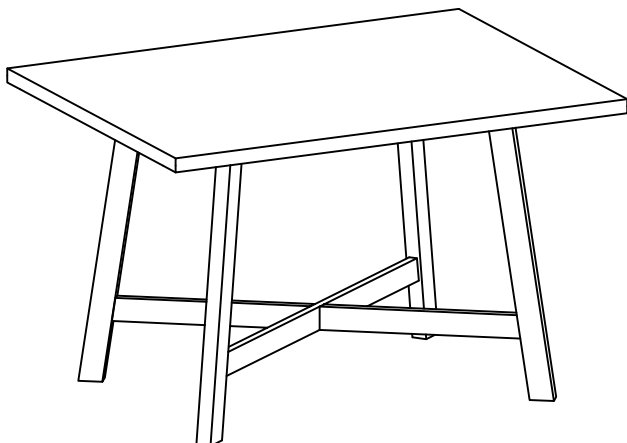  


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 - 1** Tighten the Upper Stretcher (C) and Lower Stretcher (D) by JCBC Bolt (F), Lock Washer (G) and Flat Washer (H) with Allen Key (I). Fully tighten bolt at this step.

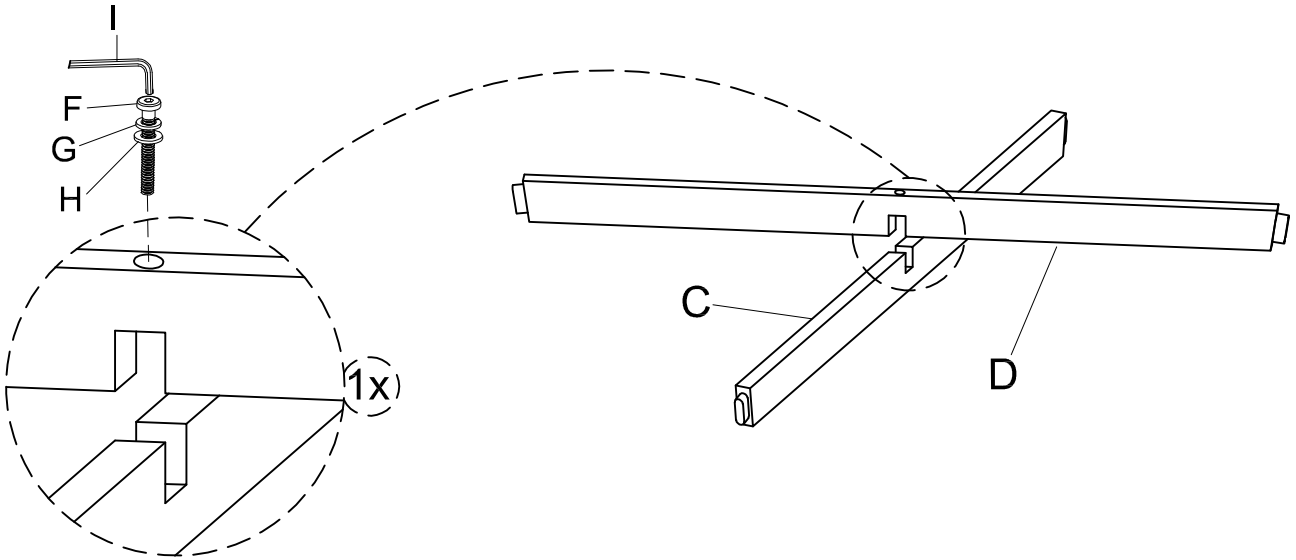


 - 2** Place the Table Top (A) upside down on a smooth carpet surface. Tighten the Table Top (A) and Table Leg (B) by JCBC Bolt (E), Lock Washer (G) and Flat Washer (H) with Allen Key (I). Do not fully tighten all the bolts at this step.

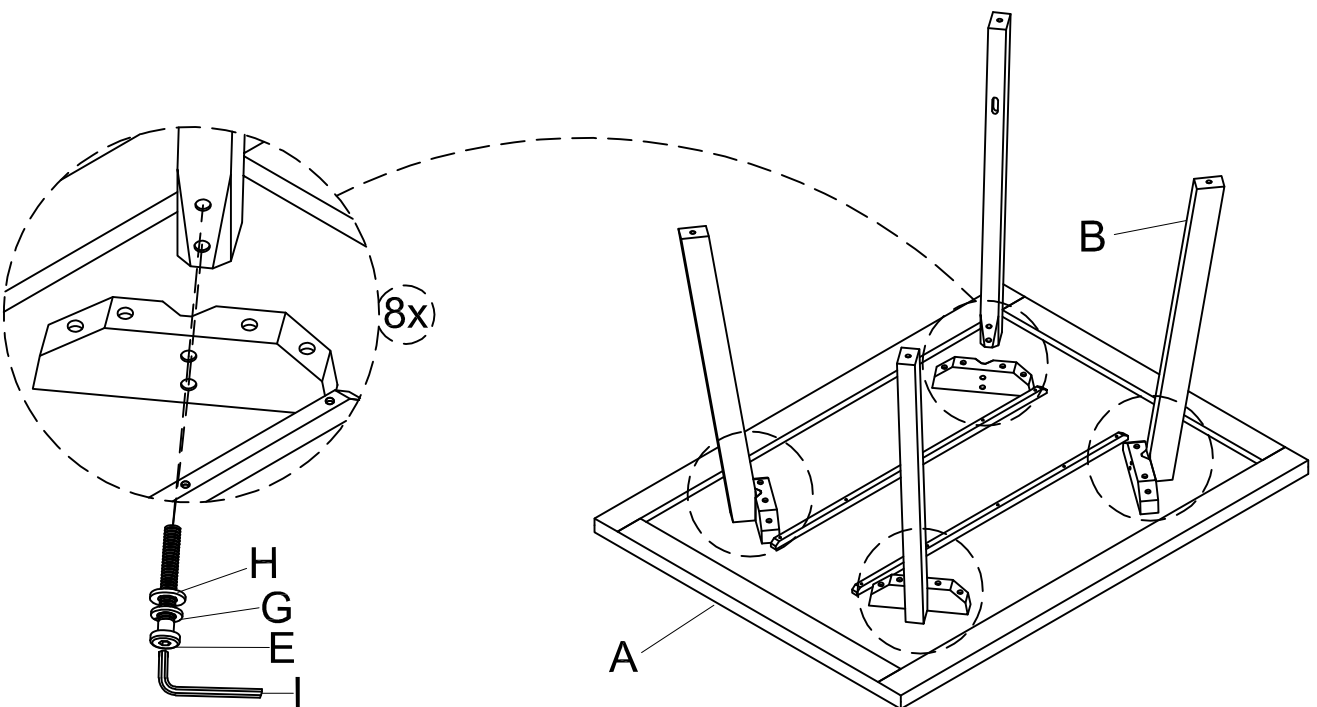

Take the Allen Key, and turn the bolts until the legs are secured.
Do not tighten completely. Stop when you feel you are adding force to tighten the bolt.

 - 3** Attach Stretcher (C&D) to Table Leg (B) using CSK-CB Screw (J) with screwdriver (not provided). Tighten all bolts and screws at this step.

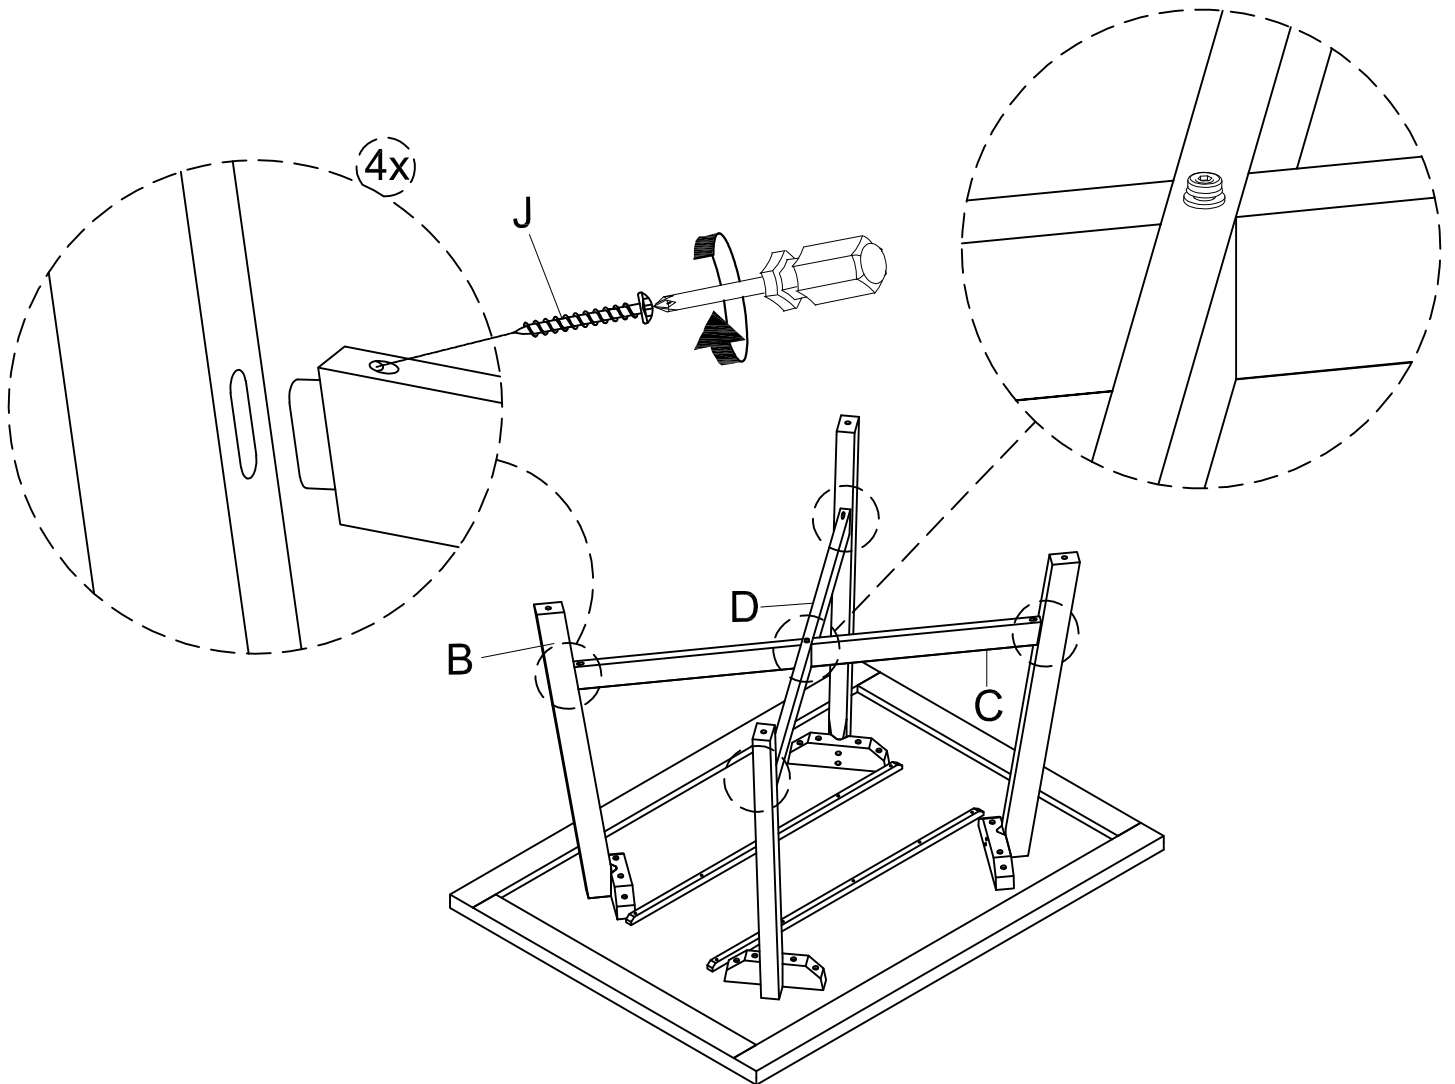


Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTION


5PC PACK DINING SET - DINING CHAIR

 A Chair Back

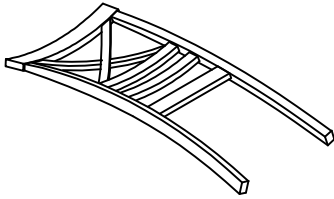


1pc

 B Chair Seat

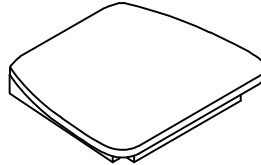


1pc

 C Front Leg

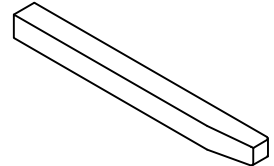


2pcs

 D JCBC Bolt
Ø1/4" x 3"




4pcs

 E JCBC Bolt
Ø1/4" x 2-3/8"




4pcs

 F JCBC Bolt
Ø1/4" x 1-3/8"



2pcs

 G Lock Washer
Ø1/4" x 10mm



10pcs

H Flat Washer
Ø1/4" x 19mm

 


10pcs

I Allen Key
M4 x 60mm




1pc

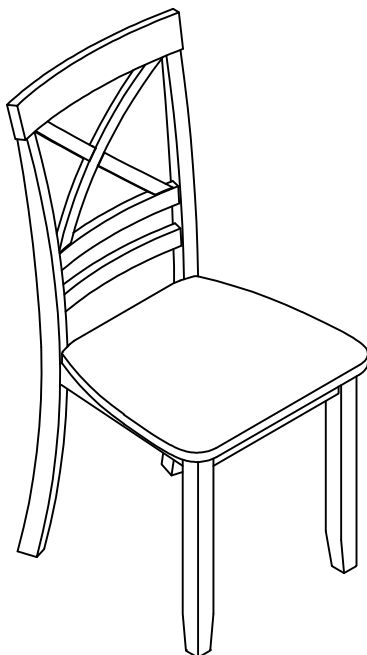


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

 1 Place the Chair Back (A) on a smooth carpet surface and attach the Chair Seat (B) by the Wood Tenon.

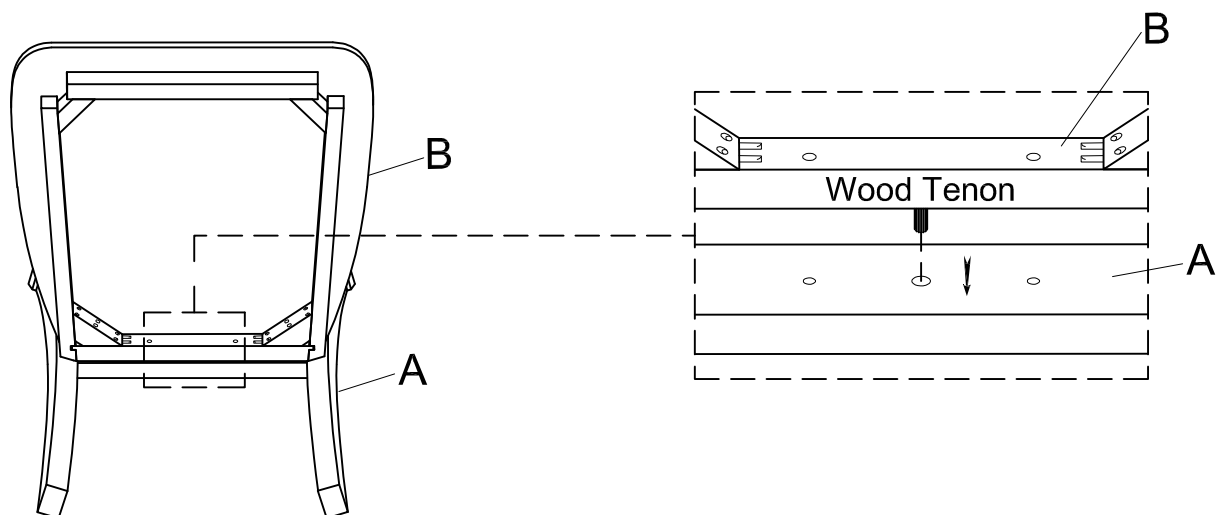


Take the Allen Key, and turn the bolts until the legs are secured.
Do not tighten completely. Stop when you feel you are adding force to tighten the bolt.

 2 Attach the Chair Seat (B) to Chair Back (A) using JCBC Bolt (D) & (F), Lock Washer (G) and Flat Washer (H) with Allen Key (I).

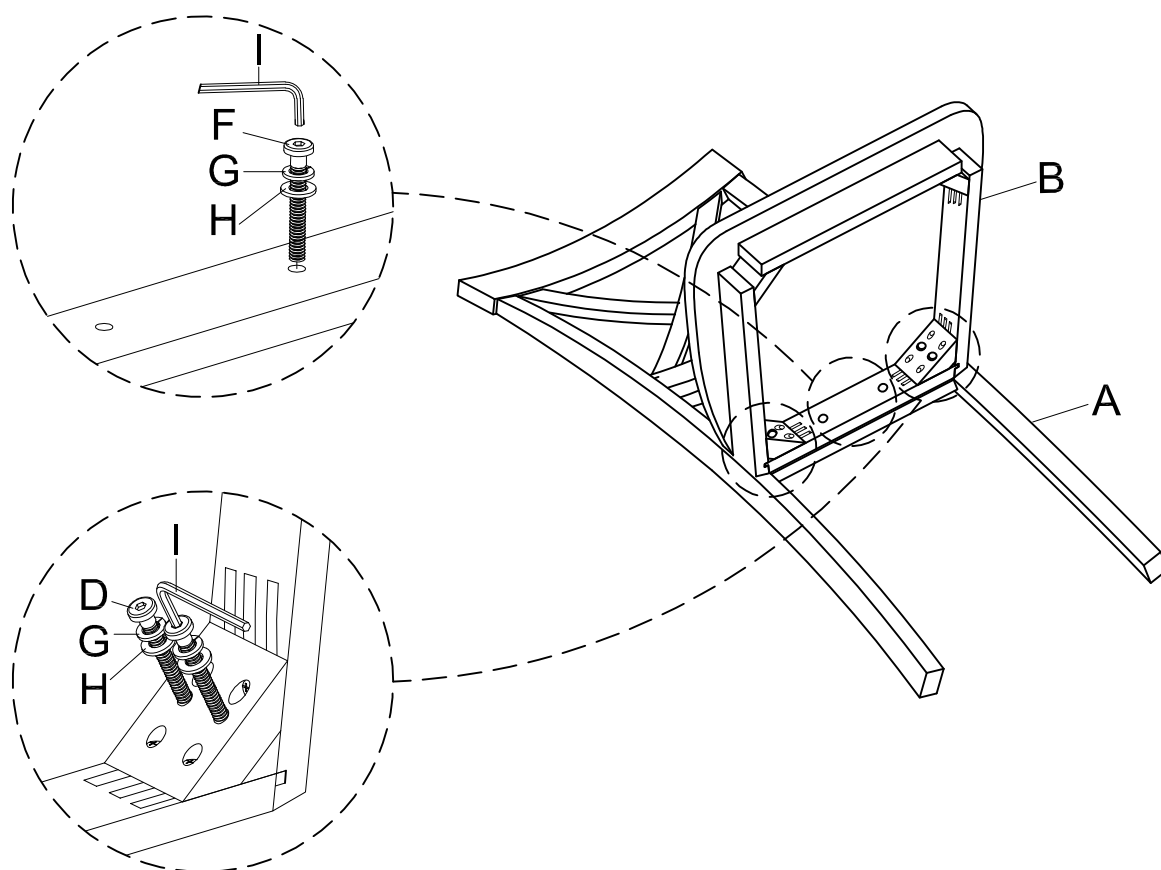

- 3** Attach Front Leg (C) to the corners of Chair Seat (B) using JCBC Bolt (E), Lock Washer (G) and Flat Washer (H) with Allen Key (I).

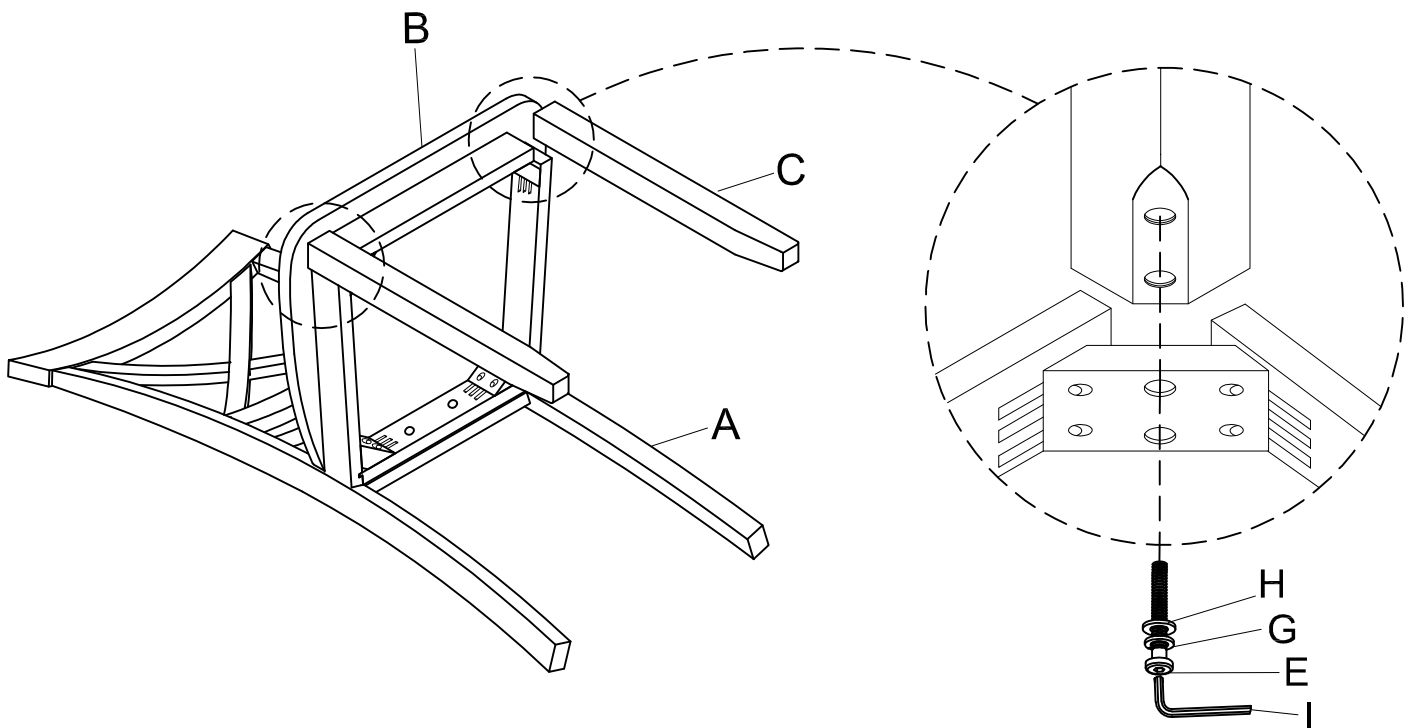

Stand chair up on an even surface and check that it is balanced. If there is a slight wobble, apply downward pressure in the corner where a leg is uneven. Keeping pressure in that corner, tighten all bolts. If balanced, apply downward pressure evenly in the center and tighten all bolts. Do not over-tighten beyond hole depth.

Helpful Tip: -Instead of applying downward pressure while reaching under to tighten bolts, have someone sit in the chair while you tighten the bolts.

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.