## homestyles<sup>®</sup>


# 6800-58 Seating


#### **IMPORTANT**

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

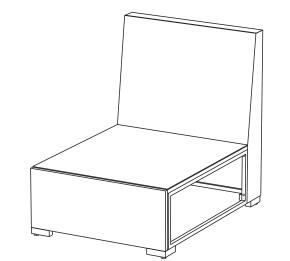

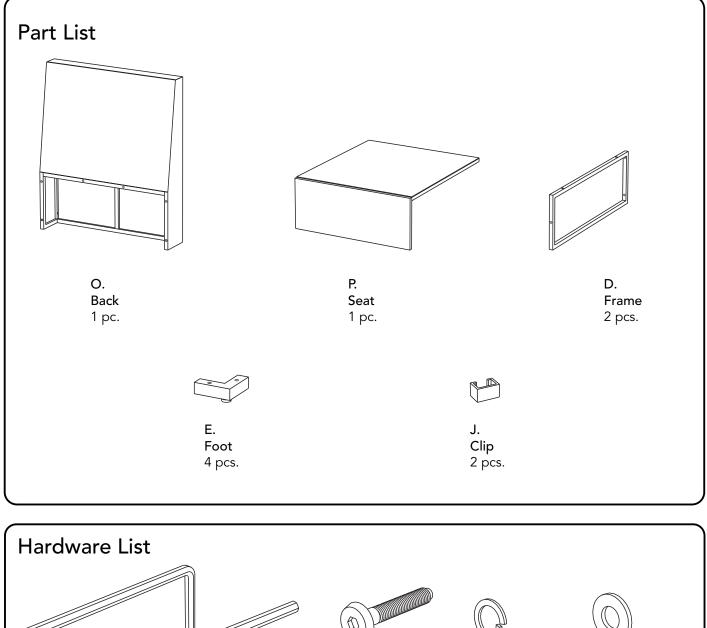

Hex Wrench 1 pc.

Small Hex Wrench 1 pc.

M6x35 Head Cap Bolt

20 pcs. (+1 extra)

Spring Washer

Flat Washer 20 pcs. (+1 extra) 20 pcs. (+1 extra)

homestyles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460

#### Assembly Instructions 2/5

#### IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

### Middle Unit

#### STEP 1

Attach Seat (P) to Back (O) with Head Cap Bolts, Spring Washers and Flat Washers, tightening bolts only halfway. (See Figure 1)


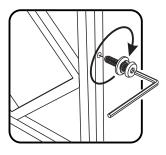


Figure 1

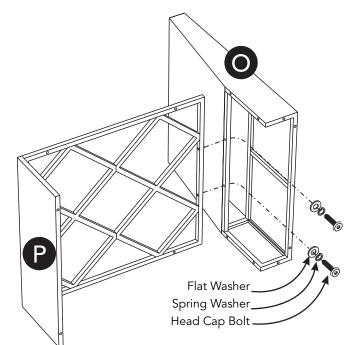


### STEP 2

Attach Frame (D) to unit with Head Cap Bolts, Spring Washers and Flat Washers, tightening bolts only halfway.

Flat Washers

#### Assembly Instructions 3/5



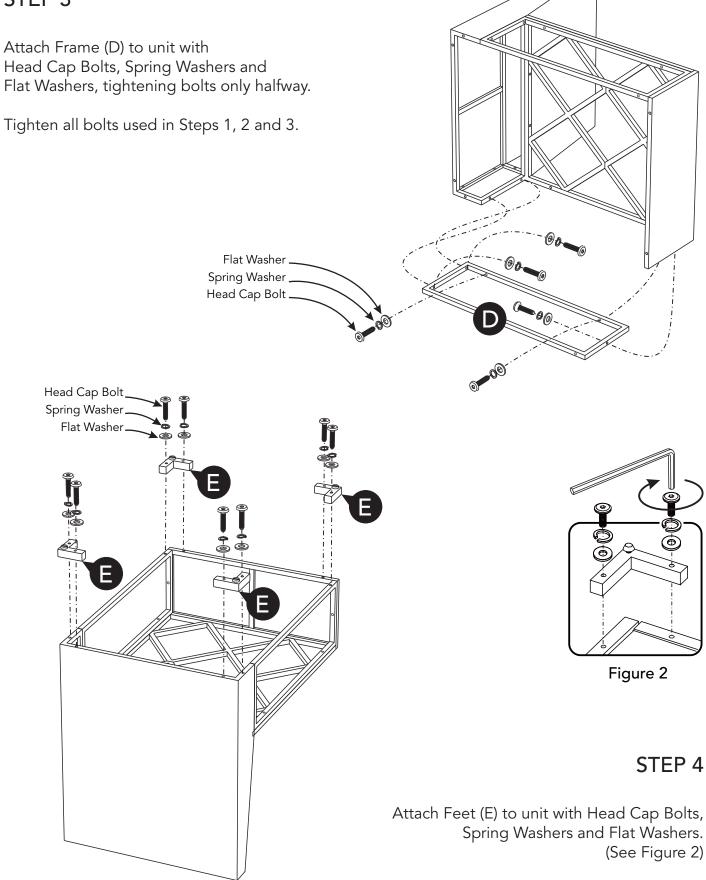

#### Assembly Instructions 4/5


For a sofa, follow instructions in 6800-57 carton, then complete Steps 5 and 6.

For a 5, 6 or 7 seat sectional, follow instructions in 6800-401 and 6800-402 cartons.

#### Sofa

#### STEP 5

Attach left unit, middle unit and right unit with Clips (J). (See Figure 3)

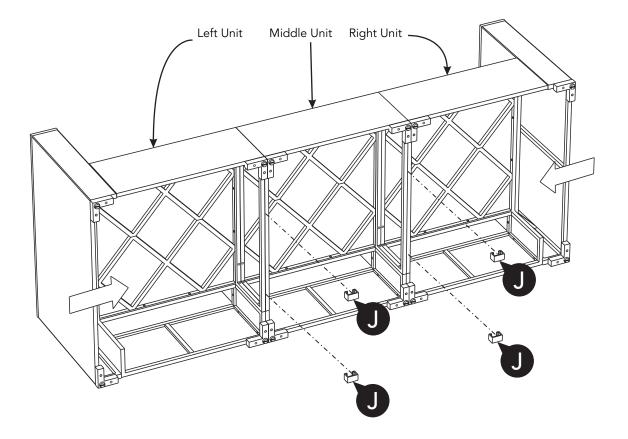


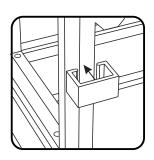


Figure 3

#### Assembly Instructions 5/5



#### STEP 6

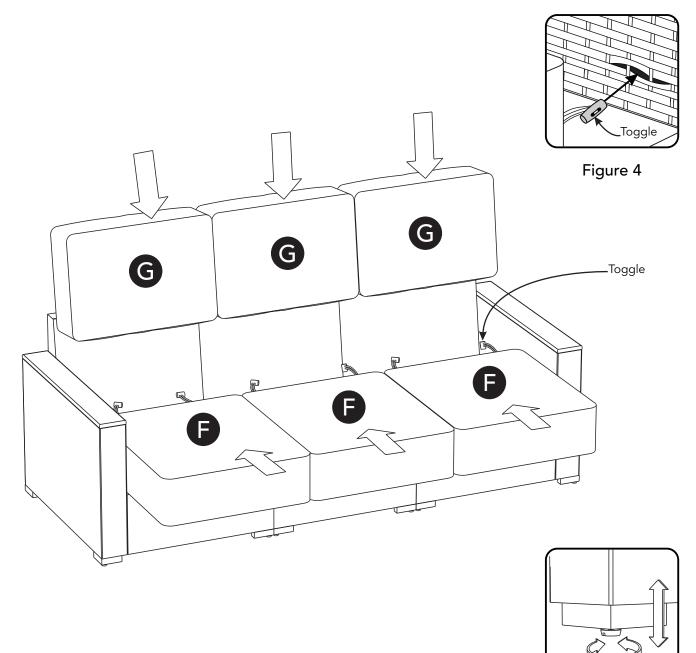

Three 6800-CUS cartons are also needed for this step.

Turn unit to its upright position.

Attach Seat Cushions (F) to unit by pushing toggles through weaving in back of unit. (See Figure 4)

Place Back Cushions (G) into position.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 5)

# CARE INSTRUCTIONS

# **NEVER**

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

# NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



**home**styles will provide replacements free of charge for missing or damaged parts within 1 year of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

**home**styles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460