


Dresser

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

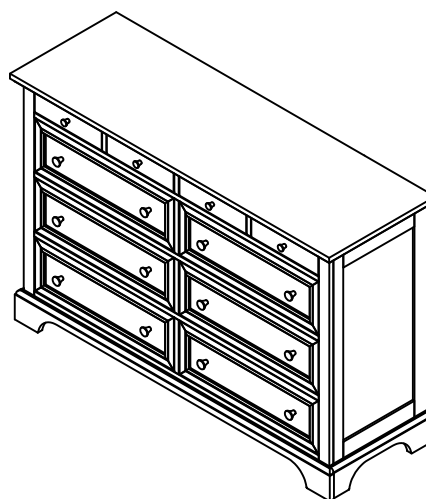

Part List

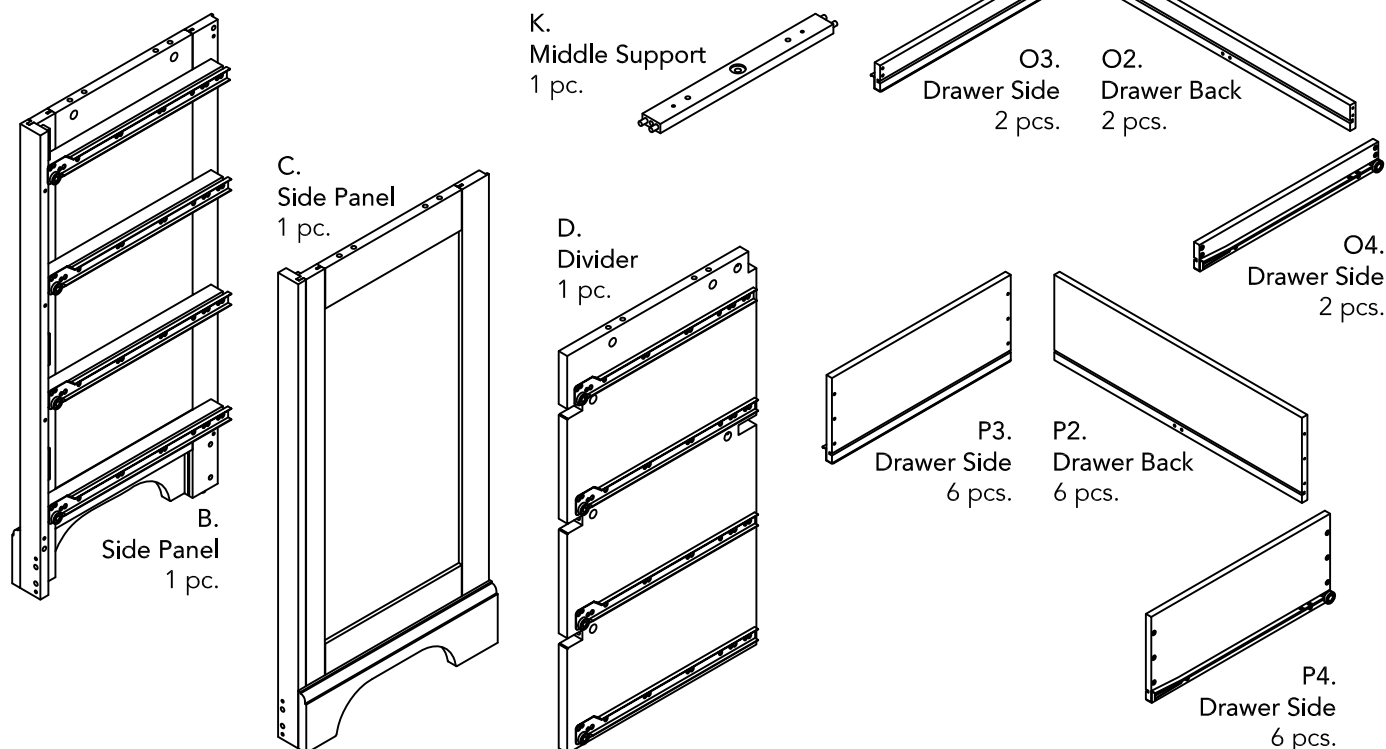

Hardware List



Cam Lock Screw
27 pcs. (+4 extra)



Cam Lock
27 pcs. (+4 extra)



1 1/2" Round Head
Screw (M4x38)
4 pcs. (+1 extra)



1 1/4" Round Head
Screw (M4x32)
10 pcs. (+1 extra)



1/2" Round Head
Screw (M3x13)
28 pcs. (+1 extra)



1 1/4" Flat Head
Screw (M3x32)
88 pcs. (+1 extra)



3/4" Flat Head
Screw (M3x19)
48 pcs. (+1 extra)



Large Pull Handle
12 pcs.



Small Pull Handle
4 pcs.



Machine Screw
(5/32"x3/4")
16 pcs.



Wooden Dowel
12 pcs. (+1 extra)



Flat Washer
6 pcs. (+1 extra)

Carton 88 5531 431 is also needed for assembly.


Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/10


IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

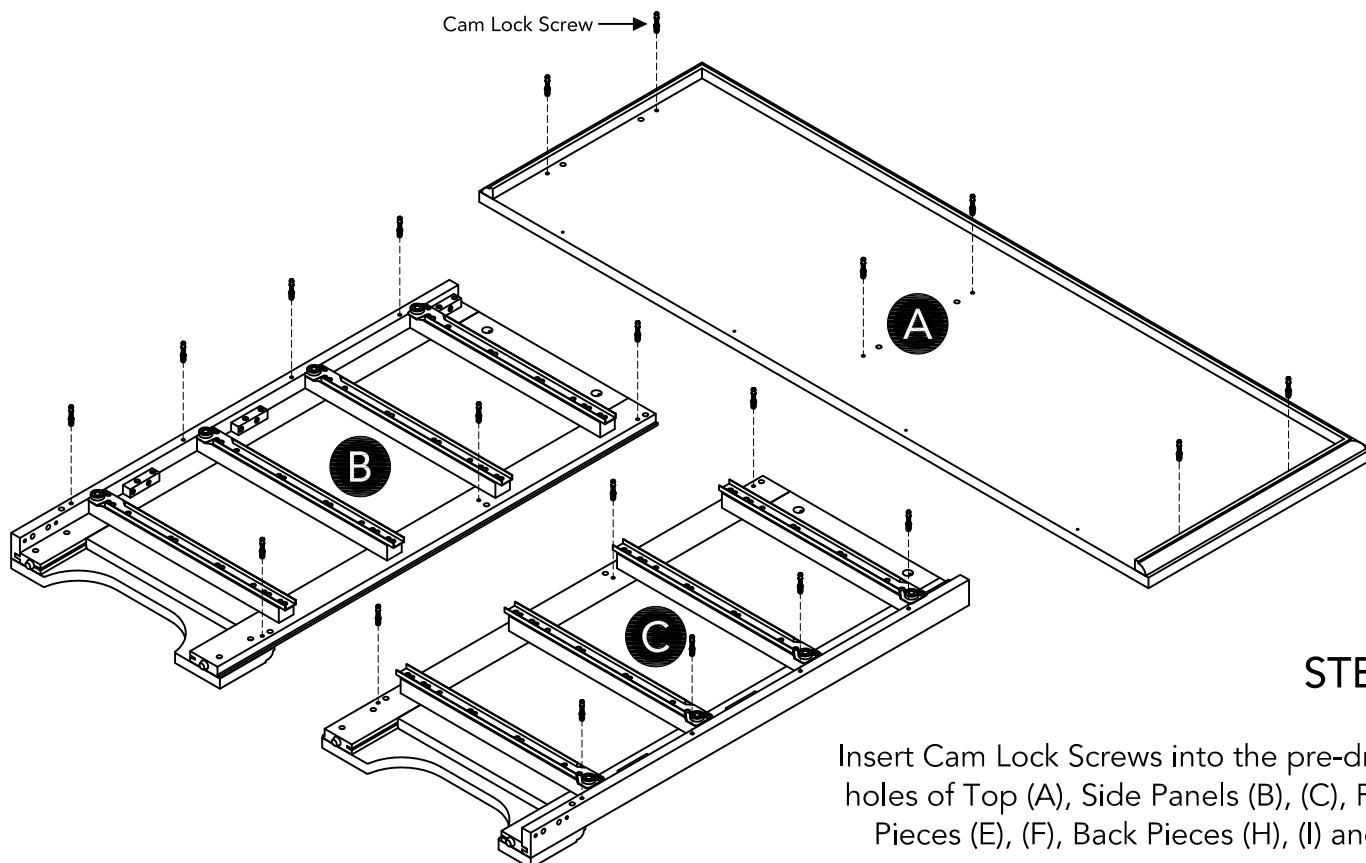


STEP 1

Insert Cam Lock Screws into the pre-drilled holes of Top (A), Side Panels (B), (C), Front Pieces (E), (F), Back Pieces (H), (I) and (J).

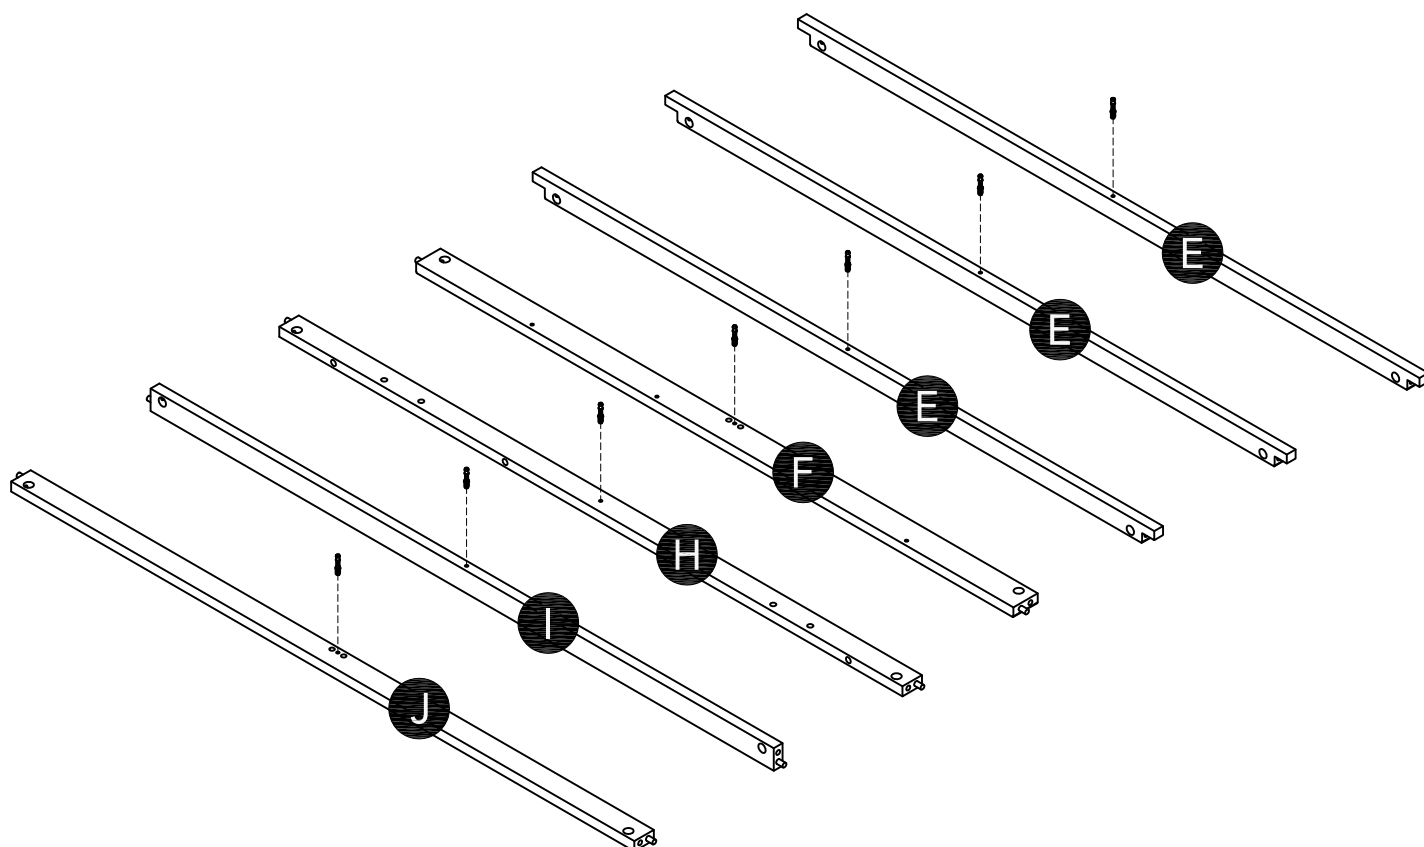


STEP 2

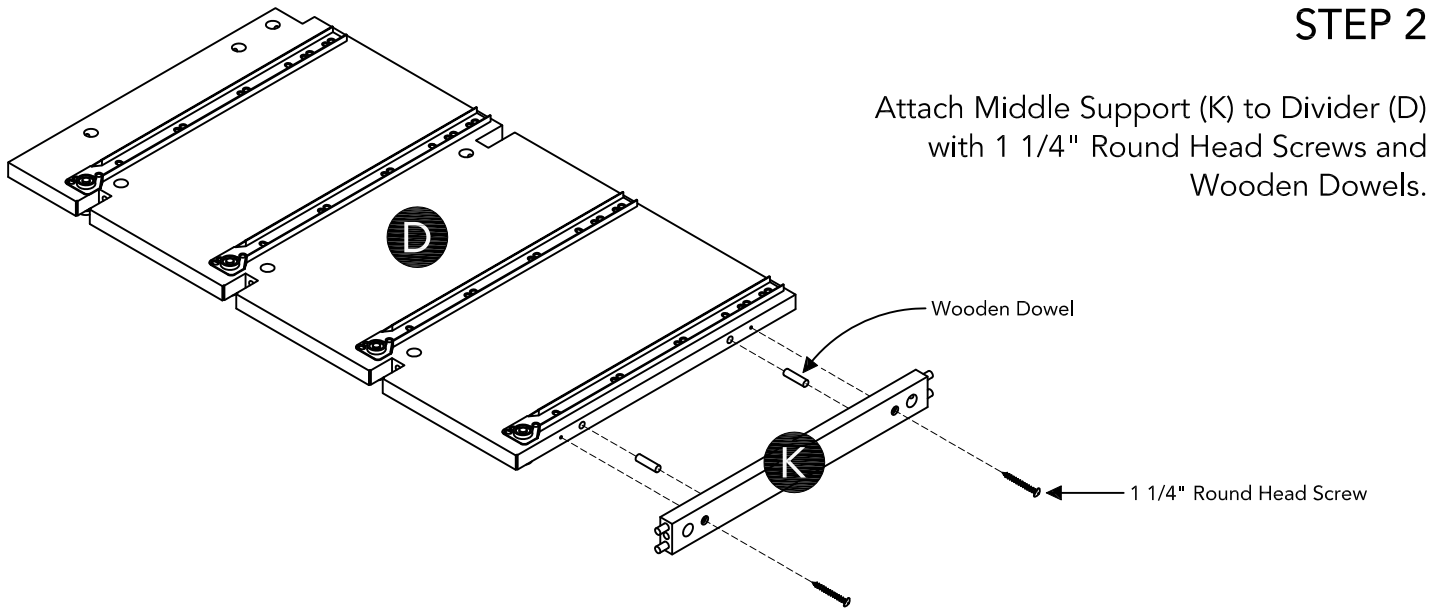

STEP 3

Attach Front Pieces (E), (F), Back Pieces (H), (I) and (J) to unit with Cam Locks.
(See Figure 1)


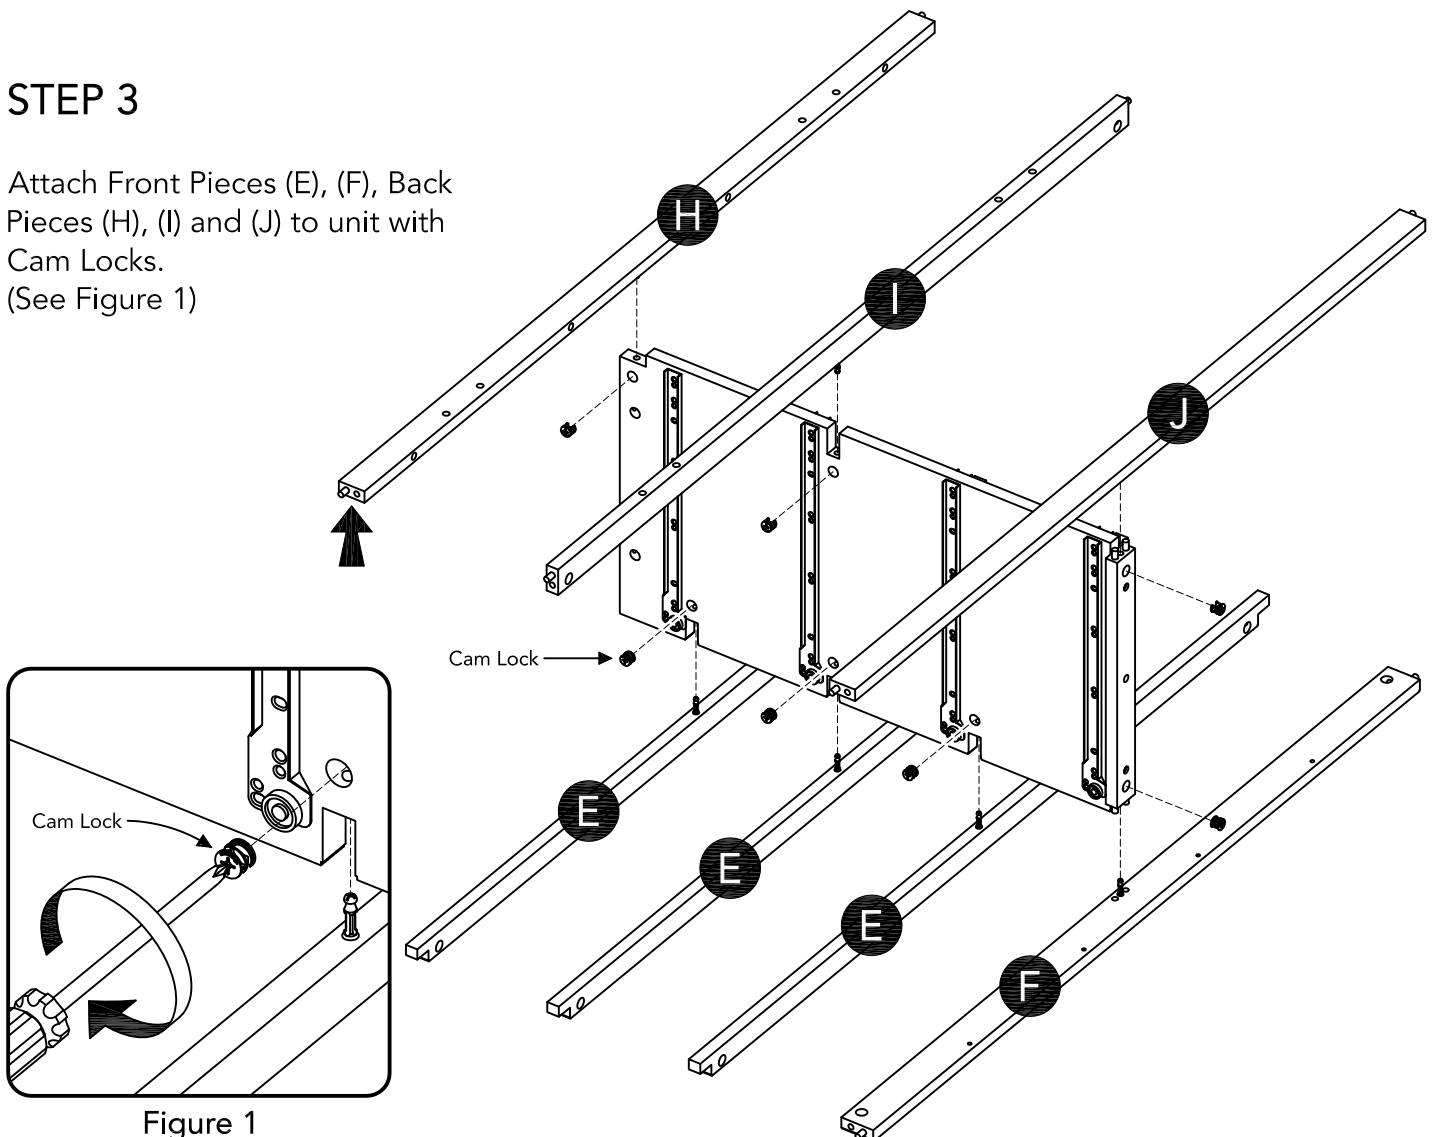


Assembly Instructions 4/10

STEP 4

Attach Side Panels (B) and (C) to unit with Cam Locks.

Attach Center Leg (L) to unit.

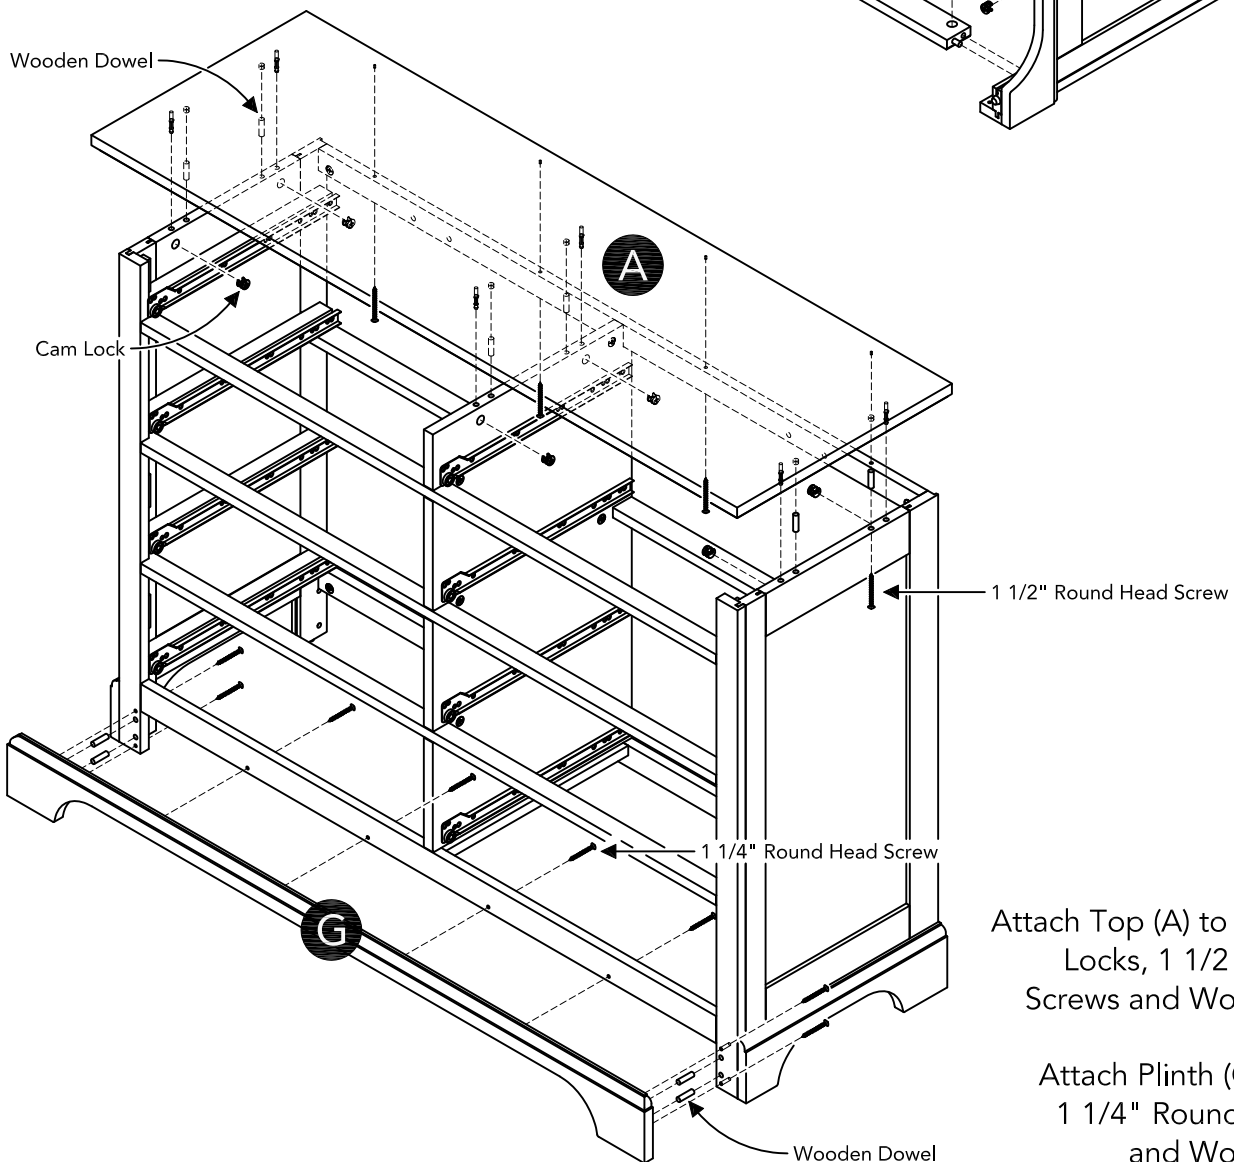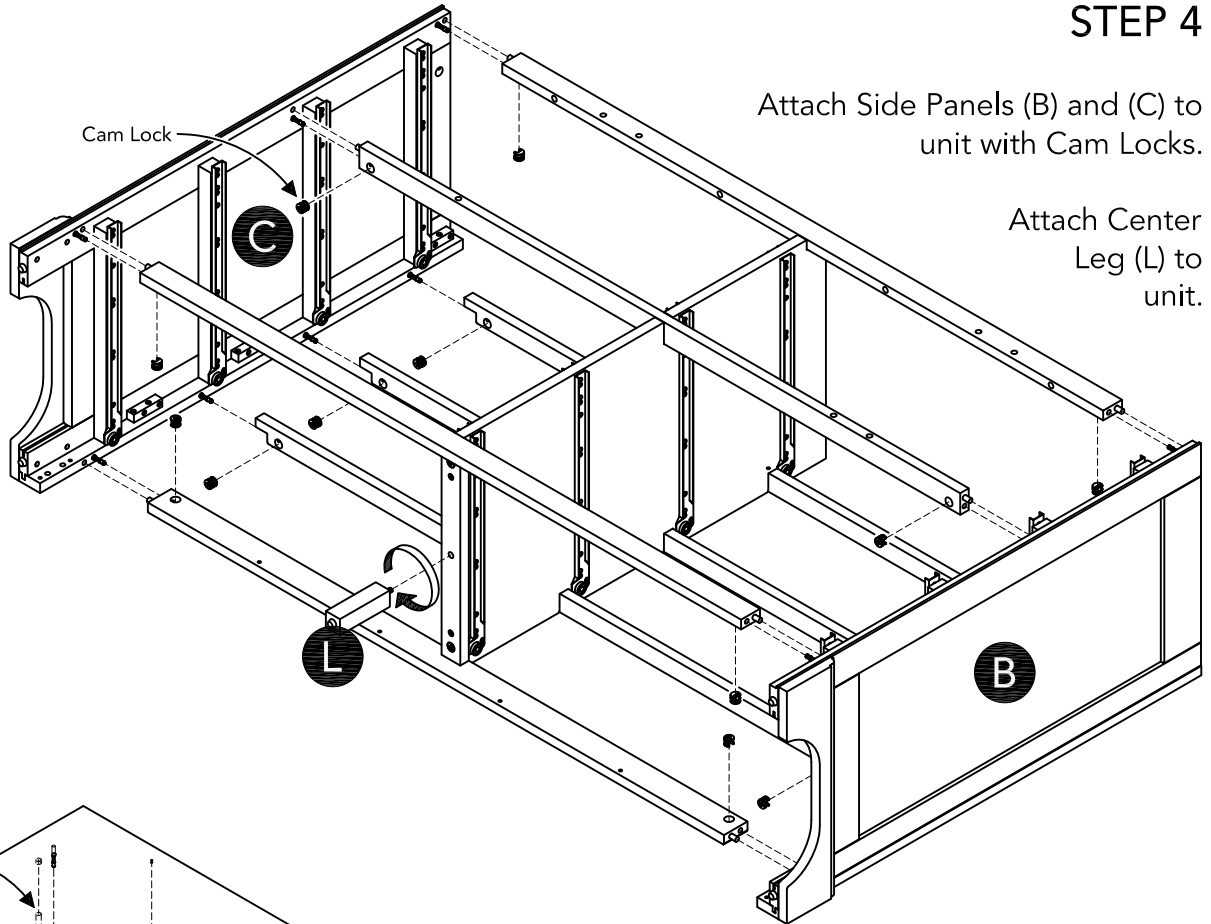

STEP 5

Attach Top (A) to unit with Cam Locks, 1 1/2" Round Head Screws and Wooden Dowels.

Attach Plinth (G) to unit with 1 1/4" Round Head Screws and Wooden Dowels.

STEP 6

To level the unit, adjust the adjustable levelers on the bottom of the legs.

Note: Unit must be level to work properly.
(See Figure 2)


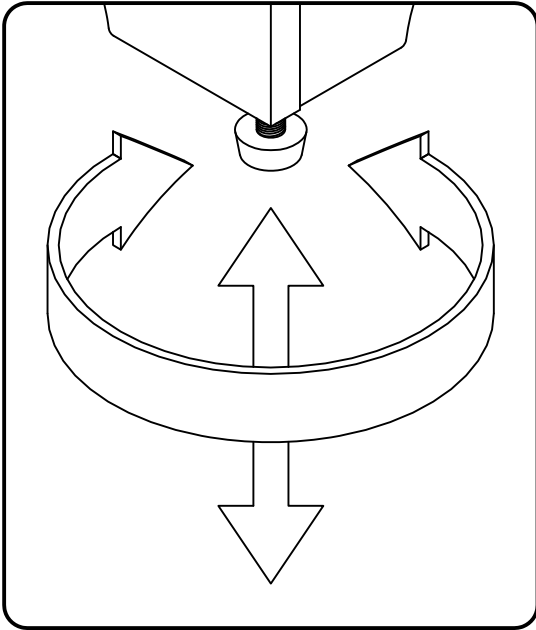


Figure 2

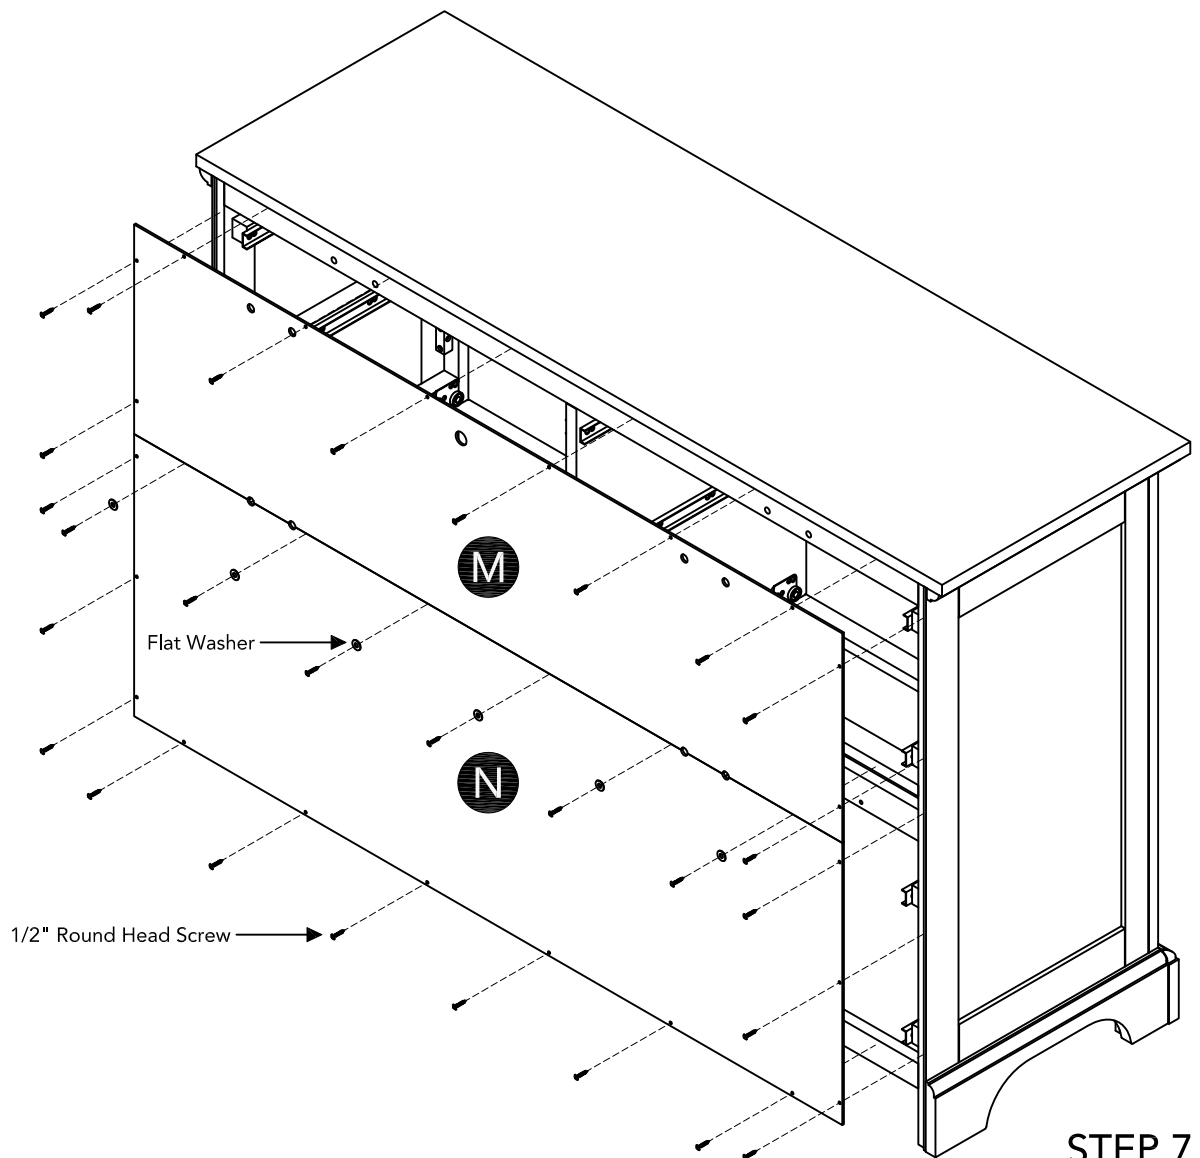

STEP 7

Attach Back Panels (M) and (N) to unit using 1/2" Round Head Screws and Flat Washers.

Assembly Instructions 6/10

IMPORTANT

- To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 8

Place the unit at desired location.

Mark wall with pencil to show position of hole in Back Panel (M). (See Figure 3)

Move unit.

Drill a 3/8" hole in wall 2 1/2" below mark.

Insert Anchor into the wall hole and attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 4)

Move unit back into place and insert Tipover Restraint into unit through hole in Back Panel (M). (See Figure 5)

Screw Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 6)

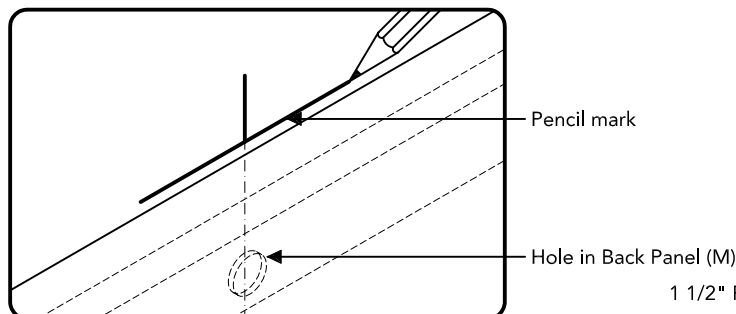
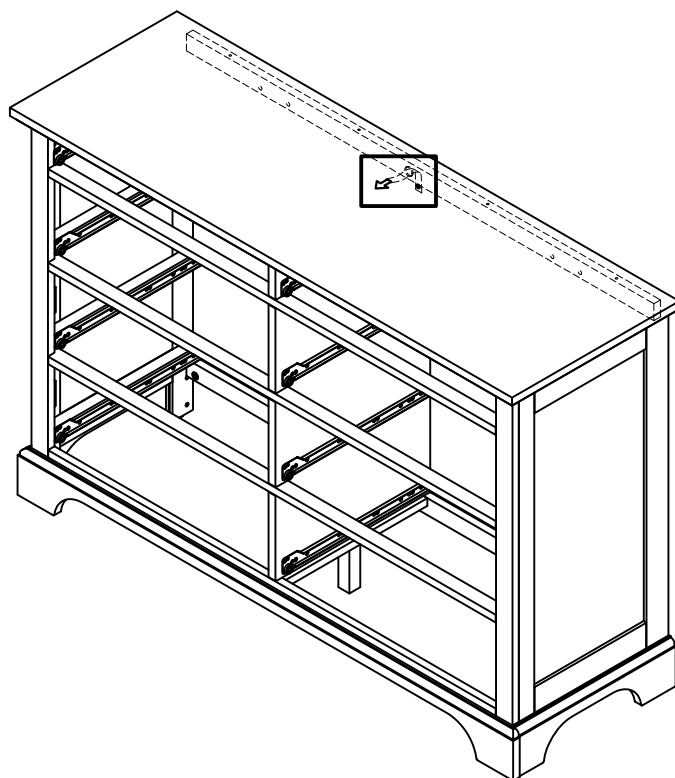


Figure 3

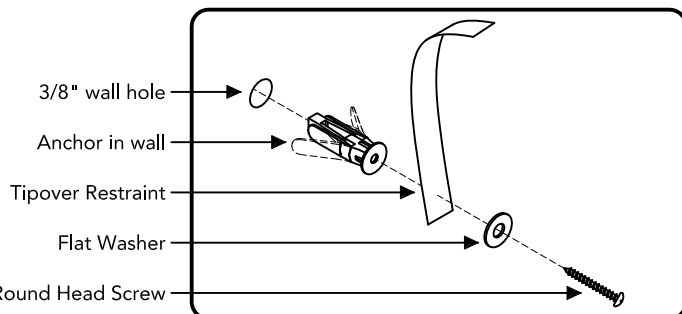


Figure 4

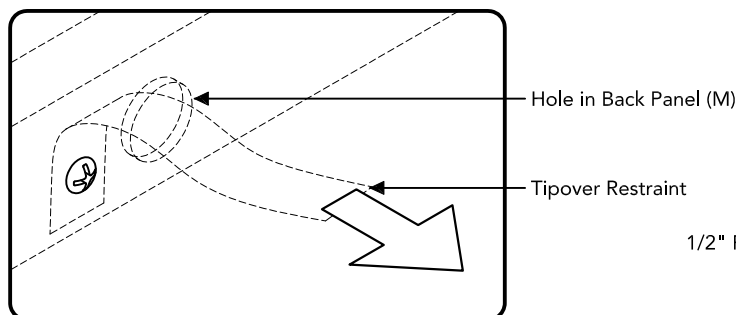


Figure 5


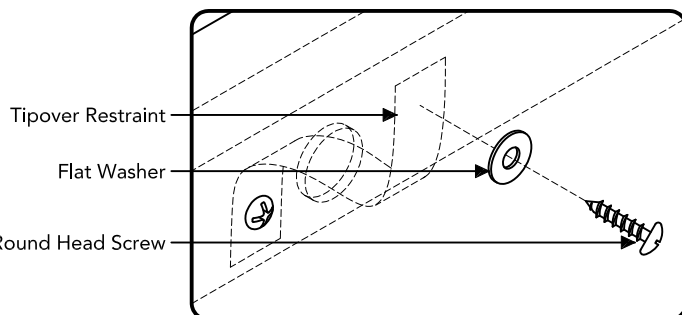


Figure 6

 Hardware List



Tipover Restraint
1 pc.



Anchor
1 pc. (+1 extra)



(M3x38)
1 1/2" Round Head Screw
1 pc.




(M3x13)
1/2" Round Head Screw
1 pc. (+1 extra)




Flat Washer
2 pcs. (+1 extra)

Drawer (O)

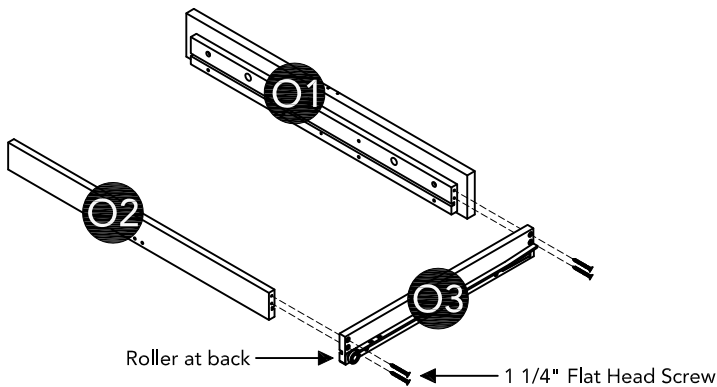

STEP 9

Attach Drawer Side (O3) to Drawer Front (O1) and Drawer Back (O2) with 1 1/4" Flat Head Screws.

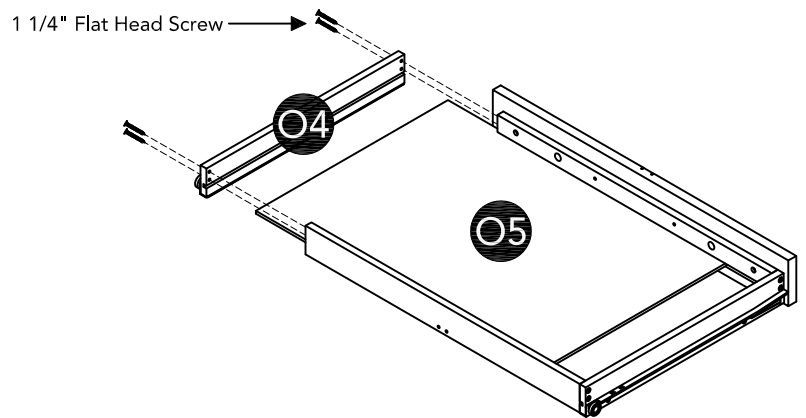



STEP 10

Insert Drawer Bottom (O5) into the groove.

Attach Drawer Side (O4) to unit with 1 1/4" Flat Head Screws.

STEP 11

Attach Support (O6) to unit with 1 1/4" Flat Head Screws.



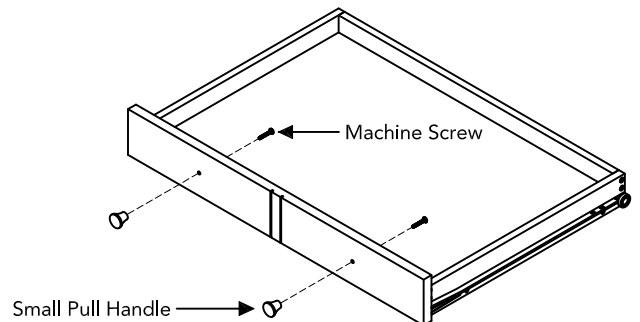
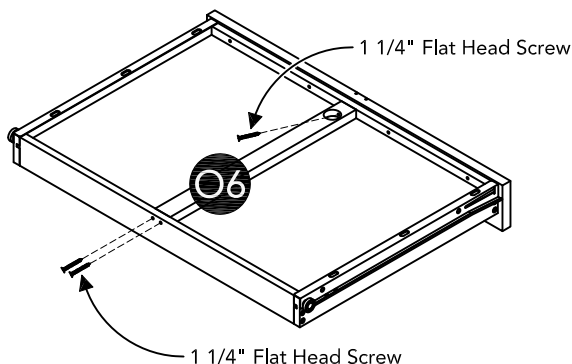


STEP 12


Attach Small Pull Handles with Machine Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

Part List

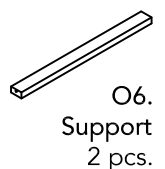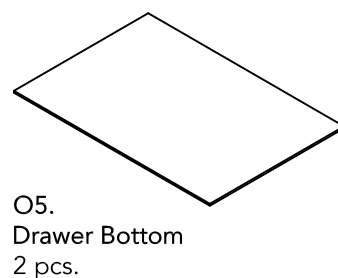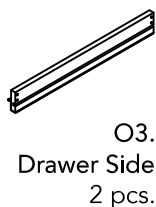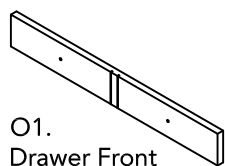

Drawer (P)

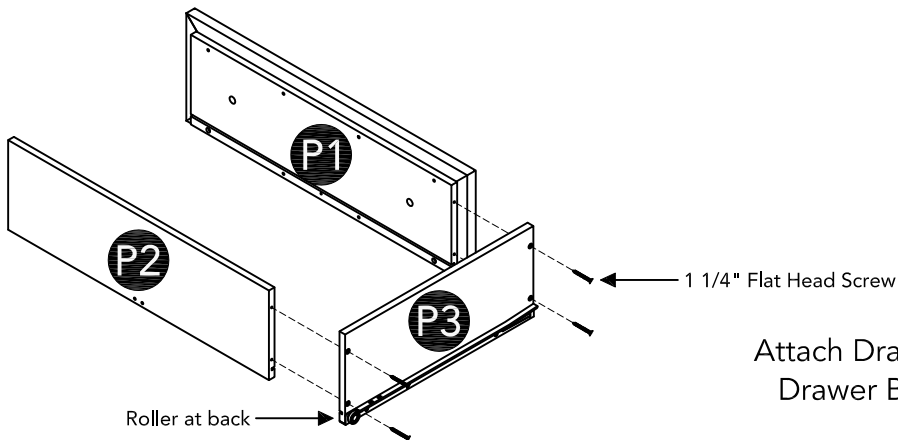


STEP 13

Attach Drawer Side (P3) to Drawer Front (P1) and Drawer Back (P2) with 1 1/4" Flat Head Screws.

STEP 14



Insert Drawer Bottom (P5) into the groove.

Attach Drawer Side (P4) to unit with 1 1/4" Flat Head Screws.

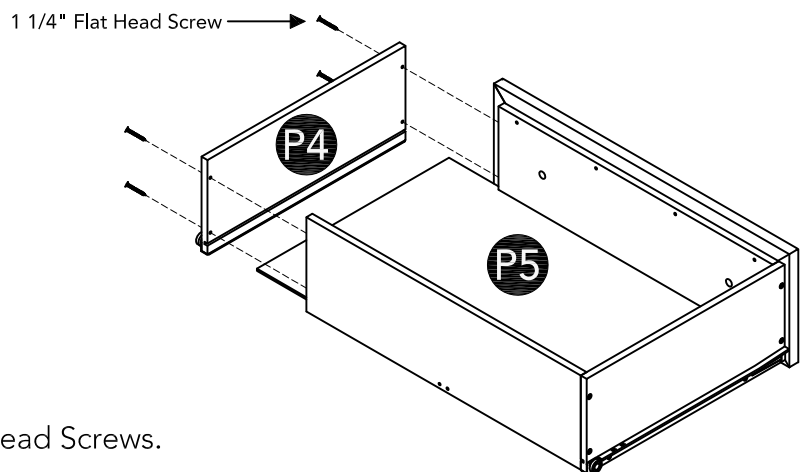

STEP 15

Attach Support (O6) to unit with 1 1/4" Flat Head Screws.





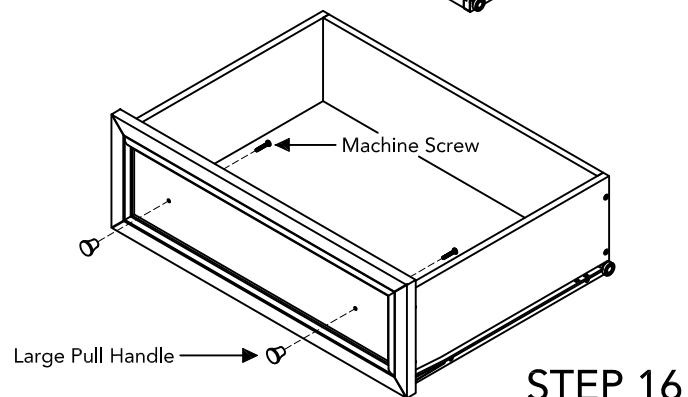
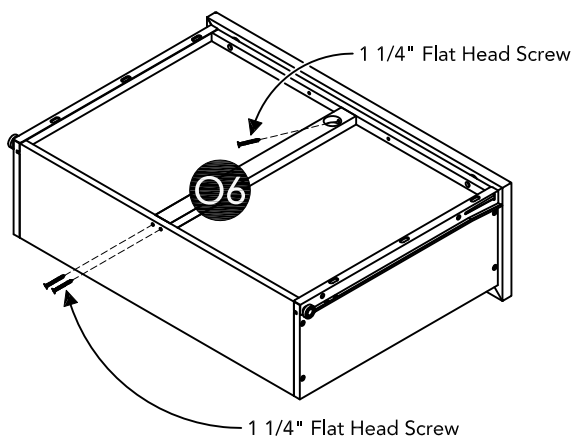


STEP 16

Attach Large Pull Handles with Machine Screws.



Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

Part List

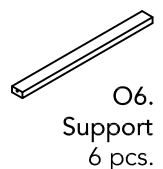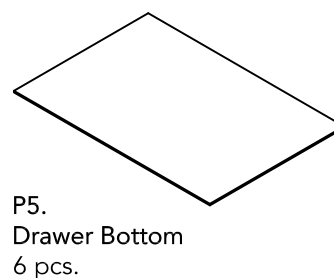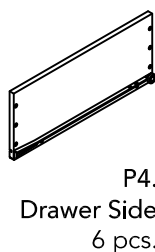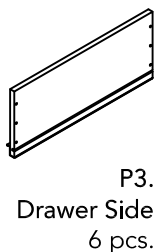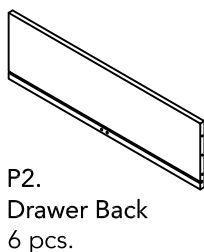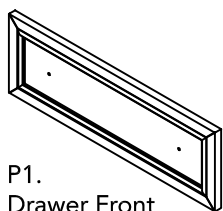

STEP 17

Loosen slightly the two screws pre-installed on the back of the drawer fronts.

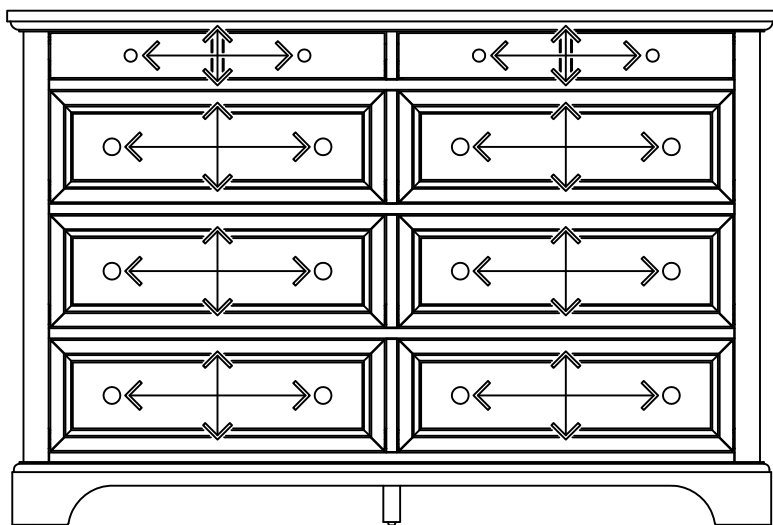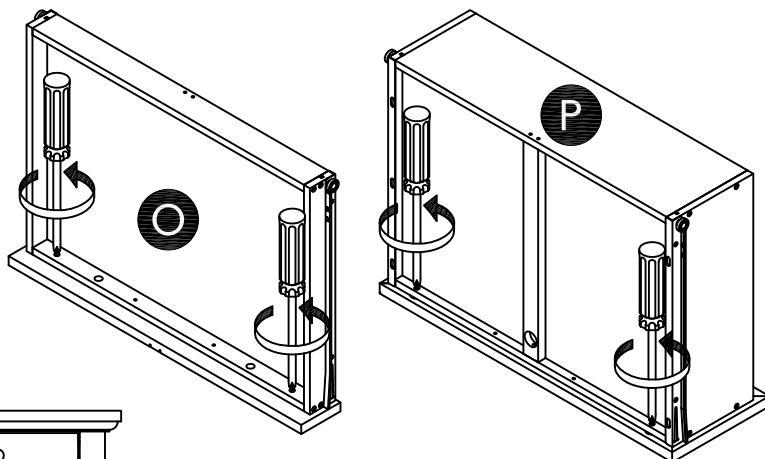


STEP 18

Insert the drawers into the unit, then adjust the drawer front panels left or right and up or down until the drawer gaps look proportional.

STEP 19


Pull the drawers open slowly and re-tighten the screws from Step 17. Make sure the front panels do not move and lock the drawer front panels into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws on this page must be installed to complete the drawer assembly.

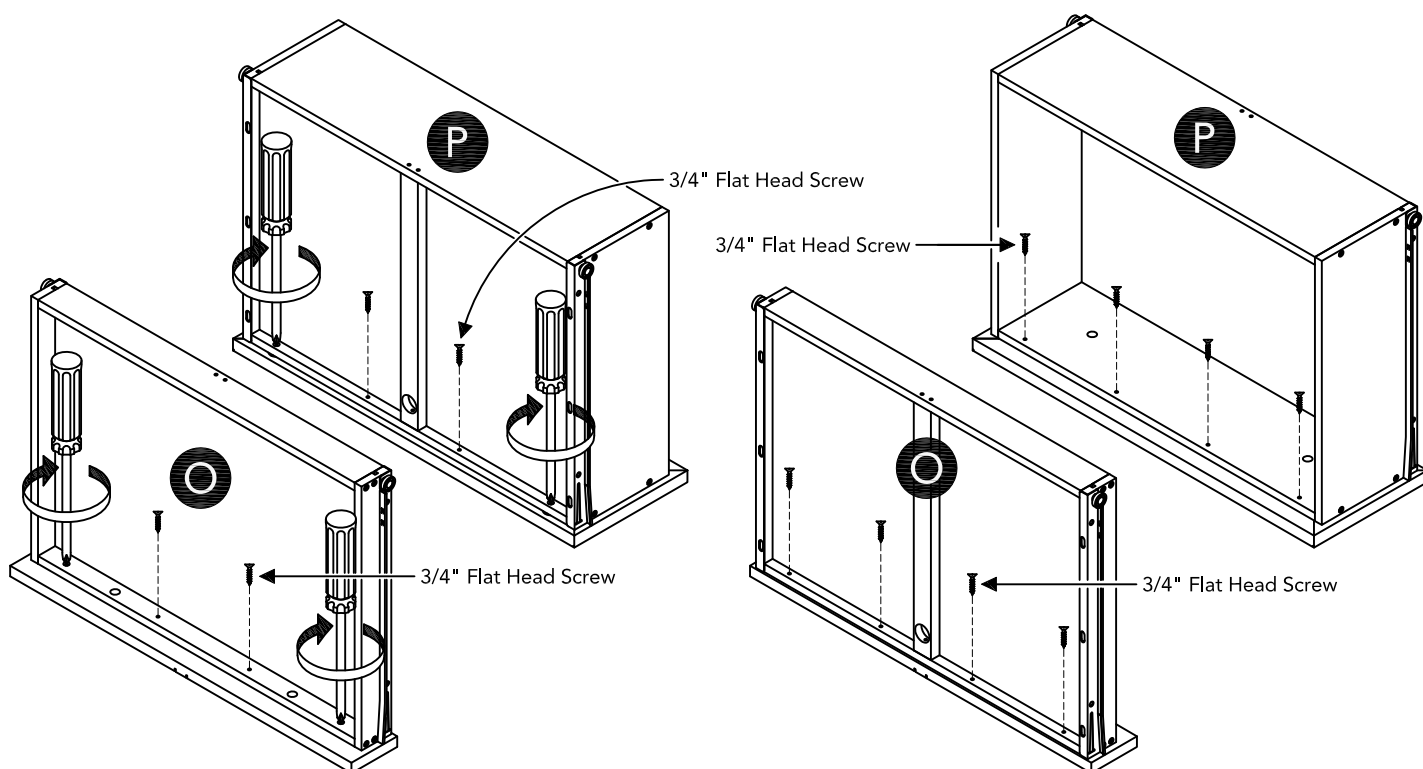

STEP 20

Slide Drawers (O) and (P) into place.

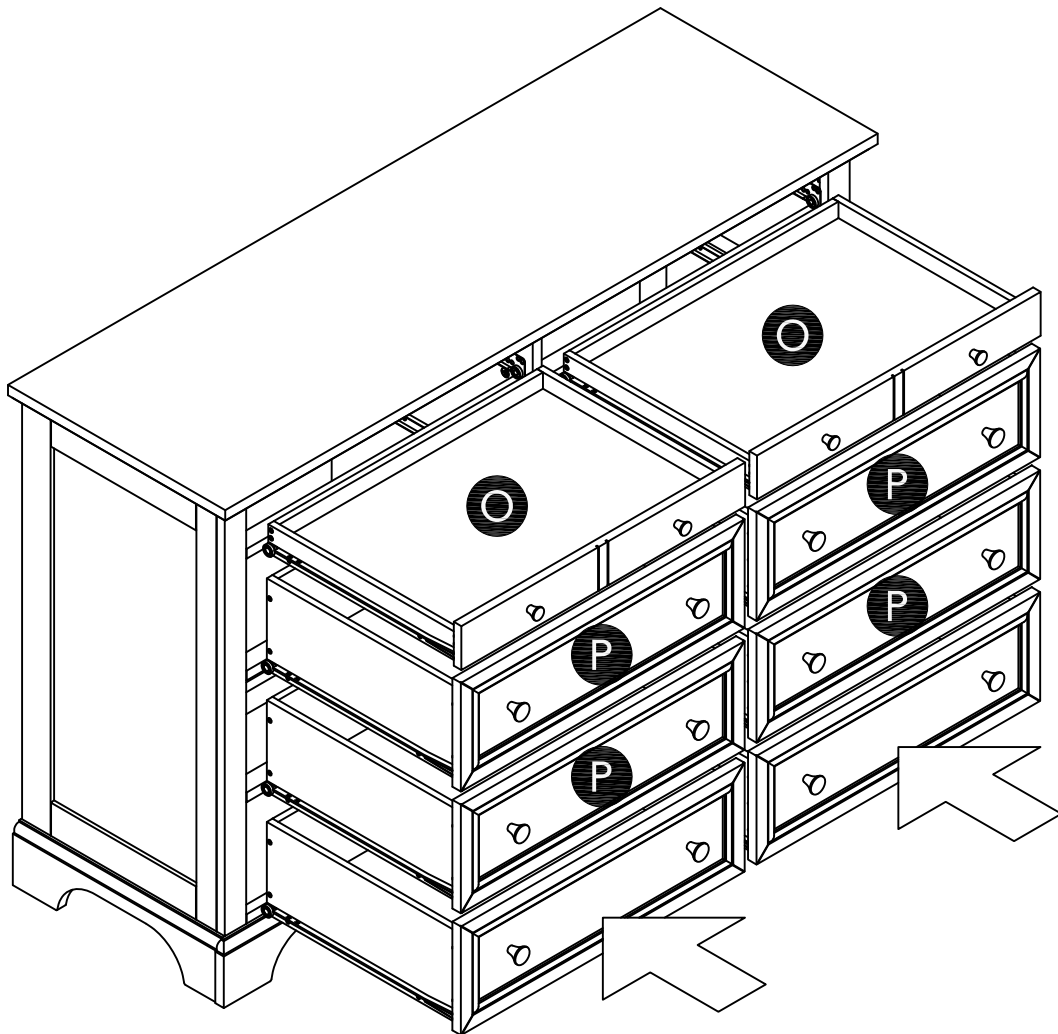

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.

**PREVENT
CRACKING**



Do not place
in direct sunlight.

**PREVENT
FADING**



Do not write
directly on surface.

**PREVENT
MARKING**



Do not place hot
objects on surface.

**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.

**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.

**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

**Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319**