

We strive to ensure that our products are of the highest quality and free of manufacturing defects or missing parts. However, if you have any problems with your new product,

DO NOT RETURN IT TO THE STORE,

please contact us toll free @:

1-888-996-2729 FAX: 1-866-873-3531 gameroom@escaladesports.com

Or write to:
Escalade Sports
Customer Service Department
P.O. Box 889
Evansville,IN 47706

Please visit our Web site at:

www.escaladesports.com

Please have your date code when inquiring about parts.


When contacting Escalade Sports please provide your model number, date code (if applicable), and part number if requesting a replacement part. These numbers are located on the product, packaging, and in this owners manual.

Your Model Number		HT250		
Date Code:_	2 - H	T250 -	- MW	
Purchase Da	ate:			

PLEASE RETAIN THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

1

IMPORTANT! READ EACH STEP IN THIS MANUAL BEFORE YOU BEGIN THE ASSEMBLY.

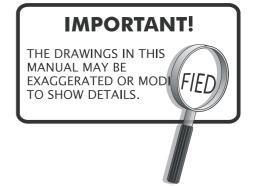

TWO ADULTS ARE REQUIRED TO ASSEMBLE THIS HT250 AIR HOCKEY TABLE

Tools Required:

A3 - Allen Wrench (Included)
Phillips Screwdriver
Furniture Polish and Cloth

An electric screwdriver is helpful in assembly. However, please set at low torque and use extreme caution with an electric screwdriver because you could overtighten the hardware and strip the screws.

Assembly Tips

Make sure you understand the following tips before you begin to assemble your hockey table.

- 1. Start all bolts by hand before tightening.
- 2. Some drawings or images in this manual may not look exactly like your product. Please read and understand the text before starting each assembly step.



READ AND FOLLOW ALL ASSEMBLY, OPERATION, AND SAFETY INSTRUCTIONS CAREFULLY. AT LEAST TWO ADULTS ARE NEEDED TO PUT THIS HOCKEY TABLE TOGETHER.

H1 = 16 pcs 7.5mm x 38mm Allen Head Bolt	H2 = 16 pcs 8.5mm Flat Washer	H3 = 18 pcs 3.5mm x 12mm Phillips Round Head Screw	H4 = 10 pcs 3.5mm x 18mm Phillips Round Head Screw
RPHT25-H1	RPHT25-H2	RPHT25-H3	RPHT25-H4
A1 = 4 pcs Striker with Felt Pad	A2 = 2 pcs Puck	A3 = 1 pc Allen Wrench	
RPHT25-A1	RPHT25-A2	RPHT25-A3	
P1 = 1 pc	P2 = 2 pcs	P3 = 4 pcs	
Air Hockey Table Cabinet	Leg End Panel	Leg	
RPHT25-P1	RPHT25-P2	RPHT25-P3	
P5 = 2 pcs Goalflex80™ Goal	P6 = 1 pc Goalflex80™Scoring Console	P7 = 1 pc Scoring Console Holder	
000000			
RPHT25-P5	RPHT25-P6	RPHT25-P7	



1 pc - **P1** Air Hockey Table Cabinet

4 pcs - **P3** Leg


16 pcs - **H1** Allen Head Bolt

16 pcs - **H2** Flat Washer

1 pc - A3 Allen Wrench

STEP 1:


Leave Hockey Table Cabinet **P1** face down in carton to assemble. Attach Legs **P3** using Allen Head Bolts **H1** with Flat Washers **H2** as shown in **FIGURE 1**. Use Allen Wrench **A3** to tighten bolts.

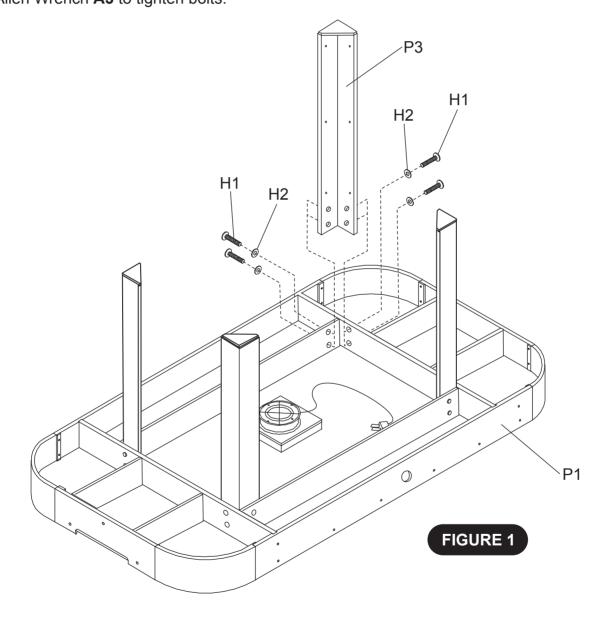

12 pcs - **H3** Phillips Round 2 pcs - **P2** Leg End Panel Head Screw

STEP 2:

With the help of another adult, align the holes in the Leg End Panels **P2** with the pre-drilled pilot holes in the Legs and attach with Phillips Round Head Screws **H3** as shown in **FIGURE 2**. **Important Note: Tighten, but do not strip out H3 screws**.

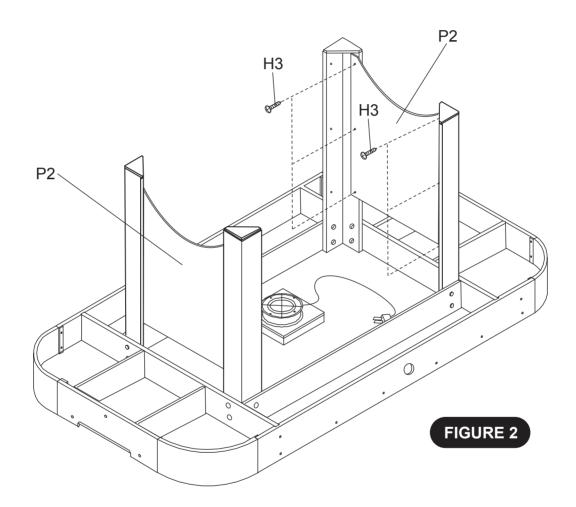

2 pcs - P5 Goalflex80 Goal

6 pcs - H3 Phillips Round Head Screw

4 pcs - H4 Phillips Round Head Screw



THIS STEP REQUIRES TWO OR MORE ADULTS.


VERY CAREFULLY TURN THE TABLE OVER AND SET IT ON ITS LEGS. BE CAREFUL, THE TABLE IS HEAVY.

STEP 3:

With the help of another adult, carefully lift and rotate table into upright position.

First, feed the sensor plug from each Goalflex80 Goal **P5** through each end apron as shown in **FIGURE 3A**.

Next, use pilot holes provided to attach each Goalflex80 Goal **P5** using Phillips Round Head Screws **H3** and Phillips Round Head Screws **H4** as shown in **FIGURE 3B**.

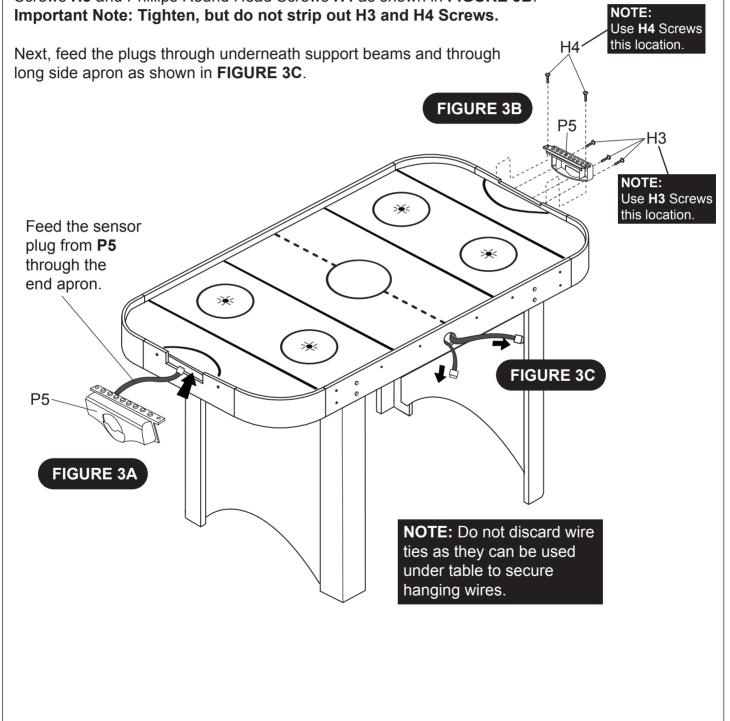

1 pc - P6 Goalflex80 Scoring Console

1 pc - **P7** Scoring Console Holder


2 pcs - H4 Phillips Round Head Screw

STEP 4:

First, feed the sensor plugs from Goalflex80 Scoring Console **P6** through Scoring Console Holder **P7** as shown in **FIGURE 4**.


Attach Goalflex80 Scoring Console **P6** to Scoring Console Holder **P7** using Phillips Round Head Screws **H4** as shown in **FIGURE 4**.

Important Note: Tighten, but do not strip out H4 Screws.

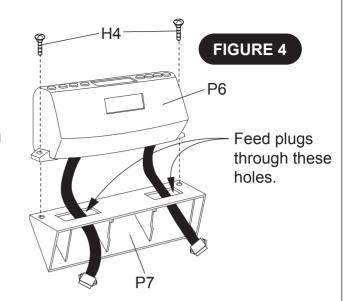

STEP 5:

Carefully connect **P6** Console male connectors to **P5** Goal female connectors as shown in **FIGURE 5**

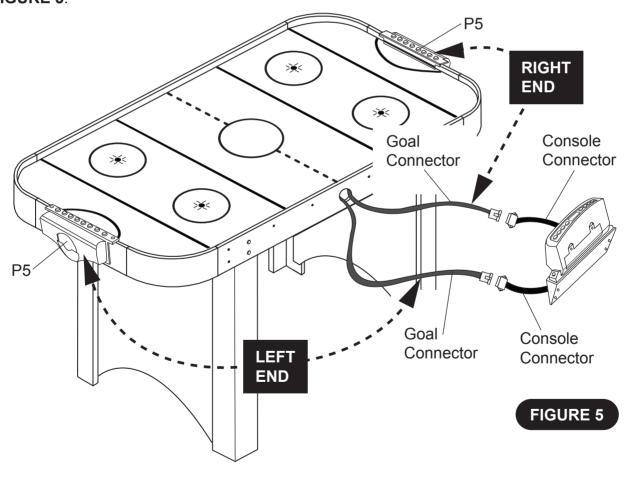


4 pcs - H4 Phillips Round Head Screw

STEP 6:

First, feed the connectors back through hole on Side Apron P1 and attach Scoring Console Holder P7 using Phillips Round Head Screws H4 as shown in FIGURE 6.

Important Note: Tighten, but do not strip out H4 Screws.

Install 3 "C" size batteries (not included) into Goalflex80 Scoring Console P6.

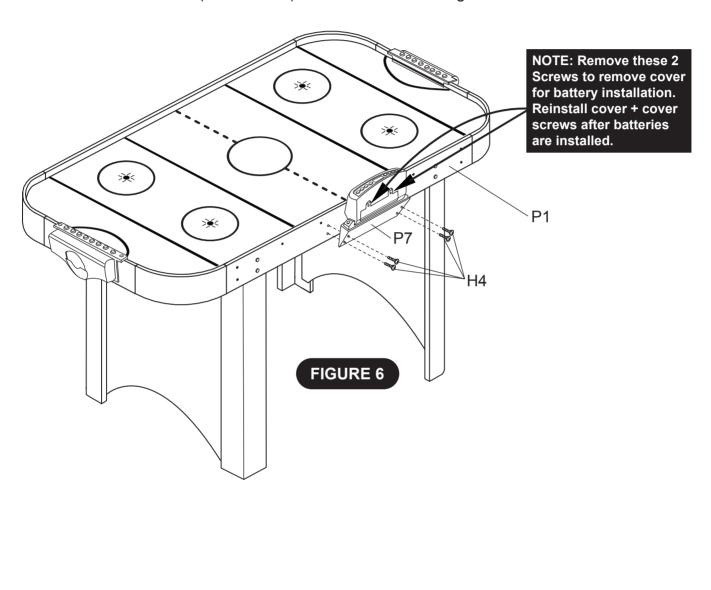

Congratulations! You have now assembled your Hockey Table. Please note the Care and Use instructions below to ensure many years of trouble free use of your Hockey Table.

CARE AND USE OF YOUR HOCKEY TABLE

- 1. Use only a suitable 120v AC household outlet, and insure the cord is not a trip hazard.
- 2. For long life and best play from your air hockey table, apply spray furniture polish to clean cloth and wipe down the playfield with air motor running to make the pucks slide faster before first play and frequently thereafter.
- 3. This product is intended for INDOOR use only.
- 4. **DO NOT** operate the motor if the cord is damaged in any way.
- 5. **DO NOT** sit, climb or lean on the table.
- 6. **DO NOT** drag the table when moving it. This will damage the legs.
- 7. **DO NOT** set drinks on the table.
- 8. It is suggested that this table be placed close to wall thus allowing the air motor cord to **NOT** be a trip hazard. Always turn air motor off when table is not in use.

PRODUCT PARTS LIST # HT250

Part#	Description	Qty	Part#	Description	Qty
RPHT25-H1	7.5 mm x 38 mm		RPHT25-A3	Allen Wrench	1
	Allen Head Bolt	16	RPHT25-P1	Air Hockey Cabinet	
RPHT25-H2	8.5 mm Flat Washer	16		(no air motor)	1
RPHT25-H3	3.5 mm x 12 mm		RPHT25-P2	End Leg Panel	2
	Phillips Round Head		RPHT25-P3	Leg	4
	Screw	18	RPHT25-P5	Goalflex80 Goal	2
RPHT25-H4	3.5 mm x 18 mm		RPHT25-P6	Goalflex80 Scoring	
	Phillips Round Head			Console	1
	Screw	10	RPHT25-P7	Scoring Console Holder	1
RPHT25-A1	Striker with Felt Pad	4	RPHT25-CORNER	Plastic Corner	4
RPHT25-A2	Puck	2	RPHT25-MOTOR	Air Motor	1

GOALFLEX ELECTRONIC SCORER OPERATION:

POWER ON/OFF = Press ON/OFF button to start the Goalflex scoring unit. Long press ON/OFF button to turn off the Goalflex scoring unit.

GAME TYPE = Press GAME TYPE button to select POWER PLAY, SOLO or DOUBLE game type.

GOAL SIZE = Press GOAL SIZE button to adjust your goal size.

HANDICAP = Press HANDICAP button to select versus mode handicap options.

TIME = Press TIME button to select time options 20 , 15 , 10 or 5 minutes.

AFTER GOAL DELAY = Press AFTER GOAL DELAY button to turn off NON-STOP scores mode.

MUTE = Press MUTE button to turn the sound ON or OFF.

START/PAUSE = Press START/PAUSE button to START or PAUSE the game.

NOTE: If NO GAME TYPE has been select or the START/PAUSE button is not pressed for 3 minutes, the scoring unit will automatically turn off. However we suggest turning the power off when the game will not be used for an extended period of time.

90 DAY LIMITED WARRANTY

This customer warranty extends to the original owner, on the purchase of any ESCALADE SPORTS Product (hereinafter referred as the "Product").

WARRANTY DURATION: This Product is warranted to the original owner, for a period of 90 days from the original purchase.

WARRANTY COVERAGE:ESCALADE SPORTS warrants to the original owner, this product to be free from defects in material and workmanship when used for the intended purpose under normal use and conditions. THIS WARRANTY IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLIGENCE, IMPROPER SERVICE, FAILURE TO FOLLOW INSTRUCTIONS PROVIDED WITH THE PRODUCT OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL AND WORKMANSHIP.

WARRANTY REPLACEMENT: During the above 90 day warranty period, ESCALADESPORTS shall provide replacement components or replace with a comparable product at our choosing. If product is defective under normal use and proper care, please contact our Customer Service Dept.

1-888-996-2729 / Customer Service Dept.
Or Write us at:
Escalade® Sports, Inc. - P.O. Box 889, Evansville, IN 47706
Attn: Customer Service Dept.
Or E-mail us at:
gameroom@escaladesports.com

Other than shipping requirements, no charge will be made for such replacement of in-warranty products.

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE 90 DAY PERIOD. ESCALADE SPORTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER CONSEQUENTIAL OR INCIDENTAL COSTS, EXPENSES OR DAMAGES INCURRED BY THE CONSUMER OF ANY OTHER USE.

Some states do not allow the exclusion or limitation of implied warranties or consequential or incidental damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights and you may also have other rights which may vary from state to state.