

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be practiced including the following:

For your protection and safety, carefully read and understand the information provided in this manual completely before attempting to assemble, install, or operate this product. Failure to do so could lead to electrical shock, fire, or other injuries that could be hazardous or even fatal.

- The neon flex is for use with 120V CFI outlets.
- Not for use with dimmer.
- DO NOT submerge underwater.
- CAUTION: To reduce the risk of fire and electric shock: do not mount or support wires in a manner that can cut or damage wire insulation.
- This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug.

SAVE THESE INSTRUCTIONS

This manual contains important safety and operating instructions to power the unit.

CAUTION:

Dispose of used battery promptly according to local recycling or waste regulations. Clean battery contacts and also device contacts prior to installing battery. Ensure the battery is installed correctly with regard to polarity (+ and -). Remove battery from remote when not being used for an extended period of time. Remove used battery promptly.

USES 1 3V, TYPE CR2025 BATTERY

- **WARNING - KEEP BATTERIES OUT OF THE REACH OF CHILDREN.**
- Remove immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information if needed.
- Always purchase the correct size and type of battery most suitable for the intended use.
- Non-Rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 45°C/113°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly with regard to polarity (+ and -).
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure battery compartment. If battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

 
⚠ WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- **KEEP** new and used batteries **OUT OF REACH of CHILDREN**
- **Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



PARTS INCLUDED:

NOTE: Parts not shown to actual size.

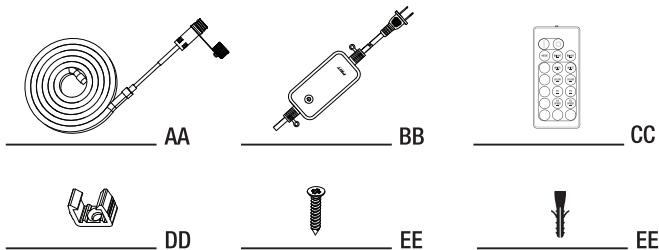

Part	Description	Quantity
AA	20 ft. Neon Flex Light	1
BB	Power Supply	1
CC	Remote	1
DD	Mounting Clips	14
EE	Mounting Screws	14
FF	Mounting Anchors	14

LIMITED WARRANTY. This product is warranted to be free from defects in workmanship and materials for up to 1 year from date of purchase. If the product fails within the warranty period, please contact Feit Electric at feit.com/help for help. **REPLACEMENT OR REFUND IS YOUR SOLE REMEDY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTIES ARE LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IS HEREBY EXPRESSLY EXCLUDED.** Some states and provinces do not allow the exclusion of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.

 
MODEL: NF20/CHASE

FEIT
ELECTRIC

Chasing RGBW - 20 FT

Neon Flex Light

Quick Install Guide

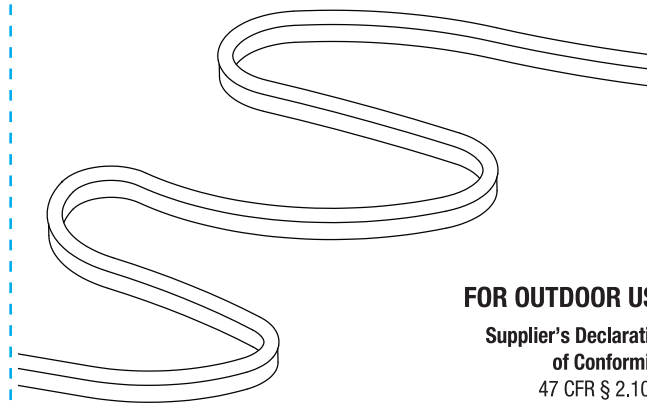

FOR OUTDOOR USE

Supplier's Declaration of Conformity:

47 CFR § 2.1077

Compliance Information

Responsible Party:

Feit Electric Company
4901 Gregg Road,
Pico Rivera, CA 90660, USA
Unique Identifier: NF20/CHASE

LINKABLE UP TO 40 FT
DO NOT USE WITH DIMMERS
MADE IN THAILAND

 
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. www.feit.com.

Getting Started:

WARNING: These products may represent a possible shock or fire hazard if improperly installed or attached in any way. Products should be installed in accordance with this install guide, current electrical codes and/or the current National Electric Codes.

1 Connect the Neon Flex


Connect the neon flex light to the power supply then connect the plug as shown in the image below.

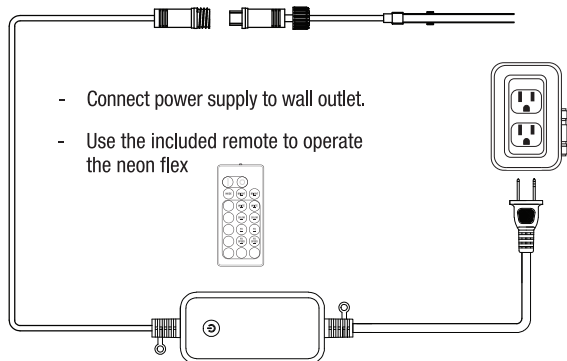

Note: When using outdoors, plug the unit into an appropriately rated GFCI receptacle with cover.

2 Prepare the Neon Flex

 
- Measure the desired length before installation.
- Clean the mounting area thoroughly (surface must be free of dust, dirt or grease).
- Avoid bending the strip light which may damage the LEDs.

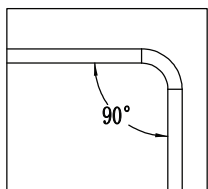


3 Mount the Neon Flex

Unroll the neon flex and place near mounting location. Ensure cord can reach your power source. Do not connect to power yet.

 - Mark your desired mounting location.
- Align the mounting clips (DD) and fasten using the mounting screws (EE).
- If installing in drywall, use the mounting anchors (FF).

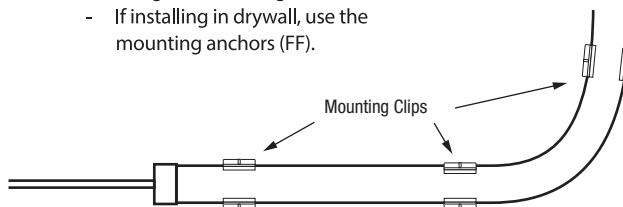

4 Remote Operations

 

I - ON
O - OFF



 
Brightness Control



Cycle through White Color
(CCT Range 3000K-6500k)



Cycle through Color
Red, Green, Blue, Purple, Cyan, Yellow, White, Orange, Dark Yellow, Light Yellow, Light Green, Light Blue, Dark Blue, Sky Blue, Blue Violet, Magenta.



Cycle through Effects
Chasing Mode 1, Flowing Water/Meteor Mode, Chasing Mode 2, Pushing Mode, Sharp-Flash Mode, Pulsing Mode, Chasing Mode 3, Seven Color Jump Mode, Seven Color Chasing Mode, Seven Color Wave, RGB Wave Mode, Seven Color Fade Mode, RGB Fade Mode, Water- Meteor Fade Mode, Pulsing Fade Mode.



Effects Speed Control

5 Extending the Neon Flex

Connect additional Neon Flex Light units at the end of your current installation to extend the length.

- Do not exceed a max length of 40ft across all connected Neon Flex units.
- Always turn off and disconnect the power supply before connecting additional units.



Need Help?

For 24/7 customer support, visit feit.com/help