



bestchoiceproducts



INSTRUCTION MANUAL

Rocking Chair

! NOTICE

Please retain these instructions for future reference.

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and knobs before use.
- Reconfirm that all bolts, screws, and knobs are secure every 90 days.
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item is completely assembled.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- If any parts are missing, broken, damaged, or worn, stop using this product until repairs are made and/or factory replacement parts are installed.
- Do not use this item in a way inconsistent with the manufacturer's instructions as this could void the product warranty.
- It is highly recommended that a power drill be used when assembling this product.
- Do not operate power tools without prior experience as this may result in personal injury and product damage.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



POWER DRILL
(RECOMMENDED)



1 PERSON
ASSEMBLY



UP TO 30 MIN.
ASSEMBLY

HARDWARE

1

HEX SCREWS



20 PCS

PARTS

A


ARMRESTS



2 PCS

B


SEAT FRAME

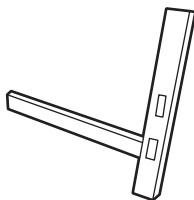

2 PCS

C


FRAME CONNECTOR

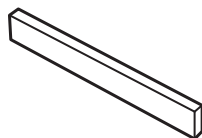

1 PC

D

SEAT

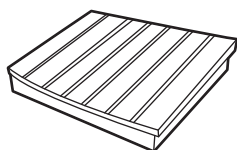

1 PC

E


CHAIR BACK



1 PC

F

RUNNER

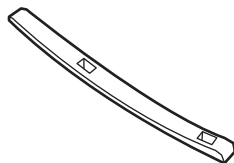

2 PCS




This product uses a tab-and-receiver construction, please make sure each tab is tightly inserted in each slot before attaching the hardware.

PRODUCT ASSEMBLY

1

Insert the part C frame connector into the corresponding slot on one part B seat frame. Insert the part D seat into the corresponding slot on the seat frame.


Connect the second seat frame by inserting the frame connector and seat into the corresponding slots, then secure with four part 1 screws.

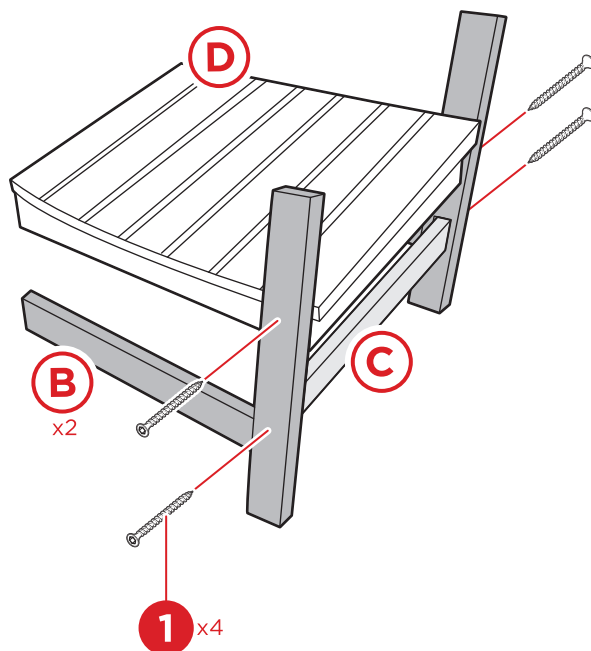

PRODUCT ASSEMBLY

2

Locate the part E chair back and insert the seat assembly into the corresponding slots, then secure with four part 1 screws.

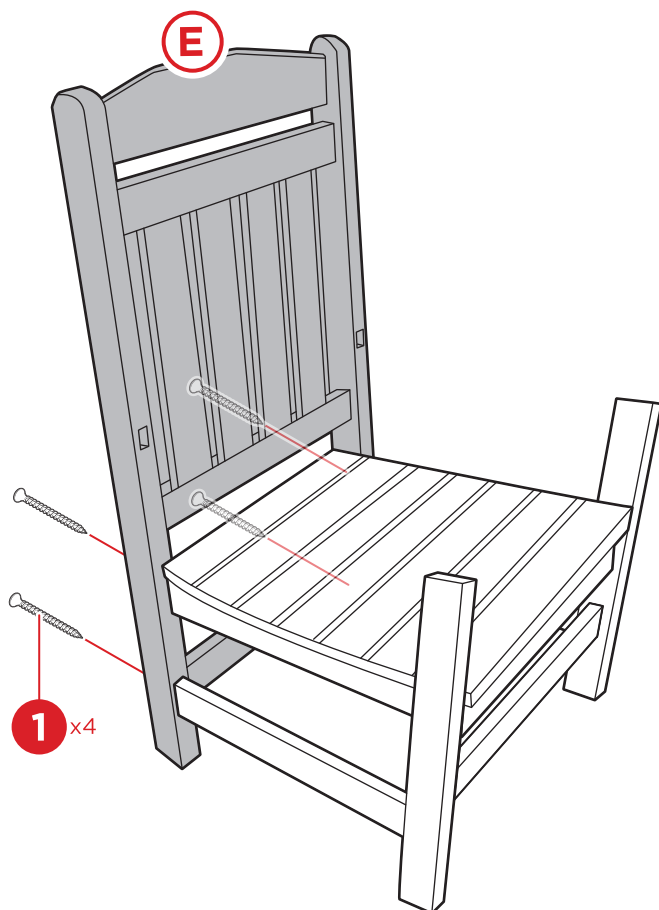


PRODUCT ASSEMBLY

3

Locate one part A armrest and insert it into the corresponding slot on the part E chair back. Insert the part B seat frame into the opening on the armrest, then secure with two part 1 screws.


Repeat to assemble the second armrest.

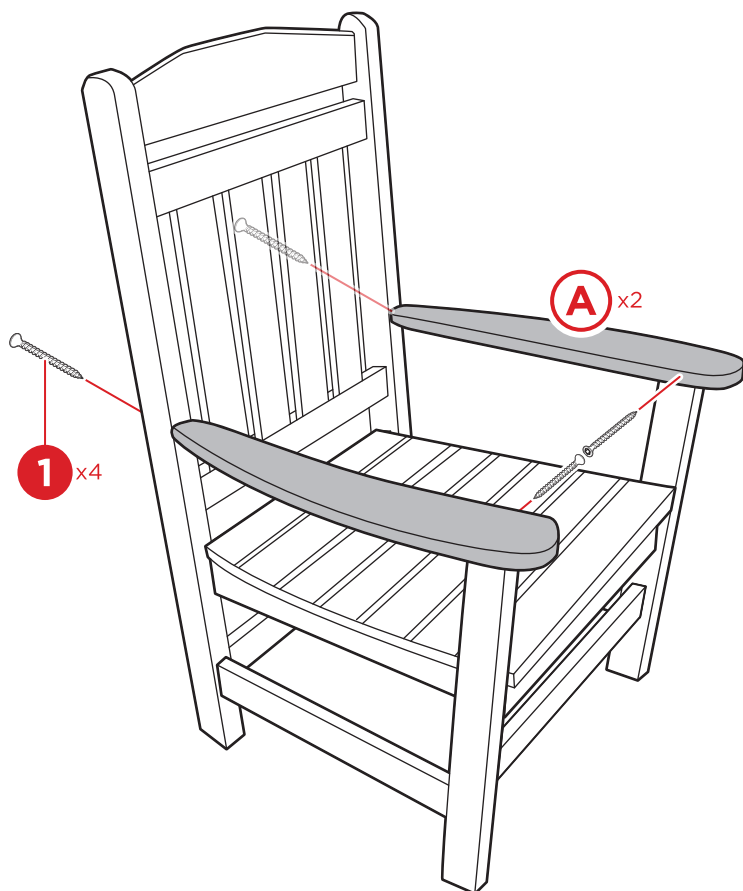

PRODUCT ASSEMBLY

4

Place the chair assembly on its side, then attach two part F runners to the part B seat frames, and secure with eight part 1 screws, four screws per runner.

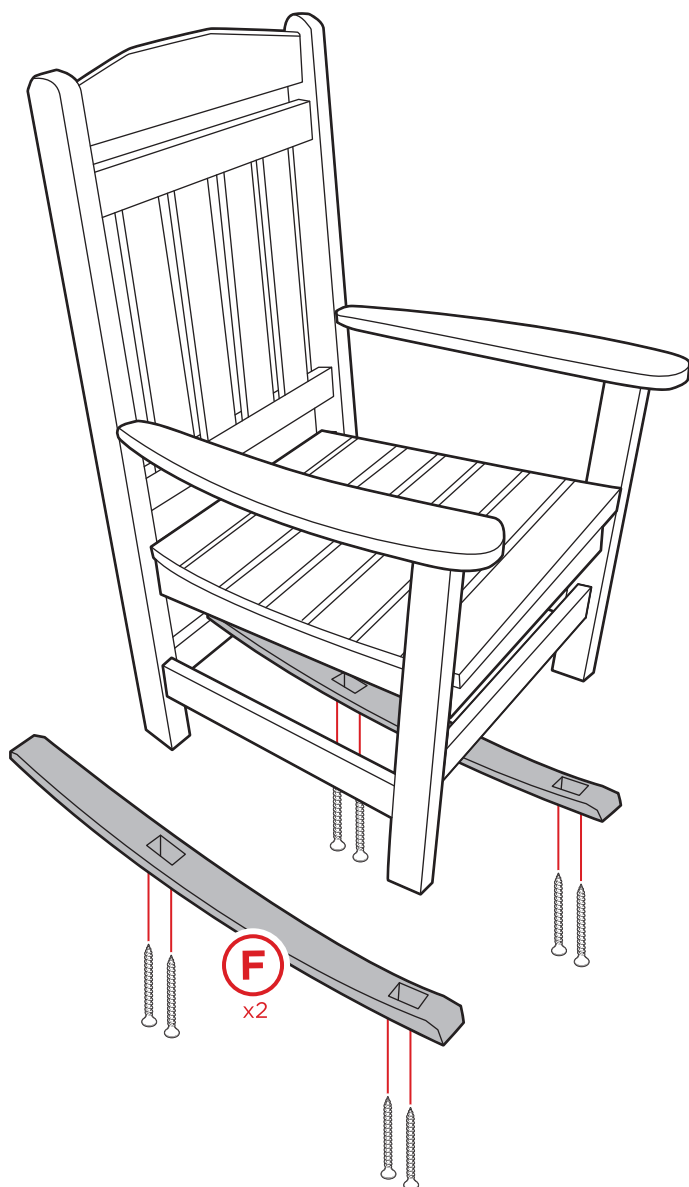



HELP CENTER



Question about your product? We're here to help. Visit us at:

help.bestchoiceproducts.com



Product Assembly



Returns & Refunds

PRODUCT WARRANTY INFORMATION

All items can be returned for any reason within 60 days of the receipt and will receive a full refund as long as the item is returned in its original product packaging and all accessories from its original shipment are included. All returned items will receive a full refund back to the original payment method. All returned items will not be charged a re-stocking fee.

All returned items require an RA (Return Authorization) number, which can only be provided by a Best Choice Products Customer Service Representative when the return request is submitted. Items received without an RA may not be accepted or may increase your return processing time. Once an item has been received by Best Choice Products, refunds or replacements will be processed within 5 business days.

All returns must be shipped back to the Best Choice Products Return Center at the customer's expense. If the reason for return is a result of an error by Best Choice Products then Best Choice Products will provide a pre-paid shipping label via email. Boxes for return shipping will not be provided by Best Choice Products, and is the customer's responsibility to either use the original shipping boxes or purchase new boxes.

Pictures may be required for some returns to ensure an item is not damaged prior to its return. Items returned are not considered undamaged until they are received by Best Choice Products and verified as such. All damages to items are the customer's responsibility until the item has been received by and acknowledge by Best Choice Products as undamaged.

WARNING

Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, unapproved modification, or neglect of this product.