
Item: W70ADR2D

Assembly Instructions

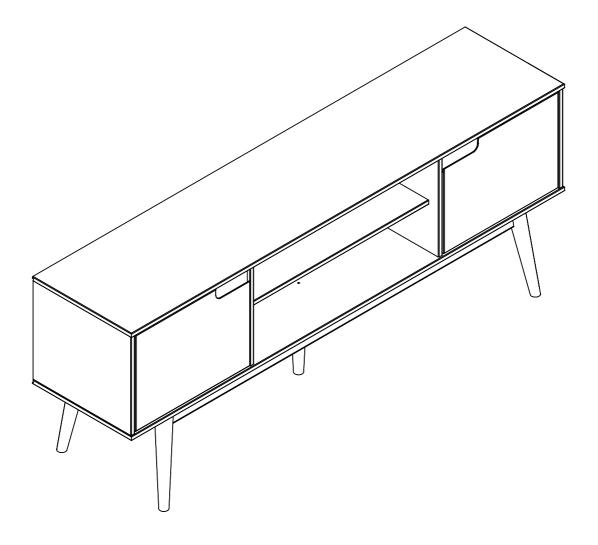

 


Please visit our website for the most current instructions, assembly tips, to report damage or request parts. **www.walkeredison.com**


Revised 10/2023-V9

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are wood dowels, screws and bolts.
- V. A Phillips head screwdriver and hammmer is required for the assembly of this product.

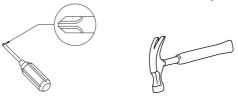

 VI. Power tools should not be used to assemble this product.

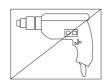

Parts List

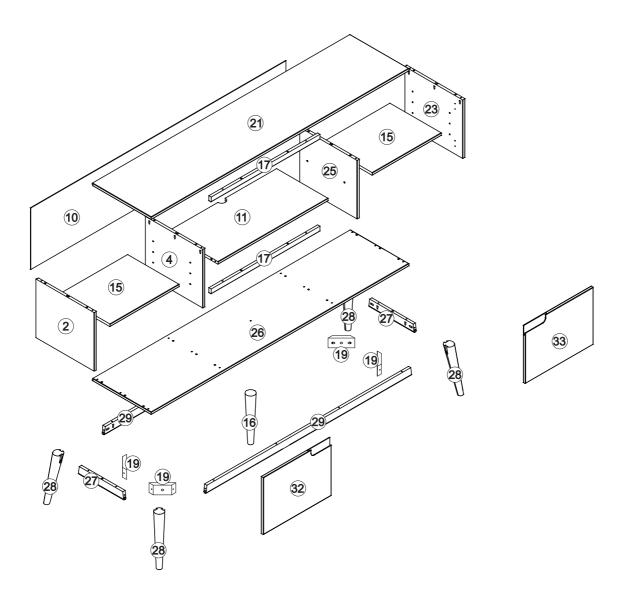

| Part # | Description | Qty | |
|--------|--------------------------|--------|--|
| 2 | Left side panel | 01 pc | |
| 4 | Left center panel | 01 pc | |
| 10 | Back panel | 01 pc | |
| 11 | Center shelf | 01 pc | |
| 15 | Side shelf | 02 pcs | |
| 16 | Center foot | 01 pc | |
| 17 | Reinforcement crosspiece | 02 pcs | |
| 19 | Wooden angle bracket | 04 pcs | |
| 21 | Top panel | 01 pc | |

| Part # | Description | Qty |
|--------|------------------------|--------|
| 23 | Right side panel | 01 pc |
| 25 | Right center panel | 01 pc |
| 26 | Base | 01 pc |
| 27 | Foot crossbeam | 02 pcs |
| 28 | Foot | 04 pcs |
| 29 | Front / Back croosbeam | 02 pcs |
| 32 | Left door | 01 pc |
| 33 | Right door | 01 pc |

Hardware List

| Α | Ø8*30mm | Wooden dowel | 48 pcs |
|---|-----------|--------------|--------|
| В | Ø4*30mm | Screw | 36 pcs |
| С | Ø4*40mm | Screw | 14 pcs |
| Е | | Washer | 02 pcs |
| F | Ø3,5*25mm | Screw | 08 pcs |
| G | | Wall anchor | 01 pc |
| Н | Ø4*16mm | Screw | 26 pcs |
| ı | | Hing | 04 pcs |
| J | Ø7*60mm | Screw | 08 pcs |
| K | 4mm | Hex Key | 01 pc |
| L | | Corner | 02 pcs |
| М | Ø10*10mm | Nail | 24 pcs |
| N | Ø8*14mm | Support | 08 pcs |
| 0 | Ø6*30mm | Wooden dowel | 08 pcs |

Hammer recommended for assembly (not included)

Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.


Hardware List


| Р | Ø6*35mm | 01 pc |
|---|----------------------------------|--------|
| Q | Ø4*16mm Screw | 01 pc |
| R | Ø8mm Bump Stop | 02 pcs |
| S | Oval Cover Decal | 04 pcs |
| Т | Round Cover Decal | 01 pc |
| U | Threaded foot insert | 01 pc |
| V | Ø1/4*25mm Threaded leveling foot | 01 pc |

Hammer recommended for assembly (not included)

Philips head screwdriver required for assembly (not included)

The hardware quantities listed above are required for proper assembly. Some extra hardware may also have been included.

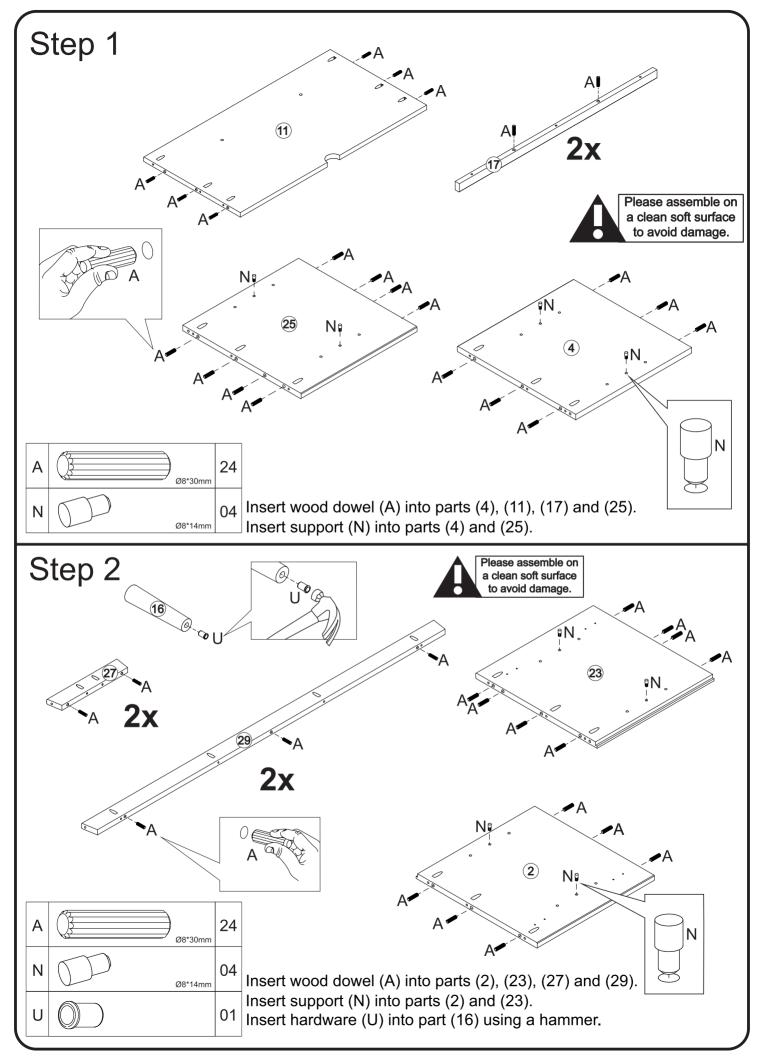


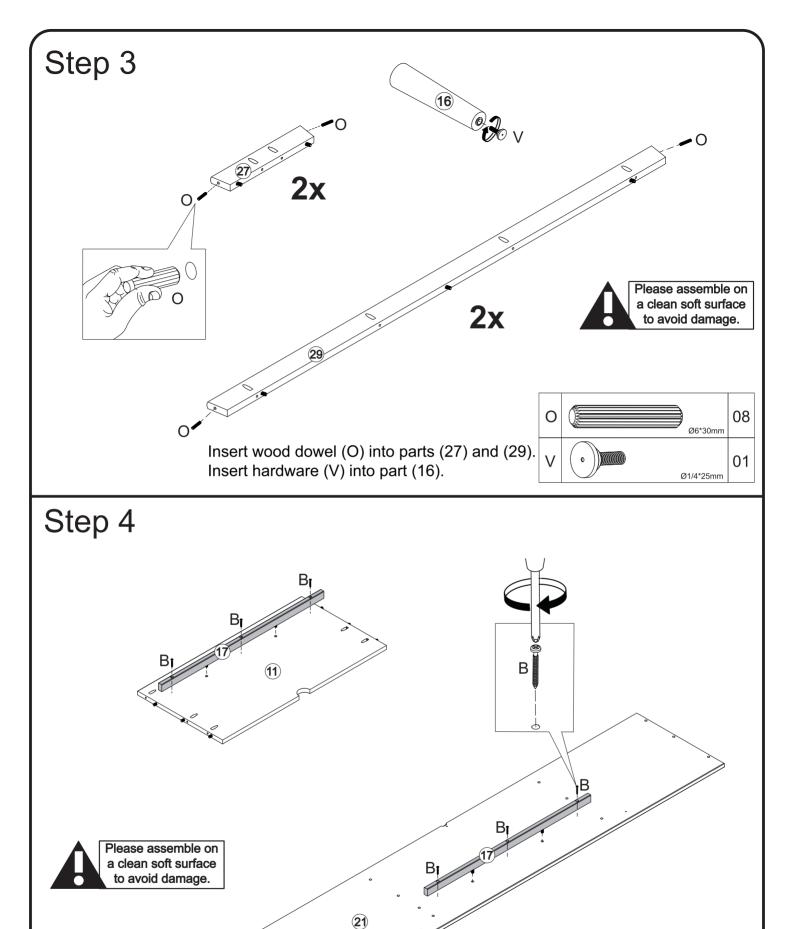


Attach parts (17) to parts (11) and (21) with

screw (B) and Phillips head screwdriver. B


06

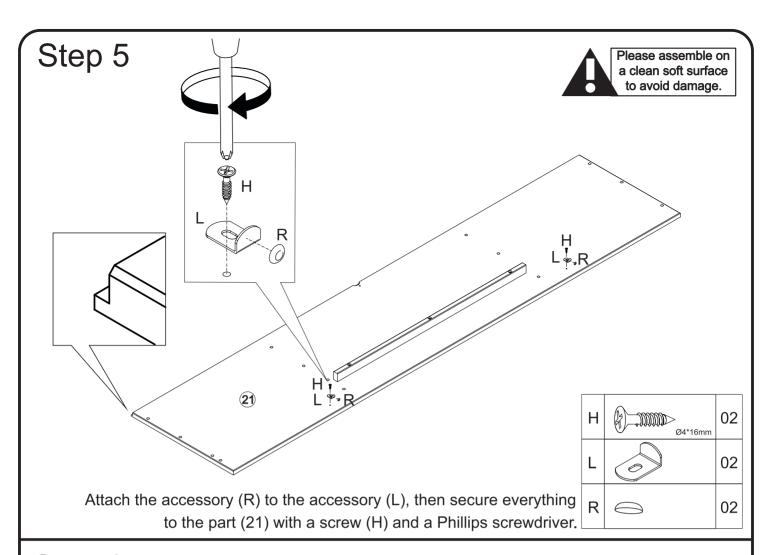



Step 6

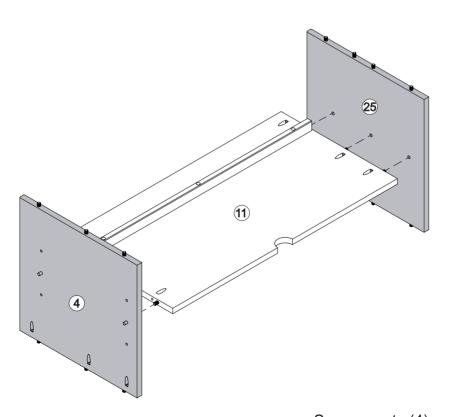



Secure parts (4) and (25) to part (11).

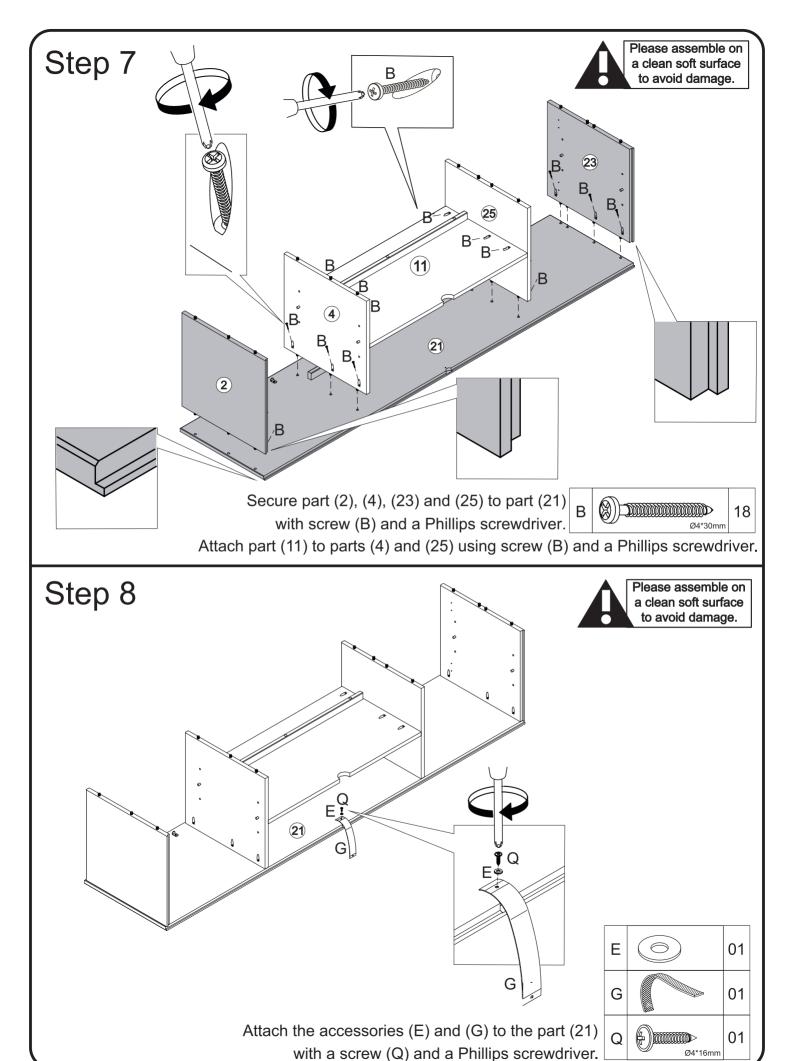


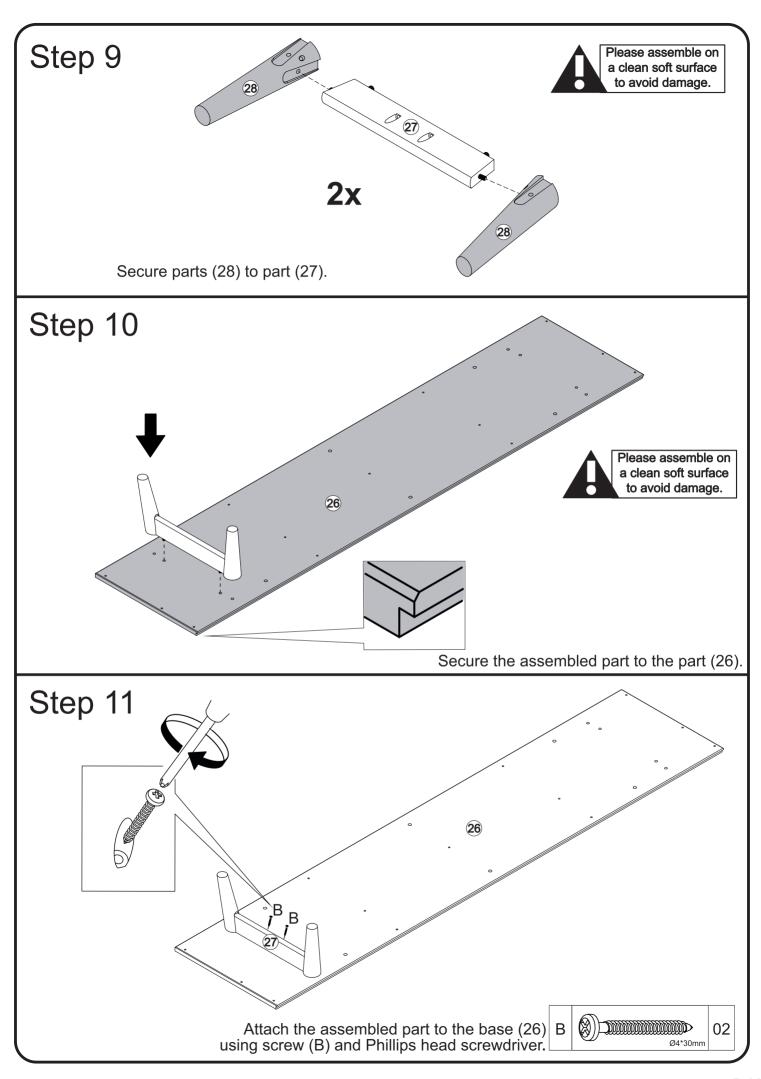


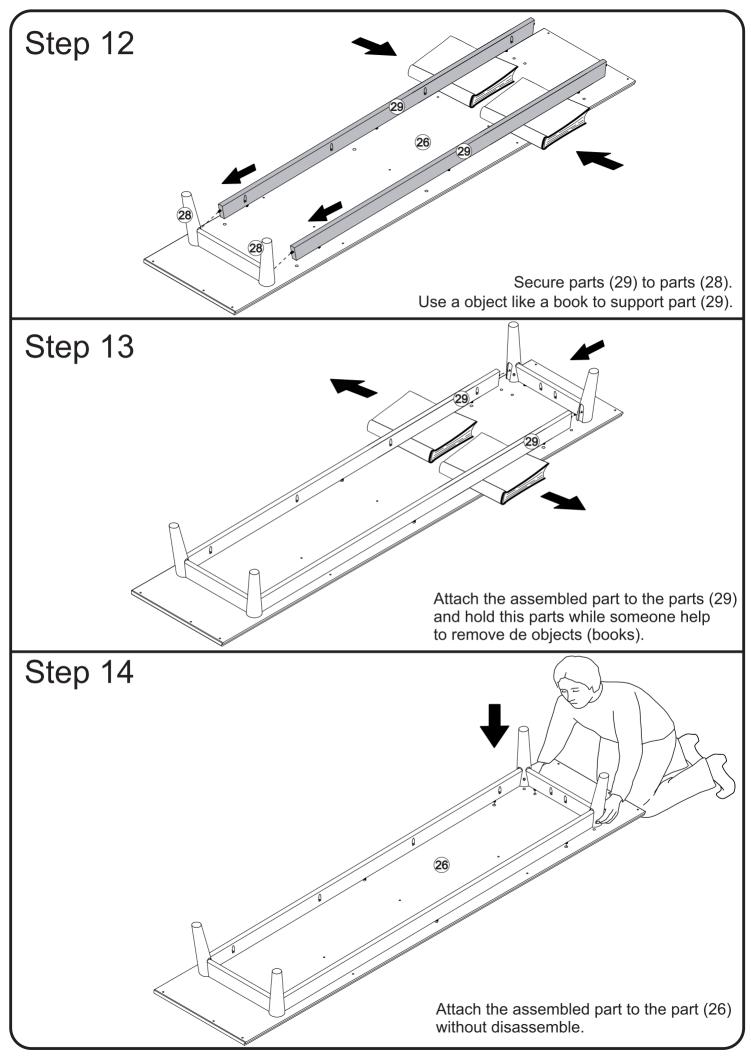


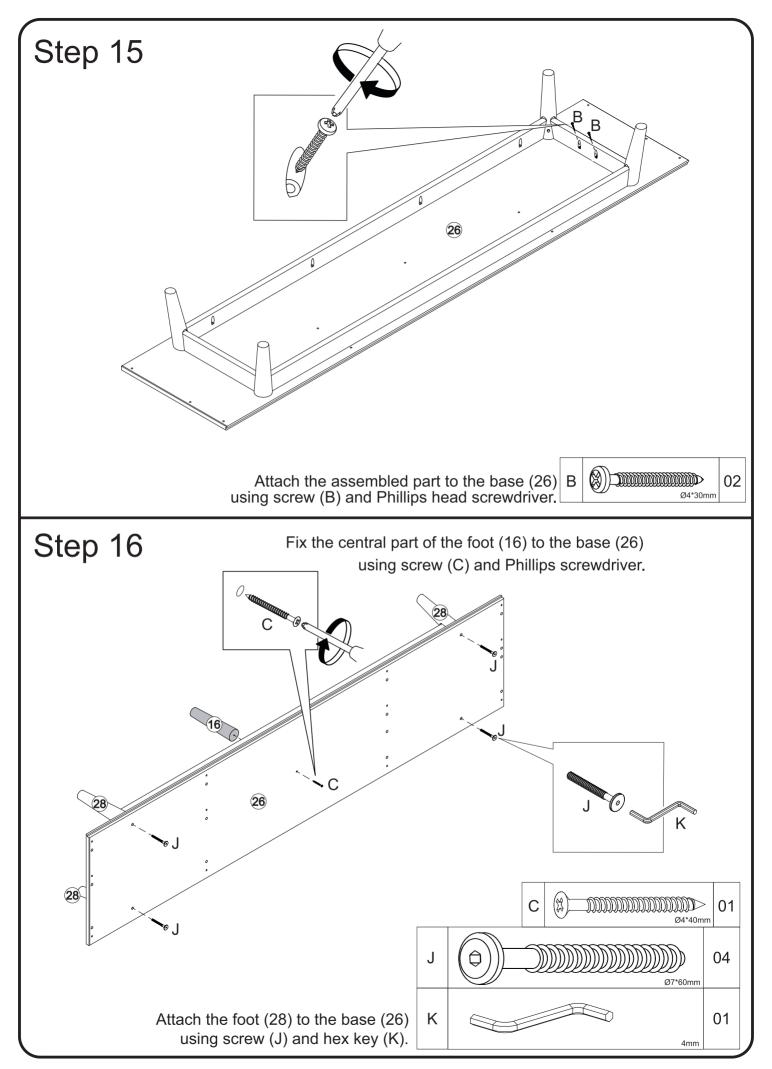

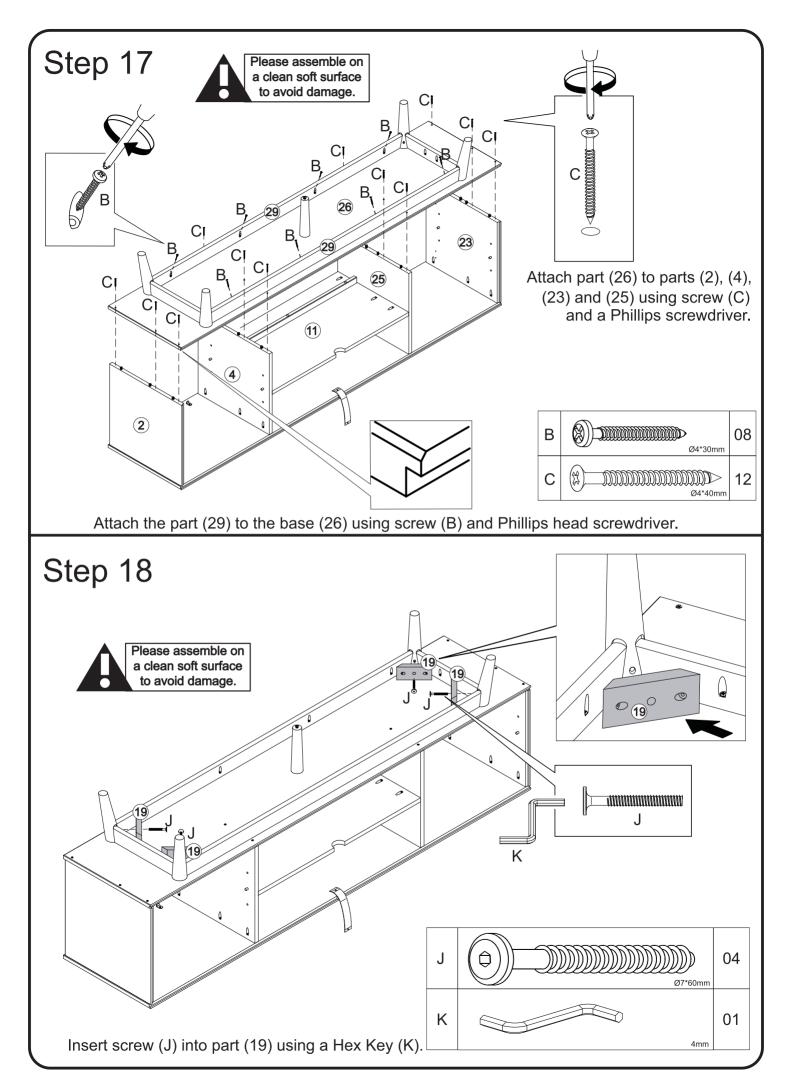

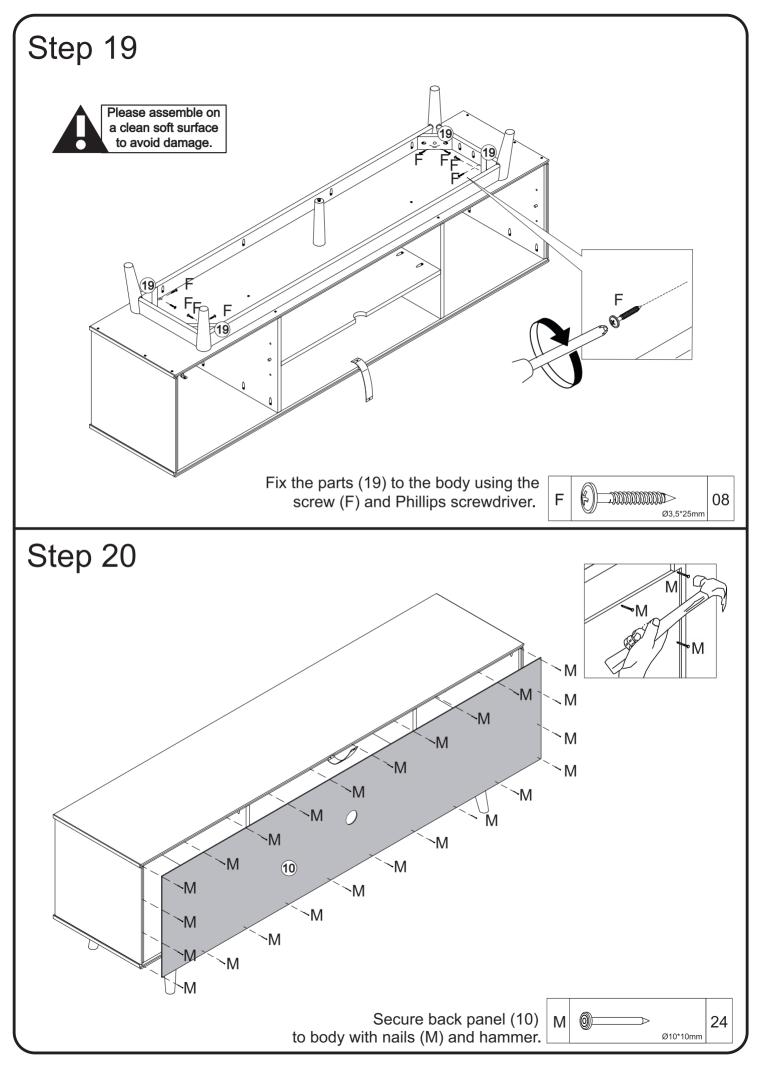

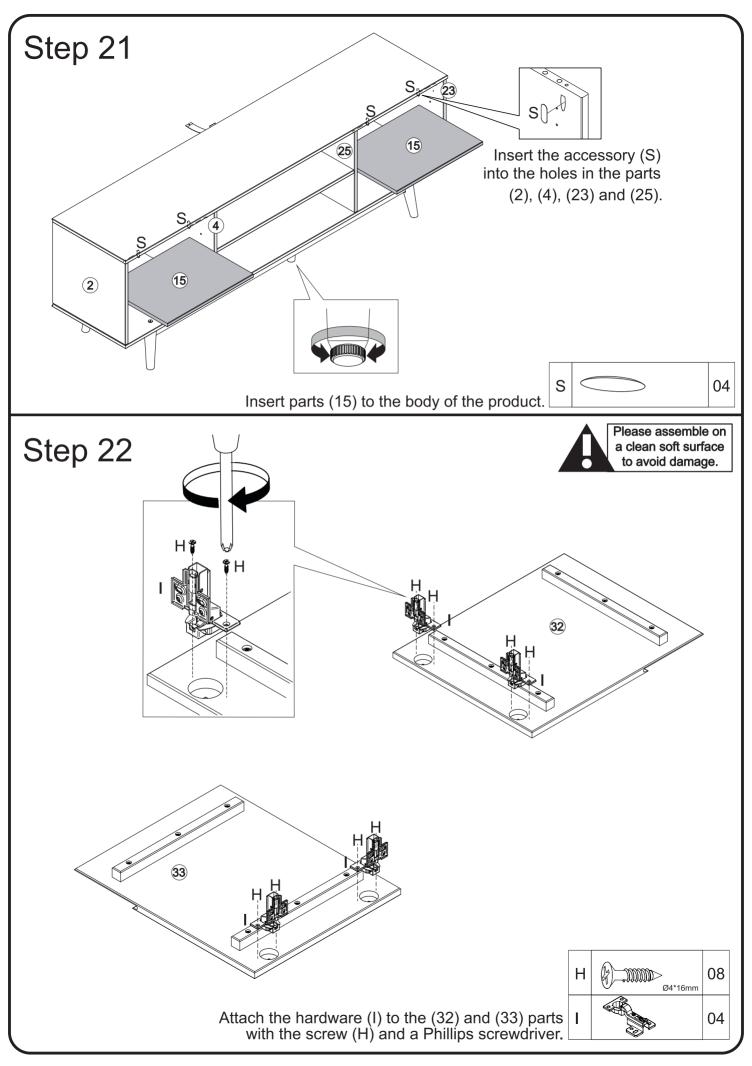

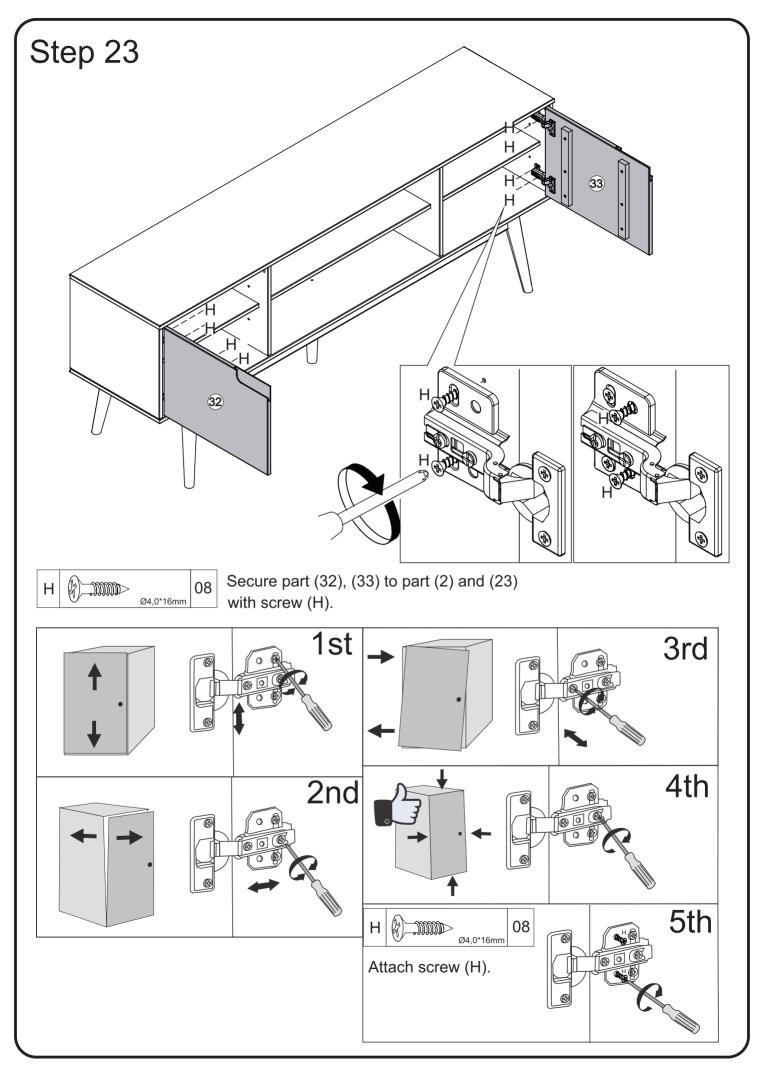

Step 24



Serious or fatal crushing injuries can occur from tip-over. To help prevent tip-over, install tip restraints per instructions. If using to support a television or monitor:


- For use with televisions weighing 50lbs (22.67Kg) or less and no wider than this product. Use with heavier televisions may result in instability causing tip over resulting in death or serious injury.
- Death or serious injury may occur when children climb on audio/or video equipment furniture. Remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing.
- Do not place TV near front the edge of the product.

To further reduce the risk of serious injury and death from tip-overs:

- Place heaviest items in the lowest compartments or drawers.
- Never allow children to climb or hang on drawers, doors or shelves.
- Never open more than one drawer at a time.

The use of tip-over restraints may only reduce, but not eliminate the risk of tip-over.

For safe mounting, it is essential to use wall anchors appropriate to your wall type (i.e., plaster, drywall, concrete, etc). Mount to wood studs whenever possible. **Note: if you are unsure about your wall type or what mounting the method you should use, consult a qualified professional or your local hardware store.**

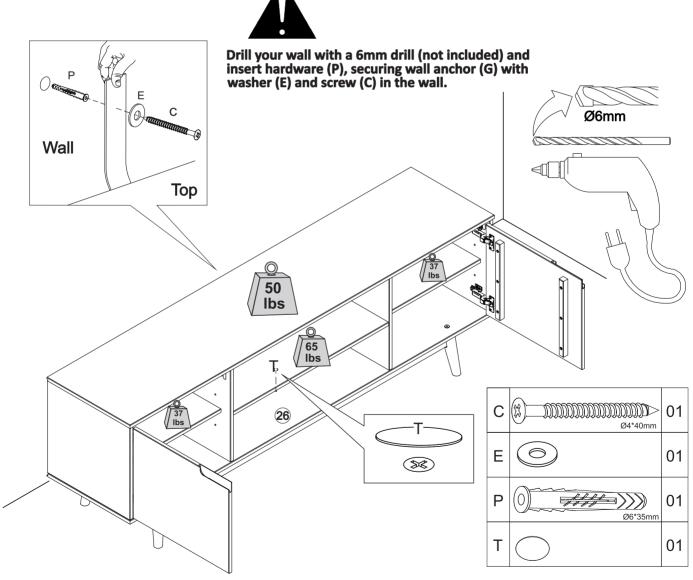

Name and address information for the manufacturer responsible for the anti-tip hardware and date of production can be found on the label on the back of the furniture.