



## AMBITION FOUNTAIN PENS

### FOUNTAIN PEN INK

\* It is necessary to use Faber-Castell Fountain Inks exclusively with Faber-Castell Fountain Pens for best performance and to prevent damage to the feed. Our inks are specially formulated and designed specifically for our pens. If using unsuitable ink by another manufacturer, the instrument will be adversely affected. In these cases, replacement part charges and/or repair fees will apply. For best results and to prevent clogging, use fresh ink when refilling the pen.

### CARE

Nibs will adjust to your handwriting as you write with the pen. It is not recommended to allow others to write with your fountain pen. Do not press down hard as this may result in skipping and ink flow problems. The ink flow begins as the nib touches and glides across the paper. If a pen has not been used for an extended period of time and you are experiencing ink flow problems, let the nib soak in water overnight. Then flush the nib with water by either running it under the faucet or filling and emptying the converter with water. Use lukewarm water. Never use alcohol.

### AIR TRAVEL

Changes in air pressure during a flight can cause a fountain pen to leak. It is therefore recommended when not in use, that you keep the pen vertical with the nib uppermost when traveling by air.



- Ambition Fountain Pens are equipped with a cartridge/converter system.
- All include a converter - excluding Black Resin and OpArt styles, which come with 1 blue ink cartridge and the converter is sold separately.
- The cap will post on the back end of the pen while writing.

1. Remove the cap (1) from the barrel (3) by pulling it off gently.
2. Remove the nib/front piece (2) by turning the barrel (3) counterclockwise.
3. To fill the pen with ink, choose the option below that best suits your preference.

#### Option 1 CONVERTER (4)

- a. Insert the converter (4) into the nib/front piece (2). Turn the top of the converter (4) counterclockwise until the plunger is advanced all the way.
- b. Dip the nib/front piece (2) down in the Faber-Castell ink bottle (6) and turn the top of the converter (4) clockwise to draw the ink up into the reservoir. Wipe excess ink from the nib/front piece (2) with a soft, clean paper towel or cloth.

#### Option 2 CARTRIDGE (5)

- a. Insert the smaller end of a Faber-Castell ink cartridge (5) into the nib/front piece (2). Push the cartridge (5) in until you hear a slight "pop." This sound means the cartridge (5) has been opened. With a couple of gentle shakes, the ink will flow to the feed of the nib/front piece (2).

4. Return the nib/front piece (2) to the barrel (3) by turning the barrel (3) clockwise and begin writing.
5. When not in use, return the cap (1) to the barrel (3) by pushing it on to the barrel (3) gently until you hear it click closed. Store horizontally or with the nib/front piece (2) in an upright position.

### REFILLS

- ● ● ●  
 Ink Bottle: #148701 Blue, #148700 Black (62.5ml)  
 #149854 Black, #149855 Turquoise, #149856 Pink (30ml)  
 Ink Cartridge: #185506 Blue, #185507 Black, #185508 Pink, #185509 Turquoise (0.86ml) Box of 6  
 Converter: #148785

Faber-Castell USA, Inc. • 9450 Allen Drive, Suite B • Cleveland, OH 44125  
 800-311-8684 • [penrepair@fabercastell.com](mailto:penrepair@fabercastell.com)  
 Monday – Friday 9 a.m. – 5 p.m. EST